





user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

30.03.2020, ID: 424348 (V2)

Table of contents

1	General information	. 4
	1.1 Further information	
	1.2 Notational conventions	
	1.3 Symbols and signal words	
2	Safety instructions	8
3	Features	13
4	Installation	14
	4.1 Tips on handling speakers	
5	Connections and controls	16
6	Technical specifications	19
7	Plug and connection assignment	22
8	Protecting the environment	25

th•mann

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under <u>www.thomann.de</u>.



1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.	
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.	
Online guides	Our online guides provide detailed information on technical basics and terms.	
Personal consultation	For personal consultation please contact our technical hotline.	
Service	If you have any problems with the device the customer service will gladly assist you.	

DSP 18 Sub

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics. **Examples:** [VOLUME] control, [Mono] button.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.



Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.

DSP 18 Sub



2 Safety instructions

Intended use

This device is designed for sound reinforcement. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

th•mann MUSIC IS OUR PASSION



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord). Do not modify the mains cable. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.

DSP 18 Sub





CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.

thomann MUSIC IS OUR PASSION

NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

DSP 18 Sub



NOTICE!

Possible damage due to installation of a wrong fuse

The use of different types of fuses can cause serious damage to the unit. Fire hazard!

Only fuses of the same type may be used.



3 Features

The device is characterized by the following features:

- 18" woofer
- Class D amplifier
- Built-in sound processor
- Connection options: XLR connections for signal in and outputs (L+R, and crossover)
- Phase switch
- Switchable Low-Pass filter 90/120 Hz
- Pole mount (M20)
- Two carrying handles
- Casing made of medium-density fibreboard (MDF)
- Powder-coated front grille

th•mann

4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



CAUTION!

Risk of injury due to heavy weight

Due to the heavy weight of the device, at least two persons are required for transport and installation.



NOTICE!

Possible property damage by magnetic fields

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

4.1 Tips on handling speakers


We recommend you to set up the speakers in a way, that the sound signals can reach the audience unobstructedly. It will often be helpful to mount the speakers on tripods. Thus, the sound will be evenly spread with maximum range throughout the audience area.

Always use high grade cable to connect your equipment. Otherwise you won't reach maximum sound quality.

If you notice distortion during operation, the active speaker is overloaded. This may permanently damage the device. Always reduce the volume as soon as you hear distortion.

ALISIC IS OLID PASSION

5 Connections and controls

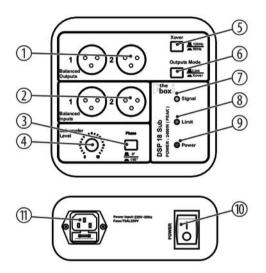



Balanced line signal outputs, designed as XLR chassis plug. Balanced linputs] Balanced line signal inputs, designed as XLR chassis socket. Balanced line signal inputs, designed as XLR chassis socket. If necessary, this switch shifts the phase of the subwoofer signal by 180°. This avoids unwanted cancellatio combination with other speakers. If subwoofer Level] Volume control. If Xover]	
 Balanced line signal inputs, designed as XLR chassis socket. [Phase] If necessary, this switch shifts the phase of the subwoofer signal by 180°. This avoids unwanted cancellation combination with other speakers. [Subwoofer Level] Volume control. 	
 3 [Phase] If necessary, this switch shifts the phase of the subwoofer signal by 180°. This avoids unwanted cancellatio combination with other speakers. 4 [Subwoofer Level] Volume control. 	
 If necessary, this switch shifts the phase of the subwoofer signal by 180°. This avoids unwanted cancellatio combination with other speakers. <i>[Subwoofer Level]</i> Volume control. 	
 combination with other speakers. 4 [Subwoofer Level] Volume control. 	
Volume control.	effects in
5 [Xover]	
Crossover frequency switch Toggles between 90 Hz and 120 Hz.	
6 [Outputs Mode]	
This switch is used when using active speaker boxes. In <i>[Link]</i> position, all signals from 20 Hz to 20 kHz are o the speaker boxes. If the switch is in <i>[Xover]</i> position, only signals above 90 Hz/120 Hz are output to the spe boxes.	itout to

thomann MUSIC IS OUR PASSION

[Signal]
LED (green): Indicates that the input signal is present.
[Limit]
LED (red): Indicates overload. In this case, the level of the line input signal is too high.
[Power]
LED (blue): Indicates that operating voltage is present.
[POWER]
Mains switch. Turns the device on and off.
IEC chassis plug with fuse for the power supply.



6 Technical specifications

Speaker	1 × 18" woofer	
Input connections	Voltage supply	IEC chassis plug C14
	Line signal	2 × XLR chassis socket
Input impedance	22 kΩ	
Output connections	Line signal	2 × XLR chassis plug
Output power	RMS: 800 W	
	Peak: 2400 W	
Frequency range	30 Hz 150 Hz	
Crossover frequency	80 Hz or 120 Hz	
Signal-to-noise ratio	70 dB	
Sound pressure level (SPL), max.	128 dB	
Power consumption	980 W	

th.mann


Supply voltage	230 V ~ 50 Hz	
Fuse	5 mm \times 20 mm, 5 A, 250 V, slow-blow	
Dimensions (W \times H \times D)	610 mm × 680 mm × 745 mm	
Weight	39 kg	
Ambient conditions	Temperature range	0 °C40 °C
	Relative humidity	50 %, non-condensing

Further information

Design	Bass reflex
Truss-capable	No
Stand mounting	Yes
Casters	No



Frequency response

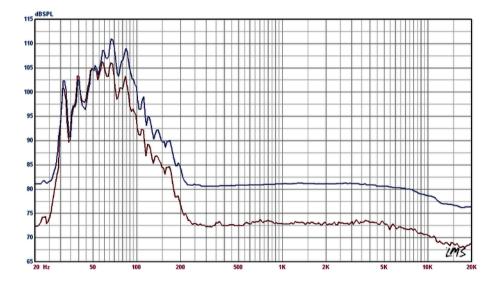




7 Plug and connection assignment

Introduction	This chapter will help you select the right cables and plugs to connect your valuable equip- ment in such a way that a perfect sound experience is ensured.
	Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!
Balanced and unbalanced trans- mission	Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is trans- mitted through the core.
	Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.
	In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conduc- tors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.



Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

XLR plug (balanced)

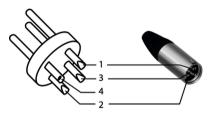


2 3

	Ground, shielding
2	Signal (in phase, +)
;	Signal (out of phase, –)
ļ.	Shielding on plug housing (option)

DSP 18 Sub



XLR plug (unbalanced)

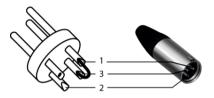

1	Ground, shielding
2	Signal
3	Bridged to pin 1



8 Protecting the environment

Disposal of the packaging material



Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.





Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de