



passive speaker



user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

08.02.2019, ID: 443975, 443978 (V2)

Table of contents

1	General information	4
	1.1 Further information	
	1.2 Notational conventions	
	1.3 Symbols and signal words	6
2	Safety instructions	9
3	Features	11
4	Installation	
	4.1 Tips on handling speakers	
	4.2 Connections	16
5	Technical specifications	18
6	Plug and connection assignment	20
7	Protecting the environment	21

MCX4

th•mann

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under <u>www.thomann.de</u>.



1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

MCX4

th.mann

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics. **Examples:** [VOLUME] control, [Mono] button.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.



Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.

MCX4

thomann MUSIC IS OUR PASSION

Warning signs	Type of danger
	Warning – suspended load.
	Warning – danger zone.



2 Safety instructions

Intended use

This device is designed for sound reinforcement. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.





CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.

th•mann MUSIC IS OUR PASSION

3 Features

Special features of this multifunctional passive 4" coaxial speaker:

- Connection: 2 × Speaker-Twist
- Splashproof speaker diaphragms
- Delivery incl. wall mount and tilt foot bar
- Housing material: Aluminium continuous casting, powder-coated
- Colour: black (item no. 443975) or white (item no. 443978)

th•mann

4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



DANGER!

Electric shock caused by high voltages at the power amplifier output

The output voltages of modern high-performance amplifiers may result in death or serious injury.

Never touch the bare ends of loudspeaker cables when the amplifier is on.

th•mann MUSIC IS OUR PASSION



WARNING!

Risk of injury caused by falling objects

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



NOTICE!

Possible property damage by magnetic fields

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

MCX4





NOTICE!

Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.



4.1 Tips on handling speakers

We recommend you to set up the speakers in a way, that the sound signals can reach the audience unobstructedly. It will often be helpful to mount the speakers on tripods. Thus, the sound will be evenly spread with maximum range throughout the audience area.

Always use high grade cable to connect your equipment. Otherwise you won't reach maximum sound quality.


For optimum results both impedance and power handling of the speakers must match the requirements of the amplifier. Always follow the technical specifications of the speakers! The overall impedance of the connected loudspeakers must not deceed the minimum output impedance of the amp. The amps max. RMS output power should be 50 % above the power handling capacity of the connected speakers.

If you notice distortion during operation, either the amp or the speaker is overloaded. This may permanently damage the amp or the speaker. Always reduce the volume when you hear distortion.

MCX4

ALISIC IS OLID PASSION

4.2 Connections

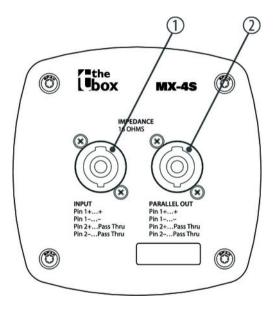



1	[INPUT]
	Speaker Twist input for connecting an amplifier
2	[PARALLEL OUT]
	Speaker Twist output for transmitting signals to another speaker box



5 Technical specifications

	MCX4 Black (item no. 443975)	MCX4 White (item no. 443978)
Speaker	1×4 " coaxial speaker	
	$1 \times \mbox{compression}$ tweeter with $1^{\prime\prime}$ voice coil	
Input connections	Speaker Twist	
Output connections	Speaker Twist	
Frequency range	120 Hz 20 kHz	
Recommended high pass filter for max- imum power with minimum distortions	120 Hz, 24 dB/oct.	
Power handling	40 W (RMS)	
Sensitivity (1 W/1 m)	102 dB	
Nominal impedance	16 Ω	
Dispersion angle $(H \times V)$	90° × 60°	

th • mann MUSIC IS OUR PASSION

	MCX4 Black (item no. 443975)	MCX4 White (item no. 443978)
Colour	Black	White
Dimensions (W \times H \times D)	$170 \text{ mm} \times 120 \text{ mm} \times 120 \text{ mm}$	
Weight	2.2 kg	

MCX4



 
6 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!


Speaker Twist chassis connector



mann

JUSIC IS OUR PASSION

1, +	Signal 1 (in phase)
1, –	Signal 1 (out of phase)
2, +	Signal 2 (in phase)
2, –	Signal 2 (out of phase)

 

7 Protecting the environment

Disposal of the packaging material



Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de