

Millenium

BS-2010 speaker stand



Musikhaus Thomann

Thomann GmbH

Hans-Thomann-Straße 1

96138 Burgebrach

Germany

Telephone: +49 (0) 9546 9223-0

E-mail: info@thomann.de

Internet: www.thomann.de

27.07.2015, ID: 320824

Table of contents

1	General information	. 4
	1.1 Further information	. 5
	1.2 Notational conventions	. 6
	1.3 Symbols and signal words	. 6
2	/	
3		
4	Operating	
5	Technical specifications	
6	Protecting the environment	

1 General information

This manual contains important instructions for the safe operation of the product. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the product. If you sell the unit, please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.



1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Instructions

The individual steps of an instruction are numbered consecutively. The result of a step is indented and highlighted by an arrow.

Example:

- **1.** Switch on the device.
- **2.** Press [Auto].
 - ⇒ Automatic operation is started.
- **3.** Switch off the device.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.



Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
<u>^</u>	Warning – danger zone.



2 Safety notes

Intended use

This speaker stand is used for stable fixing and height-adjustable installation of loudspeaker cabinets. Use the product only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This product may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this product only if they are supervised or instructed by a person who is responsible for their safety.



Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.



CAUTION!

Danger of tipping when transported under load

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.





CAUTION!

Danger of tipping on unsuitable surfaces

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



CAUTION!

Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.



3 Features

Special characteristics:

- Steel speaker stand
- Extendible up to a height of about 2 m
- Centric load capacity up to 30 kg
- 25 mm pipe diameter at the pole mount
- Including adapter from 25 mm diameter to M6 thread (12 mm long)
- Foot diameter 1000 mm
- Transport length when folded: 1.19 m



4 Operating

Unpack and check carefully there is no transportation damage before using the product. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



CAUTION!

Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.





CAUTION!

Danger of tipping on unsuitable surfaces

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



CAUTION!

Danger of tipping when transported under load

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.





NOTICE!

Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.



Setting up



Follow the steps described below:

- 1. Unfold the feet of the tripod until the cross braces are in a horizontal position.
- 2. Fix this position with the safety screw on the slider to which the three feet are attached.
- **3.** Pull out the safety cotter and loosen the locking screw on the extension tube.
- **4.** Pull out the extension tube to the desired height and slide the safety cotter through the corresponding grid hole.
- **5.** Fix the position of the extension tube with the safety bolt on the extension tube.
- Flange the speaker box on top of the extension tube. For this purpose, use the adapter supplied with the tripod, if necessary. The weight of the speaker box to be set up must not exceed the maximum centric load of 30 kg.



Dismounting

- **1.** Remove the speaker box.
- **2.** Pull out the safety cotter and hold the extension tube while you loosen the locking screw on the extension tube.
- Slide the extension tube all the way down and slide the safety cotter through the corresponding grid hole.
- **4.** Fix the position of the extension tube with the safety bolt on the extension tube.
- **5.** Loosen the safety screw on the slider to which the three feet are attached.
- **6.** ▶ Fold up the feet of the tripod.



5 Technical specifications

Permitted centric loadability	30 kg
Minimum support height	119 cm
Maximum support height	200 cm
Tripod flange	25 mm diameter
Weight	2.6 kg
Transport length when folded	119 cm
Colour	Black

6 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



