

qMI - quad MIDI interface



Introduction

Patch your VCO, VCF and VCA, add a few envelopes and LFOs and your modular synthesizer system is ready to go. Now, connect your MIDI/CV-interface and start playing. This is great, however, there may be some or even lots of unused modules left in your frame, not being used for this patch. You may have useful applications for these but how to address them?

Analogue modular systems are mainly used monophonically. Therefore, almost all MIDI/CV-modules are limited to monophonic output. On the other hand, the bigger the modular system, the more possibilities to address modules are needed.

We have developed the **qMI – quad MIDI interface** for exactly this scenario. Whether you need four independent patches, layering of sounds, a rotating voice assignment or even a polyphonic sound – the **qMI – quad MIDI interface** will help you, getting the most out of your modular system.

The VERMONA-team

Erlbach/Vogtland, Germany

Important Safety Information

1. Read these instructions.
2. Keep these instructions. Always include these instructions when passing the product on to third parties.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Only clean the product when it is not connected to the mains power supply. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.
18. The mains plug of the power supply cord shall remain readily accessible.

Installation

- Ensure that the room in which you use this product is wired in accordance with the local electrical code and checked by a qualified inspector.
- Only use this product indoors.
- Do not install the product in hot, humid, or excessively dusty locations, in direct sunlight or in locations where it is exposed to externally generated vibrations.
- Do not place burning objects (e.g. candles) on top of or near the product.
- If condensation has formed on the product, e.g. because it was moved from a cold environment to a warm one, allow the product to acclimatize to room temperature before using it.
- Do not overload wall outlets and extension cables as this may result in fire and electric shock.

Table of Contents

1 Introduction.....	2
2 Important Safety Information.....	2
3 Table of Contents	4
4 Getting Started.....	6
4.1. Setup	6
5 General	8
5.1. Connections and Controls	9
5.1.1. (1) MIDI–input (MIDI IN)	10
5.1.2. (2) Rotary–switch (1 – 16).....	10
5.1.3. (3) EDIT push–button	10
5.1.4. (4) MIDI CH push–button	10
5.1.5. (5) PLAYMODE selector	10
5.1.6. (6) CV/Gate channel push–buttons (1, 2, 3, 4)	10
5.1.7. (7) GATE outputs 1–4	10
5.1.8. (8) Key–CV outputs 1–4 (1V/OCT)	11
5.1.9. (9) / (10) Control voltage outputs 1–4 (CV1 / CV2).....	11
5.1.10. (11) RESET output.....	11
5.1.11. (12) Clock division outputs (1/4, 1/8, 1/16, 1/8T)	11
5.1.12. Circuit board jumpers (CV / GATE)	12
6 Utilization	13
6.1. Setting the MIDI–Channels.....	13
6.2. Connecting the Gate– and Key–CV–Outputs	13
6.3. PLAYMODE	15
6.3.1. Monophonic playmode 1 (M1)	15
6.3.2. Monophonic playmode 2 (M2)	16
6.3.3. Polyphonic playmode (POLY)	16
6.4. Control voltage outputs (CV1 / CV2)	17
6.5. Clock division outputs (1/4, 1/8, 1/16, 1/8T)	19
6.6. Reset–output (RESET)	19
6.7. System settings (OTHER)	20

7 Declaration of Conformity.....22

Getting Started

To ensure top quality, we carefully inspected the **qMI – quad MIDI interface** before packaging. Nevertheless, the module could have been damaged during transportation. Therefore, we ask you to take a serious look at the instrument when unpacking. Do not hesitate to contact us, should there be anything unusual with the unit or its packaging.

You should find the following items in the box:


- 1 **qMI – quad MIDI interface**
- 1 system connection chord (16pin, compatible to Doepfer's A100)
- 4 rack mounting screws 3 x 6mm and 4 washers
- this manual

Setup

The **qMI – quad MIDI interface** was designed to work in modular synthesizer systems using the common euro rack format. Its power supply, connectors and dimensions match the specifications of Doepfer's A100 modular synthesizer system and compatible units. To mount the module into your system's frame, carry out the following steps:

1. Switch off the power supply. For safety reasons, also remove the detachable power cable from your frame.
2. Connect the supplied ribbon cable to the **qMI – quad MIDI interface's** rear. The corresponding plug socket is protected against reverse polarity. The ribbon cable will only fit in one direction.
3. Connect the ribbon cable's other side to an empty plug-socket of your frame's system bus. Make sure that the color coded side of the cable points downwards. (see picture "**Connecting the qMI to the system-bus**" on page 7)

ATTENTION Connecting the ribbon cable with reverse polarity may lead to damage of your module when powering the system

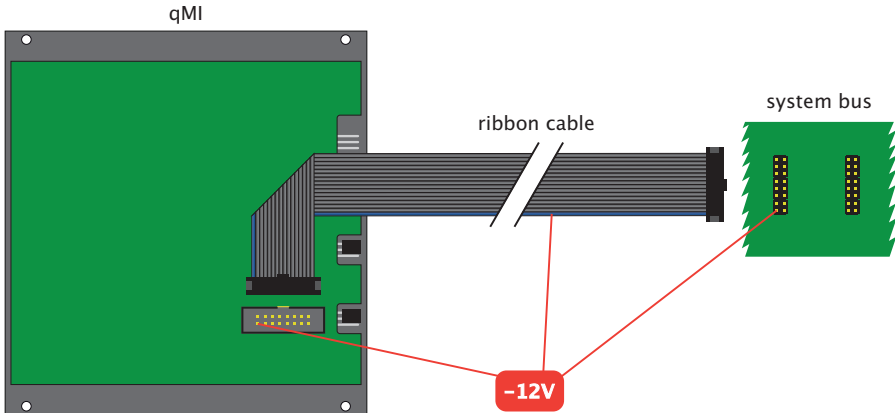

Picture 1: Connecting the qMI to the systembus

4. Mount the **qMI – quad MIDI interface** to your modular frame. The unit requires a width of 24 HP (horizontal pitch) and is rack-mounted with the four supplied screws.

NOTE

To protect the unit's surface of scratches, use the 3 mm flat plastic washers that come with your module.

5. Reconnect the power chord to your frame and switch on the power supply. The module is now ready to work. Press the MIDI CH– or EDIT push-button to verify if the **qMI – quad MIDI interface** is correctly supplied with power. If so, pressing the push-button will turn a green LED on. Press again to leave this menu.


NOTE

In difference to many other CV/MIDI interfaces for modular synthesizer systems, the **qMI – quad MIDI interface** does not need an additional 5 volts adapter for the system bus.

To find out how to connect the **qMI – quad MIDI interface** to your other modules in your system, read the following sections.

General

The **qMI – quad MIDI Interface** is a MIDI to CV converter. It transforms MIDI-notes, MIDI-controller-data and clock signals into analogue voltages and gate signals. The module offers four channels (referred to as CV/Gate channels) with individual CV- and gate outputs for note outputs. In addition, the module offers two CV-outputs per channel to control variable parameters – independently or in combination. This makes the conversion of monophonic and polyphonic MIDI-sequences with additional use of MIDI-controllers possible with your modular synthesizer system.

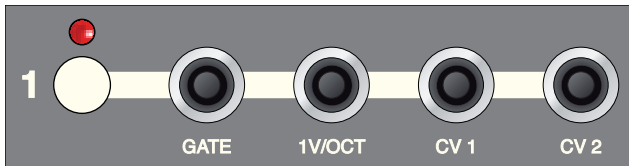

Picture 2: CV/Gate channel of the qMI - quad MIDI Interface

The CV-output for pitches follow the established standard of 1 volt per octave. All current oscillator modules and most vintage synthesizers should support this conversion scheme.


The gate connector provides 10 volts output with positive polarity. Again, this voltage is accepted by almost all modules at their gate inputs, e.g. envelopes, switches, reset-inputs of LFOs, start/stop inputs of sequencers etc. Clock and reset-outputs also provide 10 volts with positive polarity.

CV outputs 1 and 2 provide continuous control voltages between 0 and 5 volts, deriving from different MIDI-controllers.

Connections and Controls

The **qMI – quad MIDI interface** offers its MIDI input with all corresponding control elements to the left. The module's right section provides four output jacks for the four channels. These carry the analogue control voltages having been converted from the MIDI input. From here, you connect to your system's modules.

The **qMI – quad MIDI interface** processes MIDI-notes, velocity, pitch bend commands, a choice of MIDI-controllers as well as MIDI-clock. All these signals are converted into analogue CV-, gate- and clock-signals. All 16 MIDI-channels are recognized. Notes and controllers of up to four different MIDI-channels can be converted independently.

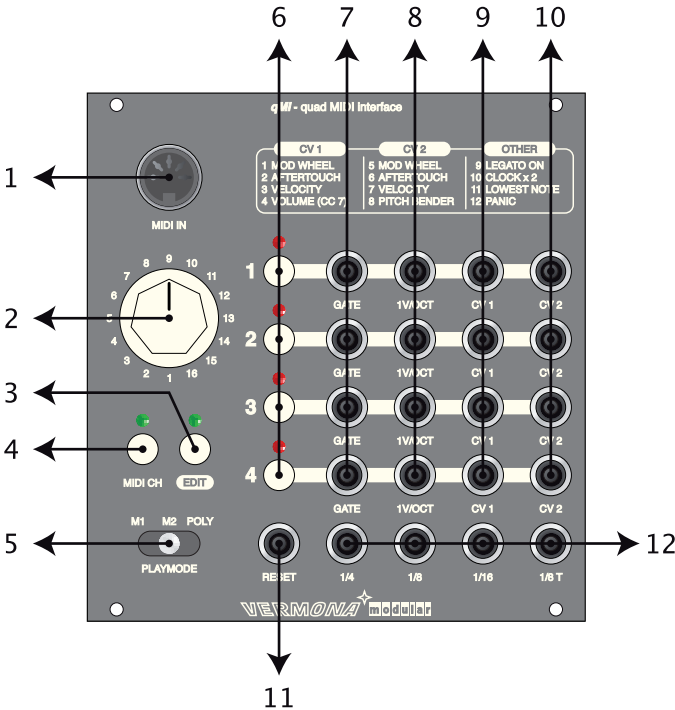

Picture 3: Controls and Connectors of the qMI - quad MIDI Interface

(1) MIDI-input (MIDI IN)

The MIDI-input will receive data from a keyboard's, hardware-sequencer's or from a DAW's MIDI-output. Use a standard MIDI cable for connection (5-pin DIN).

(2) Rotary-switch (1 - 16)

This 16-position-rotary-switch works in combination with the MIDI CH (3) and EDIT (4) push-buttons. Here, you carry out assignments for MIDI-channels and MIDI-controllers.

(3) EDIT push-button

This push-button works in combination with the rotary-switch (2). It allows assignment of MIDI-controllers to CV1- and CV2-outputs (9 and 10) of the four CV/Gate channels as well as further system settings.

(4) MIDI CH push-button

This push-button works in combination with the rotary-switch (2). It allows assignment of one or more MIDI-channels to the four CV/Gate output channels.

(5) PLAYMODE selector

This switch selects the playmode. Available are one polyphonic (POLY) and two monophonic (M1, M2) modes. Find detailed descriptions of the playmodes in section "**PLAYMODE**" on page 15.

(6) CV/Gate channel push-buttons (1, 2, 3, 4)

These push-buttons serve to assign MIDI-channels and edit-functions to the four CV/Gate channels. Before any assignment is possible, you need to enter the MIDI- or edit-menu. The corresponding red LEDs above the CV/Gate push-buttons display current as well as existing assignments. Please also read sections "**Setting the MIDI-Channels**" on page 13 and "**Control voltage outputs (CV1 / CV2)**" on page 17.

(7) GATE outputs 1-4

These connectors output gate-signals that equal the note lengths received at the MIDI-input. Gate-voltage is 10 volts with positive polarity. For use, please refer to section "**Connecting the Gate- and Key-CV-Outputs**" on page 13.

(8) Key-CV outputs 1-4 (1V/OCT)

The connectors output control voltages that equal the note pitches received at the MIDI-input. Key-CV voltage ranges from 0 to 5 volts following a conversion scheme of 1 volt per octave. For use, please refer to section "**Connecting the Gate- and Key-CV-Outputs**" on page 13.

(9) / (10) Control voltage outputs 1-4 (CV1 / CV2)

These connectors output continuously variable control voltages ranging between 0 and 5 volts. These control-voltages derive from different assignable MIDI-controllers. For use, please refer to section "**Control voltage outputs (CV1 / CV2)**" on page 17.

(11) RESET output


The reset-output interprets the status of a MIDI-sequencer. With the reception of a stop-command, a permanent voltage of +10 volts is being output. With the reception of MIDI-start or continue-command, the output's voltage is set to 0 volt. For use, please refer to section "**Reset-output (RESET)**" on page 19.

(12) Clock division outputs (1/4, 1/8, 1/16, 1/8T)

These four connectors output clock-signals deriving from a received MIDI-clock of a connected sequencer. Each output carries a different clock divided signal. Clock impulses are sent with 10 volts and positive polarity. For use, please refer to section "**Clock division outputs (1/4, 1/8, 1/16, 1/8T)**" on page 19.

Circuit board jumpers (CV / GATE)

Two plug-in-jumpers to the side of the module's circuit board can be used to send key-CV- and gate voltages of CV/Gate channel 1 to the system bus. With the plug-in-jumper set next to the CV/GATE label, the connection to the system bus is active. This way, front panel cable connections for this function are no longer necessary with the receiving modules being mounted on the same bus circuit board (resp. a CV/Gate connection has been made across several bus circuit boards). With the jumper set next to the OFF label, the connection to the system bus is inactive.

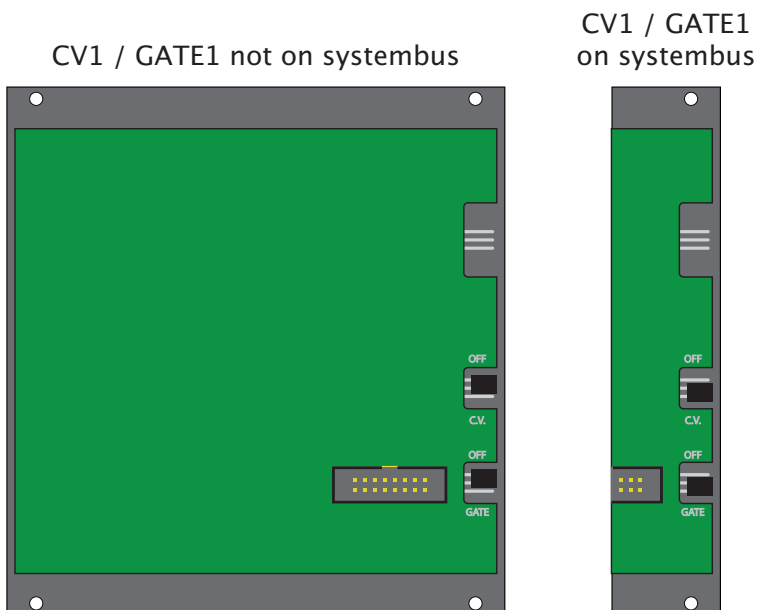

Picture 4: Jumper settings for CV1 and Gate

NOTE

A distribution of key-CV- and gate-signals across the system bus is useful where multiple oscillators and envelopes are present. Here, the internal signal distribution replaces the need for multiples. Unfortunately, not all oscillators support system bus distribution. If this is the case, key-CV has to be patched the usual way.

Utilization

Setting the MIDI-Channels

1. Press MIDI CH (4), the corresponding green LED will be lit.
2. Select the MIDI-channel (1–16) using the rotary-switch (2).
3. Press one or multiple push-buttons (6) to select the CV/Gate channels to be addressed from the selected MIDI-channel. The corresponding red LEDs will be lit.
4. To assign another channel, select another MIDI-channel using the rotary-switch (2) and press one or more CV/Gate channel push-buttons (6) consecutively.
5. Press MIDI CH (3) once more to exit channel assignment mode. The green LED will turn off. The assignments are automatically stored and kept even with the modular system being switched off.

Connecting the Gate- and Key-CV-Outputs

Once the MIDI-channels are assigned, the **qMI – quad MIDI interface** is ready to play. However, you will need to assign the key-CV- and gate-outputs to their targets.

For example, a simple synthesizer patch is build out of a VCO, a VCF and a VCA. The filter's cutoff-frequency and the VCA are controlled by an envelope generator. The first connection is the assignment of key-CV to the oscillator (VCO). Patch a cable from the module's corresponding 1V/OCT output to the VCO's CV-input. Many oscillators offer more than a single CV-input. The input to handle key-CV often has a different labeling, depending on the manufacturer, e.g. CV1, 1V/Oct-In or Main-CV.

When using multiple VCOs, the key-CV needs to be distributed. You may use the system bus to transfer key-CV to the oscillators if using channel 1 of the **qMI – quad MIDI interface**. Unfortunately, not all oscillators support this handy feature. Please consult the respective documentations. In case, bus-CV is not supported, key-CV has to be distributed using a multiple. Note that using multiples may cause a loss of signal quality which may result in pitch corruption. Here, we recommend using buffered multiples.

NOTE

Key-CV may also be used to modulate the filter's cutoff frequency. This function is referred to as key tracking or key follow. Here, the filter will open in relation to incoming pitch. Only few filter modules will support Bus-CV. Usually, a patch chord connection is required. To adjust the intensity of the key tracking function, we recommend using a CV-input with attenuator.

The **qMI – quad MIDI interface**'s gate signal triggers the envelope which controls the VCA. If your patch requires two or more envelope generators, e.g. for separate filter control or the VCO's pulse width, the gate signal needs to be distributed to trigger all envelopes simultaneously. This is either done via channel 1 across the system bus or by using a multiple. There is no need for buffered multiples when duplicating gate-signals.

NOTE

When playing monophonic patches using the **qMI – quad MIDI interface**, no multiples are needed to distribute key-CVs to up to four oscillators. The same goes for the gate-signals for up to four envelope generators. With all CV/Gate-channels set to the same MIDI-channel, every output will carry the same note values and the **qMI – quad MIDI interface** itself acts as a distributor.

PLAYMODE

The PLAYMODE switch determines in what way incoming MIDI-notes are distributed to the CV/Gate channels. Playmode is a global setting for the **qMI – quad MIDI interface**. Naturally, you won't be able to play a three-note-chord by assigning just two CV/Gate channels to a MIDI-channel.

Playmode can be switched while playing a sequence. This will sometime result in interesting effects.

Monophonic playmode 1 (M1)

With this PLAYMODE enabled, all combined CV/Gate channels set to the same MIDI-channel are played in parallel. Key-CV and gate outs transfer the same pitches and note lengths. In addition, M1 is the standard mode for individual, uncombined channels. This mode won't allow for rotating or polyphonic voice assignments.

With channels 1, 2 and 3 being combined on MIDI-channel 1 and channel 4 reacting to MIDI-channel 2, channel 4 will still be played independently in M1-mode, disregarding the selected PLAYMODE which may have been set to M2 or POLY.

NOTE

To distribute identical key-CV- and gate-signals to multiple oscillators and envelopes, you may also use multiples. Here, only a single CV/Gate-channel is needed. Mode M1 is best suited for independent sequences. It allows playing up to four independent melodies, arpeggios or sequences simultaneously. Equally, it is possible to trigger four individual drum modules using the gate outputs, e.g. from MFB or Analogue Solutions.

Monophonic playmode 2 (M2)

This PLAYMODE is monophonic, too. Here, the combined CV/Gate channels are not addressed in parallel but one after another. The first MIDI-note will trigger e.g. channel 1, the next channel 2 and so on...

Mode M2 offers multiple possibilities. Control multiple patches with identical settings but spread the "voices" across the stereo panorama. The result will be a rhythmical jumping stereo-sound, well suited for fast sequences and arpeggios.

With oscillators, filters and modulators being set differently on all participating channels and maybe even spread across the stereo image, a sequence can drastically change its sound when changing between modes M1 and M2. Although, the same notes are used, mode M2 will give the impression of (up to) four new sequences, due to our ear separating the different sounds from each other. Using an odd number of notes per beat will further increase this effect. Try to change between modes M1 and M2 frequently to discover new melodies!

Although it is tempting to use all four channels for voice rotation, notice that also two channels will still allow for interesting possibilities due to constant changes.

Arpeggio-like mini-sequences in mode M2 can be achieved by using different oscillator tunings for all four channels. Start your sequence by playing the same MIDI-note and adjust the oscillators. The mini-sequence is a result of the voice rotation. Changing the MIDI-note will "transpose the arpeggio".

Polyphonic playmode (POLY)

This playmode allows all combined channels to be played polyphonically. This way, your modular synthesizer system can be played with up to four-voice polyphony. The advantage of polyphony in a modular synthesizer system is the possibility to adjust all voices' sounds individually. Even slight variations of oscillator- and filter-settings will clearly enhance the liveliness in a chord.

For example: With the **qMI – quad MIDI interface** being configured to four-voice polyphony and four received notes held, the fifth received MIDI-note will replace the oldest (longest held) note.

Polyphony in modular synthesizer systems always comes at expenses. All modules in a patch need to be available in appropriate numbers. For example, even a simple patch will require four VCOs, four filters, four VCAs and eight envelope generators. Also, a corresponding mixer and multiples have to be available. More complex patches will, of course, lead to more complex module configurations. An alternative solution could be the use of modules that combine multiple functions in a single unit, such as Doepfer's A-111-5 or Cwejman's VM-1. Both offer a complete synthesizer voice in a unit that only needs to be assigned to key-CV/GATE. Analogue Solutions also offers SY02 and SY03 modules that each combine a filter and a VCA. Finally, there are modules available that offer two or four identical functions in a single space-saving unit, such as four envelope generators, LFOs or VCAs.

Control voltage outputs (CV1 / CV2)

In addition to the outputs for key-CV and gate, each of the **qMI – quad MIDI interface**'s four channels offers two control voltage outputs. These outputs provide CV-signals with up to 5 volts. The control voltages provided here derive from incoming MIDI-controller signals. Each CV-output can be assigned to one of four possible MIDI-controllers.

For output CV1 select between:

1	MOD WHEEL (MIDI-CC# 1)
2	AFTERTOUCH
3	VELOCITY
4	VOLUME (MIDI-CC# 7)

For output CV2 select between:

5	MOD WHEEL (MIDI-CC# 1)
6	AFTERTOUCH
7	VELOCITY
8	PITCH BEND

NOTE

With PITCH BEND being selected for CV2, the voltage range changes to -2.5 to + 2.5 volts. With all other controllers selected, the output voltage range is 0-5 volts.

Some CV-inputs of certain manufacturers work with larger voltage ranges (e.g. 10 volts). Although, these inputs can be addressed through the **qMI – quad MIDI interface**, they may not be controlled across their complete range. The CV1 and CV2 outputs can be modified to 10V output. Please contact us should this be necessary for you.

To assign a MIDI-controller to a CV-output, carry out the following steps:

1. Press EDIT (4). The corresponding green LED will be lit.
2. Select the desired MIDI-controller using the rotary-switch (2). Positions 1 to 4 specify output CV1; positions 5 to 8 output CV2 (see upper right label printing on the module)
3. Select one or more CV/Gate-channels (6) to respond to the selected MIDI-controller. The corresponding red LEDs will be lit.
4. To assign further MIDI-controllers, select the desired position using the rotary-switch (2), followed by pressing the respective CV/Gate-channels (6).
5. Press EDIT again to exit this mode. The green LED will turn off. The assignments are automatically stored and kept even with the modular system being switched off.

It is completely dependent on the patch connections, which functions are controlled by the CV-outputs. In principle, each CV-input is a suitable target: a filter's cutoff frequency, its resonance, a VCO's pulse width, LFO-speed, envelope times, wave shaping parameters, a phaser's rate etc.

Clock division outputs (1/4, 1/8, 1/16, 1/8T)

The clock division outputs deliver a periodical signal that derives from an incoming MIDI-clock. The voltage of the clock-impulses is set to 10 volts. Output 1/16 equals the general tempo of the song at 16th resolution, the common clock-grid of analogue sequencers. The other three outputs provide variations of this grid. This is advantageous when using more than a single clock-receiver simultaneously and allows creating shifted rhythms and tempos.

Not only classic analogue sequencers can be used as clock receivers. You may also address switches, electronic sequential switches, logic modules, LFO reset inputs, envelopes etc.

NOTE

For complete control of an analogue sequencer, you will also need separate signals for start and stop functions. Although the **qMI – quad MIDI interface** does not offer proprietary outputs for these functions, you may use gate outputs instead. Here, start- and stop command will need to be triggered by MIDI-notes. Some sequencers toggle between start and stop functions on a single input. In this case, only a single gate-output of the **qMI – quad MIDI interface** is needed.

Reset-output (RESET)

The reset-output interprets MIDI-real-time-commands for start, continue and stop. With the module receiving a MIDI-stop-command, the reset-output is set to provide +10 volts permanently. MIDI-commands for start and continue set the output's voltage to 0 volt.

If you have already patched your analogue sequencer with the clock-output and gate signals for start/stop, the reset-output will complete your remote control. Consult your sequencer's manual to find out if the reset function follows the principles described above.

NOTE

The reset-output is not suited for a specific function that may be known as a reset of an LFO's waveform start. Here, common gate signals are needed.

System settings (OTHER)

The edit-menu allows configuring four additional settings. While the legato function can be set for any of the four CV/Gate channels, all other three settings are global.

LEGATO

This function affects a CV/Gate channel's gate output. With legato enabled, notes being played tied (i.e. a second note is played while the first note is still held), won't trigger a new gate-signal. As a result, a controlled envelope will not be restarted – a behavior often preferred for lead-sounds.

NOTE

Try the legato-function with a filtered or synced sound for a modulating envelope generator. For the CV/Gate channel addressing pitch and the VCA envelope, leave legato disabled. Now, use a second CV/Gate channel, set to the same MIDI-channel and activate legato. Use the gate output to trigger the filter's modulation envelope. This envelope will only be triggered with notes being played separated (untied), while the VCA will always be triggered with every note played. You may also trigger the synced oscillator's modulation envelope for a similar effect.

CLOCK x 2

With this function enabled, all four clock outputs send a clock-signal with doubled speed.

LOWEST NOTE

This parameter specifies the lowest MIDI-note for the **qMI – quad MIDI interface** to react to. This setting is essential for the resulting note range because unlike a MIDI-keyboard, the key-CV output is limited to five octaves.

PANIC

This function triggers a global note-off-command on all MIDI-channels and as a result for all corresponding CV/Gate channels. Use this function only, if you experience a problem at the MIDI-input that lead to "hanging" notes that cannot be stopped another way. A possible cause could have been an arrival of too many MIDI-data that have not been able to be processed by the **qMI – quad MIDI interface**. This should happen only in rare cases and under special circumstances. More likely, you may never need to use the panic-function.

To edit the system settings, carry out the following steps:

1. Press EDIT. The corresponding green LED will be lit.
2. Select the desired function using the rotary-switch (9 – 12):
 - 1) LEGATO (9) – To enable the legato function for specific channels, press the corresponding channels' push-buttons. With legato enabled, the corresponding LEDs are lit.
 - 2) CLOCK (10) – To enable clock-speed-doubling, press any of the four channel push-buttons. With this function enabled, all four channel-LEDs will be lit.
 - 3) LOWEST NOTE (11) – When selecting this function, the four channel LEDs will be lit one after another. Now press the MIDI-note on your keyboard to specify the lowest possible note. Subsequently, all channel LEDs will be blinking simultaneously. Confirm your input by pressing any of the channels' push-buttons. With no confirmation, the previous setting will be restored upon exiting the edit-menu.
 - 4) PANIC (12) – With panic selected, all four channel LEDs will blink simultaneously. The function is carried out by pressing any of the channels' push-buttons. All active notes are terminated. Subsequently, all channel LEDs are lit permanently.
3. Press EDIT again to exit this mode. The green LED will turn off.

Declaration of Conformity

We declare under our sole responsibility that this product is in conformity with the following standards or standardization documents in attention of operation conditions and installation arrangements acc. to operating manual:

EN61000-3-2, EN 61000-3-3, EN 55013, EN 55020, EN 60065 according to the provisions of the regulations 2004/108/EG and 2006/95/EG.



HDB electronic GmbH
Badesteig 20
08265 Erlbach
GERMANY

Phone: +49 37422 25 30
Fax: +49 37422 23 97
Email: info@vermona.com
Web: <http://www.vermona.com>