

### Quick Start Guide

This quick start guide contains important information on the safe operation of the product. Read and follow the safety advices and instructions given. Retain the manual for future reference. If you pass the product on to others please include this manual.

### Safety instructions

#### Intended use

This device is intended to be used to control electronic strobe effects devices. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

#### Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke! Never let children unattended use electrical devices.

#### Eye damage caused by high light intensity

To avoid eye damage caused by high light intensity, never look directly into the light source.

#### Where to use the product

Never use the product

- in conditions of extreme temperature or humidity
- in extremely dusty or dirty areas
- at locations where the unit can become wet

#### General handling

- To prevent damage, never use force when handling the product.
- Never immerse the product in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.

### Features

- For all DMX and analog strobes
- Controller provides 10 programmes, Blackout, Single flash, Full on

- Speed and brightness controllable via faders
- Power supply unit included

### Operating

- BLACKOUT** - Blackouts the strobes (standby)
- FULL ON** - All strobes light up at once
- SINGLE FLASH** - All strobes will flash each time you press this button in BLACKOUT mode
- DIMMER** - To adjust the brightness of DMX strobes in a range of 20 % to 100 %
- SPEED** - To adjust the chase speed in AUTO mode
- MODE** - Yellow LED indicates = AUTO mode  
Green LED indicates = Sound-to-Light mode
- CHASE** - Press the ▲▼ buttons to select 10 chase patterns:  
0 = random patterns  
1 = 1234 (100 % brightness)  
2 = 1 → 2 → 3 → 4 → 4 → 3 → 2 → 1  
3 = 1 → 2 → 3 → 4 → 3 → 2 → 1  
4 = 12 → 34 → 24 → 13 → 23 → 14  
5 = 1 → 12 → 123 → 1234 → 123 → 12 → 1 → stop → 4 → 43 → 432 → 4321 → 432 → 43 → 4 → stop  
6 = 1 → 12 → 123 → 1234 → 234 → 34 → 4 → stop → 4 → 43 → 432 → 4321 → 321 → 21 → 1 → stop  
7 = 1 → 3 → 2 → 4 → 3 → 1 → 4 → 2  
8 = 12 → 23 → 34 → 41 → 43 → 43 → 21 → 14  
9 = 12 → 123 → 12 → 1234
- POWER** - Mains switch to turn the unit on / off
- DC Input CH1 - CH4** - Connect the supplied mains power adaptor here  
- Outputs for analog strobes:  
Signal: +12 V  $\equiv$ ; 1/4" phone jack (mono)
- DMX STROBE** - DMX512 output for DMX strobes:  
Channel 1: strobe rate, Channel 2: Brightness



### Technical specifications

- Dimensions (W × H × D): 210 mm × 133 mm × 77 mm
- Weight: 0.8 kg
- Operating voltage: 9 V  $\equiv$  / 500 mA



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. In doubt, consult your local waste disposal facility.