

PRECAUTIONS

WARNING:

This appliance must be earthed. Please check that the supply voltage details given on the rating label (located on the rear panel) are in accordance with your electricity supply.

INSTRUCTIONS FOR USE:

- Plug the mains lead into a suitable power socket.
- Connect your guitar/bass to the input socket of the amplifier
- Turn the volume control to the left position and the EQ controls to the middle.
- Power on the amplifier.
- Adjust the volume level with the equivalent volume control to your desired level.

WARNINGS:

If, after you have followed the instructions outlined above, your amplifier fails to function, please contact your local distributor.

Under no circumstances remove the rear panel of the amplifier.

Electrical appliances must never be used where there is a danger of water splashing or dripping onto the unit.

Your attention is drawn to the instructions printed on the notice attached to the back of the amplifier.

Exposure to extremely high noise level may cause a permanent hear loss. Individuals vary considerably to noise induced hearing loss but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a prolonged time.

Harley Benton


User manual

HB-10G Guitar Amplifier




Contact:
Musikhaus Thomann
Treppendorf 30
96138 Burgebrach - Germany
Phone.: +49-(0)9546-9223-0
Fax: +49-(0)9546-6774
Web: www.thomann.de
E-mail: info@thomann.de

Front Panel:

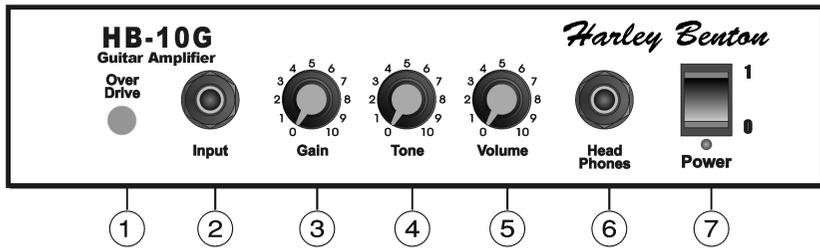

1. Overdrive: This push button switches between the clean and overdrive channel.
2. Input: This is an instrument input for plugging in virtually anything. You may plug in a guitar (bass or lead), keyboard, CD-Player or any other pre-amplified signal.
3. Gain: This is the distortion intensity control for the overdrive channel.
4. Tone: Die Klangregelung beeinflusst den Bereich zwischen 250Hz und 2kHz.
5. Volume: This is the overall level control.
6. Headphones: Inserting a headphone jack will disconnect internal speaker for quiet practicing.
7. Power: Power Switch

Back Panel:

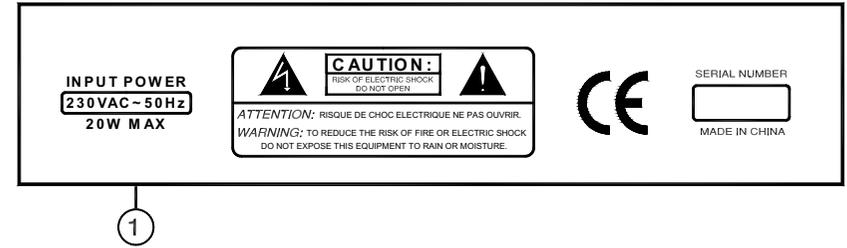

1. AC Line Cord

QUICK SETTINGS

Use the following settings to quickly achieve these popular sounds.

JAZZ	OFF	0	5-6	5
	Drive	Gain	Tone	Volume
COUNTRY	OFF	0	10	5
	Drive	Gain	Tone	Volume
ROCK	ON	2	3-8	4
	Drive	Gain	Tone	Volume
METAL / THRASH	ON	8-10	5-8	2
	Drive	Gain	Tone	Volume

Technical Specifications:

Rated Power	12W RMS @ 4 ohms (Overdrive)
	8W RMS @ 4 ohms (Clean)
Frequency Response	80Hz - 10kHz
THD	0,5% (Clean)
S/N ratio	75dB
Input Impedance	220k Ohm
Power Consumption	20VA (max.)
Maximum Input Level	0.7Vrms
Dimensions (HxWxD)	280mm x 275mm x 150mm
Weight	4,5kg

CAUTION:

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: Chassis surface hot.
WARNING: To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
AVIS: Risque de choc electricque ne pas ouvrir.
ATTENTION: Superficie de chassis chaude.