



SANPERA™ I



SANPERA™ I
Player's Handbook



SANPERA™ I

 
Welcome

Thank you for purchasing the Sanpera™ I foot controller for your VYPYR® amplifier. We are certain you will enjoy having the control of your VYPYR at your feet.



Note:

Your Sanpera™ I is powered by your VYPYR® amplifier and requires the special 8-pin MIDI cable included with your Sanpera in order to function correctly.

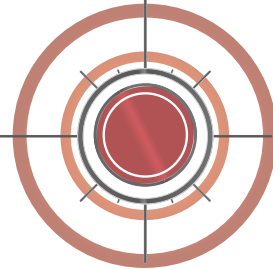



SANPERA™ I

The Sanpera I operates in three modes, **PRESET MODE**, **LOOPER MODE** and **BANK SELECT MODE**. The functions of buttons 1-4 will vary depending on which mode you are in.



PRESET MODE

 
When you first plug your Sanpera I into the amplifier (using the provided 8 pin MIDI cable) the pedal will default to PRESET mode. In this mode buttons 1-4 correspond with the four PRESET buttons on your VYPYR®. Each button allows you to select one of the four presets within the bank (group of four presets) selected on the amplifier. Remember, each VYPYR has 12 onboard presets, which are stored in three BANKS of four labeled A, B and C. To change BANKS using your Sanpera I, please see BANK SELECT mode.

To store your personal amplifier settings and replace one of the onboard presets, simply press and hold the button that corresponds with the location you wish to store the preset.



BANK SELECT MODE

The Sanpera I allows you to access all three BANKS of presets found on your VYPER® amplifier. To enter BANK SELECT mode, press buttons 1 and 2 simultaneously. Three LEDs will illuminate to indicate you are in BANK SELECT mode. Buttons 1, 2 and 3 now function as BANK SELECT buttons and have alternate labeling: BANK A, BANK B and BANK C. One of the three LEDs will be RED, indicating the BANK you currently have selected. To select an alternate bank, press the corresponding button associated with that BANK. After you have pressed the BANK select button the Sanpera will automatically switch to PRESET MODE, allowing you to select a preset within that BANK.

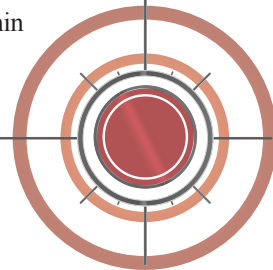



SANPERA™ I



***TIP:** You can change amp presets after you have recorded your loop, allowing you to play a totally different sound on top of the loop!*

LOOPER CONTROLS

 
To enter LOOP mode, press buttons 3 and 4 simultaneously. Upon entering LOOP mode all active LEDs will change from red to green, indicating you are in LOOP mode. In the case, the Stompbox and Delay effects are set to OFF (See Looper controls items 1 and 2), you may not see any active LEDs upon entering LOOP mode.

3. Rec/Play

To record a loop for playback, simply start playing, and when you want to START recording the loop press this button and the amp will begin recording the loop. When you want to STOP recording, press this button again and the looper will stop playing and automatically begin to playback.

4 . Stop/Reset

To stop a loop in process, press this button. To erase the currently stored loop (recorded by pressing button 4) press and hold this button for 3 seconds. The LED above this button will be green if there is a loop currently being stored.

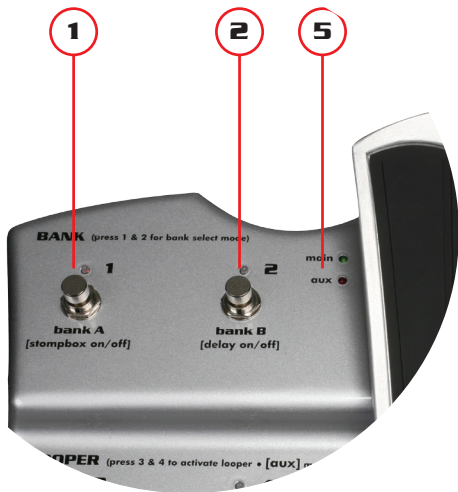


LOOPER CONTROLS

1. Stompbox On/Off

In LOOP mode this button allows you the ability to turn on and off the STOMPBOX selected (if any) on your VYPYR® amplifier. If the corresponding LED is green, the effect is active; if the LED is off, the effect is also off.


2. Delay On/Off

 In LOOP mode this button allows you the ability to turn on and off the DELAY effect (if any) on your VYPYR amplifier. If the corresponding LED is green, the effect is active; if the LED is off, the effect is also off.

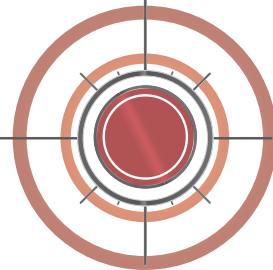



SANPERA™ I

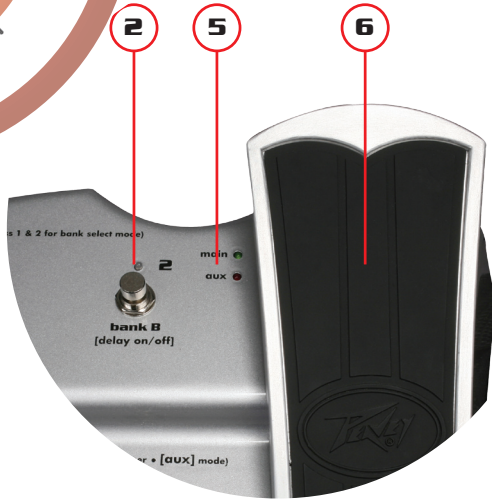 

5. Main/AUX Indication LED

These LEDs indicate whether the pedal is in MAIN mode or AUX MODE. Depress the toe area of the expression pedal to switch between modes. The default setting of the expression pedal is to control the volume of the amplifier. The Main LED indicates that the expression pedal is set to VOLUME, and AUX indicates WAH unless the amplifier is set to PITCH SHIFT.

 
6. Expression Pedal

The default mode of the expression pedal is set to control the volume of the amplifier. When set to AUX this pedal controls a universal Wah. To activate the Wah, simply depress the toe area of the footswitch. When Pitch Shift is selected on the amplifier, this pedal will control the pitch of the signal.



CALIBRATION MODE:

Occasionally it may be necessary to re-calibrate your expression pedal. To enter CALIBRATION MODE hold button 4 and press button 1. Upon entering CALIBRATION mode the LED above button 1 will be green. This green LED indicates that you need to press button 1 after each step of the calibration process. Button 4 will be RED upon entering CALIBRATION mode and allows you to skip steps in the calibration process (normally not necessary). During the first step of the process the lower AUX LED will blink to prompt you to pull the pedal back to its lowest position. With the pedal in its lowest position, press 1 for “next.” The MAIN LED will prompt you to max the pedal to its highest position and press 1 again. Your pedal is now calibrated, turn your amplifier off and on to complete the process.

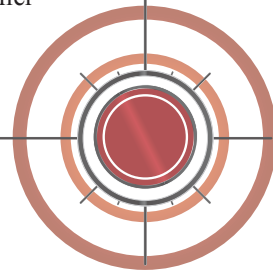



SANPERA™ I

PEAVEY ELECTRONICS CORPORATION LIMITED WARRANTY

EFFECTIVE DATE: SEPTEMBER 5, 2007

What This Warranty Covers

Your Peavey Warranty covers defects in material and workmanship in Peavey products purchased and serviced in the U.S.A. and Canada.

What This Warranty Does Not Cover

The Warranty does not cover: (1) damage caused by accident, misuse, abuse, improper installation or operation, rental, product modification or neglect; (2) damage occurring during shipment; (3) damage caused by repair or service performed by persons not authorized by Peavey; (4) products on which the serial number has been altered, defaced or removed; (5) products not purchased from an Authorized Peavey Dealer.

Who This Warranty Protects

This Warranty protects only the original retail purchaser of the product.

How Long This Warranty Lasts

The Warranty begins on the date of purchase by the original retail purchaser. The duration of the Warranty is as follows:

Product Category	Duration
Guitars/Basses, Amplifiers, Pre-Amplifiers, Mixers, Electronic Crossovers and Equalizers	2 years (+ 3 years)*
Drums	2 years (+ 1 year)*
Enclosures	2 years (+ 3 years)*
Digital Effect Devices	1 year (+ 1 year)*
Microphones	2 years
Speaker Components (incl. speakers, baskets, drivers, diaphragm replacement kits and passive crossovers)	1 year
Tubes and Meters	90 days
Cables	Limited Lifetime

[*Denotes additional warranty period applicable if optional Warranty Registration Card is completed and returned to Peavey by original retail purchaser within 90 days of purchase.]

What Peavey Will Do

We will repair or replace (at Peavey's discretion) products covered by warranty at no charge for labor or materials. If the product or component must be shipped to Peavey for warranty service, the consumer must pay initial shipping charges. If the repairs are covered by warranty, Peavey will pay the return shipping charges.

How To Get Warranty Service

(1) Take the defective item and your sales receipt or other proof of date of purchase to your Authorized Peavey Dealer or Authorized Peavey Service Center.

OR

(2) Ship the defective item, prepaid, to Peavey Electronics Corporation, International Service Center, 412 Highway 11 & 80 East, Meridian, MS 39301. Include a detailed description of the problem, together with a copy of your sales receipt or other proof of date of purchase as evidence of warranty coverage. Also provide a complete return address.

Limitation of Implied Warranties

ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Exclusions of Damages

PEAVEY'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE PRODUCT, AT PEAVEY'S OPTION. IF WE ELECT TO REPLACE THE PRODUCT, THE REPLACEMENT MAY BE A RECONDITIONED UNIT. PEAVEY SHALL NOT BE LIABLE FOR DAMAGES BASED ON INCONVENIENCE, LOSS OF USE, LOST PROFITS, LOST SAVINGS, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE, OR ANY OTHER DAMAGES WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE, EVEN IF PEAVEY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

 
This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you have any questions about this warranty or service received or if you need assistance in locating an Authorized Service Center, please contact the Peavey International Service Center at (601) 483-5365

FEATURES AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.



Logo referenced in Directive 2002/96/EC Annex IV
(OJ/L37/38, 13.02.03 and defined in EN 50419: 2005
The bar is the symbol for marking of new waste and
is applied only to equipment manufactured after
13 August 2005

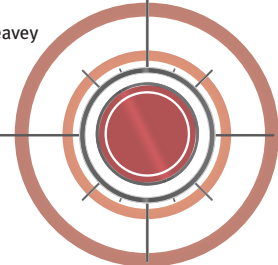



Peavey Electronics Corporation • 5022 Hartley Peavey Drive • Meridian, MS 39305
Phone: (601) 483-5365 • Fax: (601) 486-1278 • www.peavey.com

