



VoiceTone R1

USER'S MANUAL BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUALE D'USO MODE D'EMPLOI ユーチャーマニマリル

Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not install in a confined space. Install in accordance with the manufacturer's instructions.
- 8 Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Only use attachments/accessories specified by the manufacturer.
- 10 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture; does not operate normally, or has been dropped.

Warning!
To reduce the risk of fire or electrical shock, do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

Service
All service must be performed by qualified personnel.

Caution:
You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

EMC/MI
This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC rules.
This equipment is designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and – if not installed and used in accordance with the instructions – may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception – which can be determined by turning the equipment off and on –, the user is encouraged to try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For the customers in Canada:
This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Folgen Sie beim Auswechseln der Batterie den Anweisungen zur Handhabung von Batterien in dieser Bedienungsanleitung.

Precaución!
Para reducir el riesgo de incendios o descargas eléctricas, no permita que este aparato entre en contacto con agua ni con líquidos de ningún tipo. No coloque sobre él ningún objeto que contenga líquidos, como un jarrón, para evitar que se pueda derramar.

• No instale este aparato dentro de un espacio confinado, como encastreado en una librería.

Reparaciones
• Cualquier reparación debe ser realizada únicamente por personal de un servicio técnico oficial.

Atención:
Le advertimos que cualquier cambio o modificación que no sea expresamente autorizada en este manual puede anular su autorización a utilizar este aparato.

A la hora de sustituir la pila, siga cuidadosamente las instrucciones sobre manejo de la misma que aparecen en este manual.

Attention!
• Pour réduire le risque d'incendie ou d'électrocution électrique, ne permettez pas à cet appareil de entrer en contact avec de l'eau ou avec des liquides de quelque nature que ce soit. Ne placez pas dessus d'objets qui peuvent contenir des liquides, comme une vase, pour éviter qu'ils déversent.

• Ne l'installez pas dans un espace confiné, comme dans un placard.

Assistencia
• Cualquier intervención técnica debe ser efectuada solo por personal cualificado.

Cautela:
Si avverte che qualsiasi cambiamento e modifica non esplicitamente approvata in questo manuale può annullare la vostra autorità di utilizzo del dispositivo.

Per sostituire la batteria, seguire attentamente le procedure fornite all'interno di questo manuale.

Attention Danger!
• Pour réduire le risque d'électrocution ou d'incendie, ne pas exposer cet appareil à quelques sources liquides (gouttes d'eau, projections liquides etc.) et veiller à ne pas aucun objet contenant un liquide sur l'appareil.

• Do not install in a confined space.

Service
Confiez toutes les opérations de maintenance à un personnel qualifié.

Attention:

Toute modification apportée à l'appareil et qui n'est pas expressément préconisée dans ce manuel invalide votre droit à utiliser cet appareil.

Lors du remplacement de la pile, suivez attentivement les instructions spécifiées dans ce manuel.

(EN) Introduction

VoiceTone R1 fills out your vocals with pro acoustic spaces from lush halls to tight ambience.

Offering you control over the acoustic environment that surrounds your voice, VoiceTone R1 is the simplest reverb processor you've ever used. We've removed the complexity of setting up vocal reverb leaving you more time to focus on what you do best: sing and perform. It's easy to connect, easy to use and it will help your voice sound great.

- Super-simple operation
- Useful range of 8 styles offer choice without "parameter anxiety".
- "Set and forget" center notch on the mix control defines a factory-set reverb level so you don't have to search for your sound.
- High quality reverb algorithm blends well with your voice and accompaniment.
- Mic Control feature works with optional TC-Helicon MP-75 mic to add "on-mic" effect switching.
- USB connection to computer for easy firmware updates, news and tips via the free VoiceSupport application.
- Balanced XLR in and out with phantom power for condenser microphones.

(DE) Einleitung

Von edel klingenden Sälen bis zum subtilen Ambience-Sound: Das VoiceTone R1 stellt Ihre Stimme in einen angemessenen akustischen Raum.

Und obwohl Sie jederzeit als „Raumgestalter“ die Kontrolle behalten, ist dies wahrscheinlich das am einfachsten zu bedienende Reverb, das Sie je verwendet haben. Denn wir nehmen Ihnen die mühselige Konfiguration ab, so dass Sie auf der Bühne einfach Sie selbst sein können: ein Sänger und Performer in Bestform. Es ist denkbar einfach, dieses Pedal anzuschließen und anzuwenden – und es lässt Ihre Stimme großartig klingen.

- Extrem einfache Anwendung
- Acht praxisorientierte Reverb-Stile ohne „Parameter-Dschungel“
- Kein langes Herumprobieren: Die Mittelposition des Mix-Reglers definiert einen optimalen Reverbpegel
- Erstklassige Reverbalgorithmen schaffen die perfekte Ergänzung zu Ihrer Stimme und der Begleitung
- Mic Control-Funktion: Der Effekt kann mit dem Mikrofon TC-Helicon MP-75 (separat erhältlich) an-/abgeschaltet werden.
- Per USB an Computer anschließen – für einfache Firmware-Updates, News und Tipps mit Hilfe der kostenlosen Software VoiceSupport
- Symmetrischer XLR-Ausgang und -Eingang mit Phantomspeisung für Kondensatormikrofone

(ESP) Introducción

El VoiceTone R1 rebosa sus voces con espacios acústicos profesionales que van desde grandes salones a ambientes de gran brillantez.



Con un completo control sobre el entorno acústico que rodea su voz, el VoiceTone R1 es el procesador de reverb más sencillo que haya usado jamás. Hemos simplificado toda la complejidad del ajuste de la reverberación vocal para que pueda dedicar todo su tiempo en lo que más importa: cantar y actuar. Esta unidad es sencilla de conectar y de usar a lo que su voz suene perfecta.

- Configuración y control super sencillos
- Una amplia gama de 8 estilos para su voz sin "complicaciones de ajustes de parámetros".
- Muesca central de tipo "ajustar y listo" en el control de mezcla que define un nivel de reverb ajustado en fábrica para que no tenga que ir buscando el mejor sonido.
- Algoritmo de reverb de alta calidad que se mezcla a la perfección con su voz y música.
- Función Mic Control que actuala con el micro optional TC-Helicon MP-75 para anadir un efecto de comunicación "on-mic".
- Conexión USB a ordenador para una más fácil actualización de firmware, volcado de novedades y consejos a través de la aplicación gratuita VoiceSupport.
- Entrada y salida en XLR balanceado con alimentación fantasma para micros condensadores.

www.tc-helicon.com - www.youtube.com/tchelicon

www.tc-helicon.com - www.youtube.com/tchelicon

www.tc-helicon.com - www.youtube.com/tchelicon

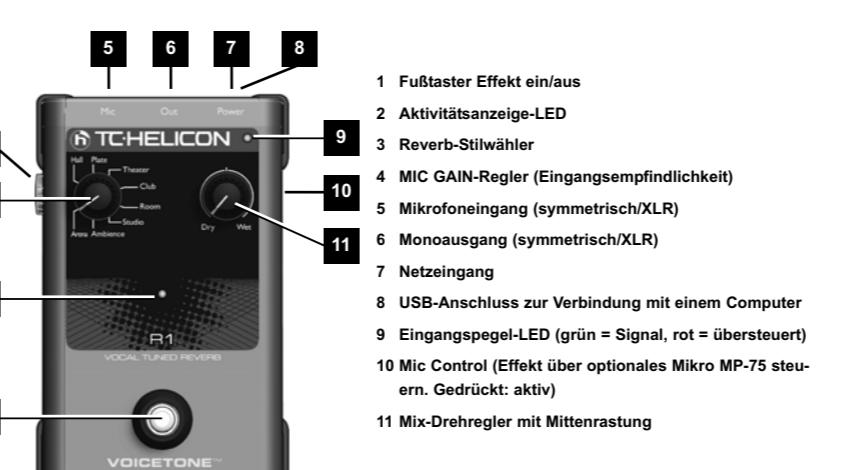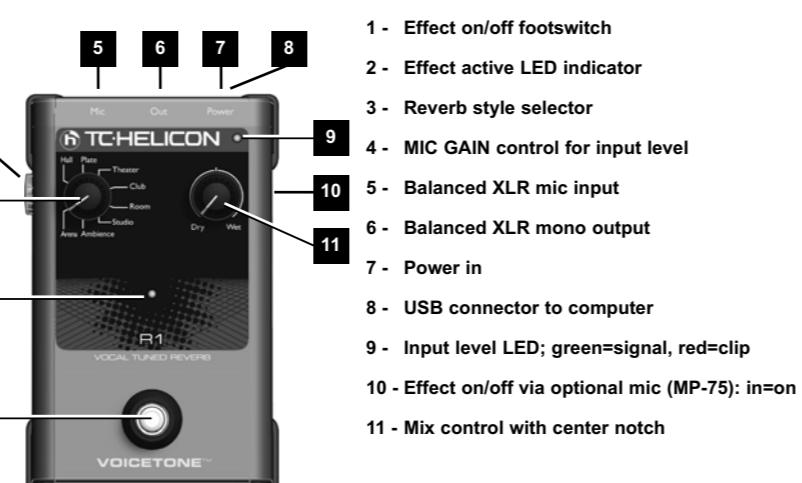

Achtung!
Um das Gefahr eines Feuers oder eines elektrischen Schlagers zu vermeiden, dürfen Sie dieses Gerät keinen tropfenden Wasser oder Spritzwasser aussetzen. Stellen Sie keine mit Flüssigkeiten gefüllten Behältnisse – wie beispielsweise Vasen – auf diesem Gerät ab.

• Montieren Sie das Gerät nicht in einem vollständig geschlossenen Behälter oder Gehäuse.

Wartung
• Alle Wartungsarbeiten müssen von einem hierfür qualifizierten Servicetechniker durchgeführt werden.

Achtung:
Änderungen an diesem Gerät, die im Rahmen dieser Anleitung nicht ausdrücklich zugelassen wurden, können das Erlöschen der Betriebserlaubnis für dieses Gerät zur Folge haben.

Folgen Sie beim Auswechseln der Batterie den Anweisungen zur Handhabung von Batterien in dieser Bedienungsanleitung.

Connecting
MIC jack - Connect your mic here using a balanced XLR cable. Phantom power is always on.

OUT jack - Connect to your PA mixer, another VoiceTone pedal or powered speaker.

Power in - Connect the supplied 12VDC power supply.

USB - Connect to a computer running the TC-Helicon VoiceSupport application for registration, latest version and tips.

First Setup and Use

- Turn down your PA's master volume.
- Connect your mic and PA as shown in the diagram first, then plug in the AC adaptor. For live performance, a USB connection to a computer is not required.
- Set the Reverb style to Hall and the mix control to the center notch.
- Sing into your mic while adjusting the MIC GAIN control so that the input level LED flashes green. Brief flashes of red on the LED on your loudest singing are ok.
- Ensure that the effect is on (center LED is lit).
- Sing while turning up your PA volume to a comfortable level.

You can now sing while you sample the different reverb styles and raise and lower the mix. You're ready to perform!

Phantom Power
There is no switch to enable phantom power on the VoiceTone singles. Phantom power is available when the product is powered. Microphones that don't require phantom power will operate properly. Always apply power as the last connection step and ensure your PA is muted. This will reduce the chance of audio pops that could harm your equipment.

Effect Descriptions

Reverb Styles - The following table offers an overview of the different factory styles.

	Length	Tone	Initial Reflections	PreDelay
Hall	Medium	Medium	Medium	Medium
Plate	Medium	Bright	Low	Medium
Theatre	Medium	Dark	Low	Yes
Club	Short	Medium	High	Short
Room	Short	Bright	High	None
Studio	Short	Medium	Medium	None
Ambience	Shortest	Bright	High	None
Arena	Longest	Medium	Medium	Long

Song tempo can be a useful guide to choosing a reverb style: fast songs are better with short reverb and vice versa. Dark tone is often best with solo singing or ballads while bright tone can sound good with faster tempo and busier instrumentation.

The Dry/Wet (mix) control - Fully left, only your dry lead voice is heard. At the center notch is a factory-set balance of reverb and your voice. Beyond the center notch, reverb level is increased until your dry voice is gradually faded out at the end of its travel.

Using Multiple VoiceTone Single Pedals

It is possible (even encouraged!) to use more than one VoiceTone pedal at a time. You will only need to adjust the MIC GAIN control of the first pedal in the chain. On the rest, MIC GAIN should be set to the minimum (fully left) position.

The order of the pedals is important. See the following table showing 2, 3 and 4 pedal combinations.

2 Pedals D1 > R1 T1 > D1 C1 > D1 3 Pedals T1 > D1 > R1 T1 > C1 > R1 T1 > C1 > D1 4 Pedals T1 > C1 > D1 > R1

The VoiceSupport Application

VoiceSupport is your way of getting the most from your TC-Helicon product, as well as letting your product grow with firmware updates. VoiceSupport includes:

- Access to firmware updates and new features
- Videos, artist profiles, tips & tricks
- Registration of your product

To access the VoiceSupport application:

1. Download VoiceSupport from www.tc-helicon.com/voicesupport.
2. Install VoiceSupport on your computer.
3. Connect your product via USB to your computer.
4. Read the news, click on tabs and browse the features of the application.

Using the Mic Control Feature

Mic Control allows you to turn effects on and off from the optional TC-Helicon MP-75 microphone. Push the MIC CONTROL switch in to allow remote on/off control on any or all pedals in a chain. When Mic Control is not desired, ensure the switch is out. Using multiple pedals requires the control signal pass through feature to be enabled on all but the last pedal. To enable or disable this feature, hold the effect footswitch and the switch on the mic for 3 seconds.

Tips for Avoiding Feedback

- Ensure your monitor and/or PA speakers don't aim directly at the front of your mic
- Sing close to the mic, even touching the grill with your lips
- Try a super-cardioid dynamic mic such as TC-Helicon's MP-70 and MP-75
- Set your PA channel EQ and graphic EQ flat
- Have your band play quieter on stage.

FAQ

Why am I hearing distortion?

Likely the MIC GAIN knob is set too high. Ensure that the Input LED is green most of the time with only brief and rare peaks of red.

Can I use the product as an auxiliary send/return?

Yes. You will need balanced XLR to TRS cables to do so. Ensure that the MIC GAIN knob is set to minimum to accept the line level signal from your mixer.

Will I need a DI box to connect to a mixer?

No.

Why is the product turning the effect on and off by itself?

This can happen when you have the MIC CONTROL knob pushed in and you are connected to a mixer with "pseudo balanced" outputs. Unless you are using only the specific TC-Helicon mic with the Mic Control feature, the MIC CONTROL knob should be out.

