



# Achat 204TZ

full-range-speaker



user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

18.06.2018, ID: 334240

## **Table of contents**

1	General notes	
	1.1 Further information	5
	1.2 Symbols and signal words	6
2	Safety	. 8
3	Features	
4	Installation	11
	4.1 Tips on handling speakers	14
	4.2 Mounting bracket	15
	4.3 Connections and operating elements	16
5	Technical specifications	17
6	Protecting the environment	19



## 1 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.



## 1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.	
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.	
Online guides	Our online guides provide detailed information on technical basics and terms.	
Personal consultation	For personal consultation please contact our technical hotline.	
Service	If you have any problems with the device the customer service will gladly assist you.	



## **1.2** Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
	Warning – high-voltage.
	Warning – suspended load.
	Warning – danger zone.



## 2 Safety

#### Intended use

This device is intended to be used in a sound reinforcement system. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



#### DANGER!

#### Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

th•mann MUSIC IS OUR PASSION



### CAUTION!

#### Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



#### NOTICE!

#### **Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



## 3 Features

Special features of the device:

- Connections: 2 × lockable connections (Speaker Twist)
- 100 V transformer
- Black textured coating
- 3/8" stand thread on the bottom side



## 4 Installation

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



#### DANGER!

#### Electric shock caused by high voltages at the power amplifier output

The output voltages of modern high-performance amplifiers may result in death or serious injury.

Never touch the bare ends of loudspeaker cables when the amplifier is on.







### WARNING!

#### Risk of injury caused by falling objects

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



#### NOTICE!

#### Possible property damage by magnetic fields

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

th•mann MUSIC IS OUR PASSION

### NOTICE!

#### Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.



### 4.1 Tips on handling speakers

We recommend you to set up the speakers in a way, that the sound signals can reach the audience unobstructedly. It will often be helpful to mount the speakers on tripods. Thus, the sound will be evenly spread with maximum range throughout the audience area.

Always use high grade cable to connect your equipment. Otherwise you won't reach maximum sound quality.

For optimum results both impedance and power handling of the speakers must match the requirements of the amplifier. Always follow the technical specifications of the speakers! The overall impedance of the connected loudspeakers must not deceed the minimum output impedance of the amp. The amps max. RMS output power should be 50 % above the power handling capacity of the connected speakers.

If you notice distortion during operation, either the amp or the speaker is overloaded. This may permanently damage the amp or the speaker. Always reduce the volume when you hear distortion.


thomann MUSIC IS OUR PASSION

### 4.2 Mounting bracket

Using the optional mounting brackets (U brackets) for vertical and horizontal mounting, the speaker can stably and securely mounted to the wall, the ceiling or a pipe clamp (half coupler), and, thus, secured to trusses.



### 4.3 Connections and operating elements

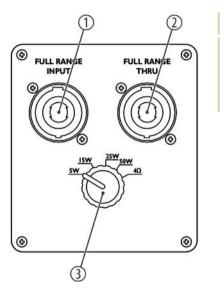

- 1, 2 Lockable connections, wired in parallel (Speaker Twist)
  - 3 Rotary control for adjusting the power (in 100 V ELA systems) and for toggling to 4 ohm operation.

The transformer is bridged in low-impedance operation, the device can then be used with conventional amplifiers, p. ex. in hi-fi devices.

full-range-speaker


th•mann

## 5 Technical specifications

Speaker	$2 \times 4$ " bass, 1" textile dome tweeter
Power handling	60 W / 4 $\Omega$ (RMS), 240 W / 4 $\Omega$ (Peak)
Impedance	4 Ω / 50 W / 25 W / 15 W / 5 W
Maximum SPL	112 dB
Frequency range	76 Hz 20 kHz
Beam angle	90° × 60°
Dimensions (W $\times$ H $\times$ D)	144 mm × 360 mm × 172 mm
Weight	4.1 kg



#### **Frequency response**

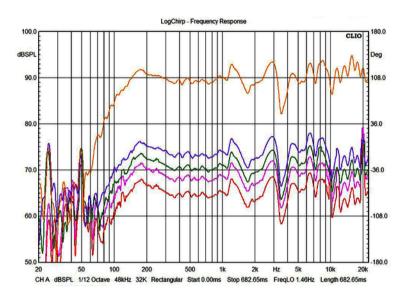

full-range-speaker

th•mann

## 6 Protecting the environment

Disposal of the packaging material



#### Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.









Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de