



User manual

This manual contains important information on the safe operation of the device. Read and follow the safety advices and instructions given. Retain the manual for future reference. If you pass the device on to others please include this manual.

Safety instructions

Intended use

This device is used to transform acoustic signals into radio signals and transmit them. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

Danger for childrer



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the

like) from the unit. They could swallow the pieces and choke! Never let unattended children use electrical devices.

Where to use the product

Never use the product

- in direct sunlight
- in conditions of extreme temperature or humidity

- in extremely dusty or dirty areas
- at locations where the unit can become wet
- near magnetic fields

Interference with other electrical equipment

Using the device near radios or TV sets may cause interference. Then increase the distance between the devices.

General handling

- To prevent damage, never use force when operating the switches and controls.
- Never immerse the appliance in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.


Keep foreign substances from the unit!

Keep the device away from containers with liquids. Should any liquid get into the unit, this could lead to its destruction or fire. Be sure not to let any metal objects into the unit.

Features

- 16 transmission channels selectable
- 3.5 mm mini phone input socket
- Fixed built-in rechargeable lithium polymer battery (3.7 V 1300 mA)
- · Micro USB charging connector
- 11 hours operating time per battery charge

Operating elements

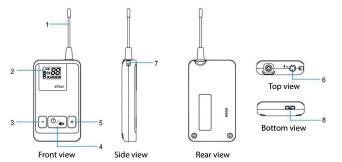

- 1. Antenna
- 2. LCD
- 3. Channel selection / volume down
- 4. On / off switch | calling up setting parameters
- 5. Channel selection / volume up
- 6. Head set connection
- 7. Eyelet for lanyard
- 8. Micro USB charging connector

Using the device

- 1. Use an appropriate USB charging station to charge the device. A full charge of the built-in battery takes about 6 hours.
- 2. Connect the cable from a microphone or line level source to the 3.5 mm mini phone socket (6).
- 3. Keep the on / off button (4) pressed for two seconds to turn the unit on. The display (2) lights up and indicates the current transmission channel.
- 4. To select another channel keep the + / buttons (5, 3) simultaneously pressed for two seconds. The CH indicator flashes on the display and the icon disappears. Use the + / buttons to select the desired channel.
- 5. To confirm the selection, briefly press the on / off button (4) or wait five seconds for the unit to save the new channel automatically. The CH indicator stops flashing and the icon appears again. Make sure that transmitter and receiver are always set to the same transmission channel.
- 6. The volume level is set to 4 ■ ■ by default. 4 levels between ■ ■ (4) and ■ ■ [(4) It (4) It (5), to reduce it press the button (3). Briefly press button 4 to mute the device.

- 7. To change the input sensitivity from 'Mic' (default) to 'Line' keep the button (3) pressed for five seconds until the 📲 symbol flashes.



- The unit turns off during charging. To use it during charging, keep the on / off button (4) pressed for two seconds to turn the unit on.
- 10. The unit automatically turns off after 20 minutes without input signal. To turn the device off manually, keep the on / off button (4) pressed for two seconds.
- 11. The minimum distance between receiver and transmitter is 30 cm.

Technical specifications

NF transmission range: 40 Hz – 18 kHz
Dynamic range: > 80 dB
Modulation: PLL, wideband FM
Carrier frequency range: UHF 500 – 960 MHz
Transmitting power 10 mW

 $\begin{array}{lll} \text{Charging source:} & 5 \text{ V} == \text{micro USB} \\ \text{Charging time:} & < 6 \text{ hours} \\ \text{Dimensions (W} \times \text{H} \times \text{D):} & 40 \times 82.6 \ 12.1 \text{ mm} \\ \text{Weight:} & 47 \text{ g} \\ \end{array}$

For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with

the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.