











Table of Contents

Introduction/Specifications3
Input Module4
Group Module10
Master Module14
Rear Connections & Power Supply19
DSub-25 Connector Pin Out20
Warranty23
Signal Flow Diagrams24
Cautions27
Recall Sheets28

Register your Trident 68 at tridentaudiodevelopments.com/product-registration



Trident 68 Introduction & Specifications



The Series 68 analog consoles have been developed to deliver the core feature set most often needed for analog recording. The 68's are Split/Inline consoles with individual channels in 8-way panels. Using an 8 subgroup configuration and incorporating 6 Aux sends, its routing options are vast and simple to use. Connections are fast and easy with DB-25's throughout the board and XLR's for Master and Main outputs. With a flexible yet powerful 3 band EQ at its core, including selectable channel inserts and monolithic preamps driving the inputs, the Series 68 consoles offer a wide array of summing and mixing options. The sonic quality and compact footprint of the 68's are able to meet any demand.

Trident 68 Specifications

Input Impeda	ance
--------------	------

Microphone: $>2K\Omega$ electronically balanced Line: $>10K\Omega$ electronically balanced

Output Impedance

Left/Right, Monitor O/P, Group & Auxes $<50\Omega$ All other Outputs $<100\Omega$

Frequency Response

Distortion/Noise (T.H.D +Noise) at +15dBu Output

Mic XLR Input to any Output (-20dBu input) <0.003% Line Input to any Output <0.003% Monitor/Tape Return Input to any Output <0.003%

Noise

Mic EIN (20-20KHz, 150Ω source, 60dB gain) <-128 dBu Stereo residual Bus Noise (Output fader at min) <-95 dBu Stereo Bus Noise (40 inputs continually assigned) <-80 dBu (24 Input Mon/Tape Returns, 8 Stereo EFX Returns and 8 Master Tape Returns)

Bus Noise (24 inputs routed equiv. to 72 Inputs) <-75 dBu

Crosstalk

 Adjacent Channel:
 < -90dB (@20KHz)</td>

 <-110dB (@1KHz)</td>

 Channel Fader Mute
 <-100dB (20Hz to 20KHz)</td>

 Monitor/Tape Return Mute
 <-85dB (20Hz to 20KHz)</td>

 Mix/Bus Assign
 <-80dB (20Hz to 20KHz)</td>

 Aux to Aux
 <-75dB (20Hz to 20KHz)</td>

Maximum Input

Mic (XLR) Input (at min gain +10dB) +10dBu Line (at min gain -15dB) +37dBu All Monitor Returns +22dBu All Insert Returns +22dBu

Maximum Output

Mix, Group, Aux, Monitor Outputs +26.5dBu (Into 600Ω) Channel Send/Direct Out +22dBu (Into 2K Ω)

Phase

 Mic Input to Direct Out
 +20° to -1°
 20Hz to 20Khz

 Mic In to Mix Output
 +23° to -12°
 20Hz to 20Khz

 Line In to Mix Output
 +13° to -15°
 20Hz to 20Khz


 Monitor/Tape Return to Mix Output
 +8° to -12°
 20Hz to 20Khz

Trident 68 Dimensions

 Width
 Depth
 Height


 16 Channel:
 33.37" (84.759cm)
 28.750" (73.025cm)
 12.293" (31.224cm)

 24 Channel:
 43.37" (110.159cm)
 28.750" (73.025cm)
 12.293" (31.224cm)

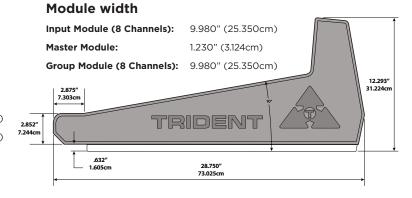

Trident 68 The Input Module



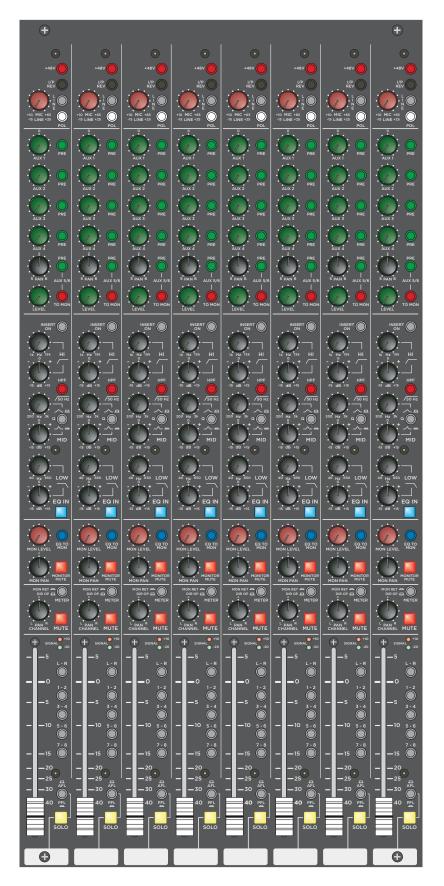

The Trident 68 Input module comprises of 8 equal Input channel strips, housed in a single metal front panel. Each channel offers multiple and flexible options for recording, mixing and monitoring multi-track recordings. Each Input module can easily be removed to from the top side of the console for service and further signal routing options.

The input is designed to accept both mic level and line level signals. It provides the user with a state of the art integrated microphone preamp. A three band Trident EQ is at the core of this console, comprising of variable high/low shelving and variable peaking mids with two bandwidth settings. Monitor Inputs are on every channel with the ability to swap the full EQ from the Input path to the Monitor path.

Access to the channel path is available through the means of a balanced insert located post equalizer, allowing the user to insert an effects device via the standard channel insert and to switch it in and out of the signal path via a top panel switch.

Six Auxiliary sends are provided, four mono and one stereo, each can be switched pre or post the channel fader. Aux 5/6 can also be selected between the channel and monitor path, greatly adding to the flexibility of the module.

Each module incorporates a monitor section which is used to monitor a replay channel from a multitrack recording device. This is in effect a separate signal path which ultimately feeds the master Left/Right main outputs. By switching the channel EQ and Auxiliary sends 5/6 to this path, this becomes an extremely versatile feature of the console. When monitoring the output of a multi-track recording device, it is possible to create a monitor mix with equalisation and reverb effects completely independently from the channel. These effects would also remain when the recording is played back through the same monitor section.

When the module is used for mixing purposes the monitor section functions as an additional line input return to the main Left/Right mix, this input has access to a stereo pair of auxiliary sends. This effectively doubles the number of inputs per input module that are available in mix down mode. This with additional inputs on the master section greatly increases the inputs available, even on the smallest console.

The input channel is provided with a switchable non destructive mono pre fader listen (PFL) and stereo after fader listen (AFL) SOLO system. It is possible then to hear the selected signal in isolation (or mixed with other "soloed" sources) separately in the main monitors, without effecting the main Left/Right mix.

The following gives a brief description of the controls on the Input module.



Trident 68 Input Channel Mic/Line Options



INPUT GAIN

This control adjusts the amount of gain of the signal from either the MIC or LINE (dependant on the LINE switch selection) connected to the associated input on the DSUB connector. For a low impedance balanced microphone plugged into the Channel the gain varies from +10dB min to approximately +65dB. With the Line switch depressed, this then controls the gain of the signal appearing on the associated line inputs. This gain varies between -15dB and +25dB.

POL

When depressed, reverses the electrical input polarity of any microphone or line level input signal selected as the channel source. Use of this control may alter the sound quality of a input relative to other channels when multiple microphones are picking up the same sound.



+48V

When depressed, provides +48 Volt phantom power to the balanced MIC inputs on the associated pins on the DSUB connector. Phantom power is required for operation of many condenser microphones. See your microphone instructions to see if phantom power is required or is to be defeated (some - though few - microphones require phantom power NOT to be activated or they may be damaged).

I/P REV

The Input Reverse switch when depressed flips the Line Input signal and the Monitor Input signals. In effect this switch determines the Line input source that is available to the channel. Combining this with the Line Switch above allows the user to source the channel signal from the associated channel Monitor Return pins of the DSUB connector and to use the full channel strip resources for the Monitor return signal. Alternatively depressing this switch selects the associated Line Input source for the channel Monitor section.

Line

Selects between the Channel Mic preamp signal (UP) or the signal appearing on the associated channel Line Input appearing on the DSUB connector (Down).

Trident 68 Input Channel Aux Sends





Adjusts the mix level of Channel into the Aux 1 bus.

AUX 2 Level Control

Adjusts the mix level of Channel into the Aux 2 bus.

AUX 3 Level Control

Adjusts the mix level of Channel into the Aux 3 bus.

AUX 4 Level Control


Adjusts the mix level of Channel into the Aux 4 bus.

AUX 5-6 PAN Control

Adjusts the balance of the channel signal being fed to Aux 5 bus (CCW) and Aux 6 bus (CW). In the centre (=) position equal signal level is sent to both Aux 5 and Aux 6 buses.

AUX 5-6 Level Control

Adjusts the stereo mix level of Channel into the Aux 5 and Aux 6 buses.

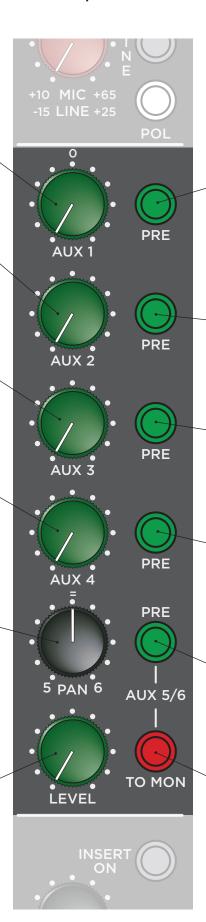

AUX 1 Pre Switch

This switch determines the signal source for Aux 1 bus, between Post (Up) or Pre (Down) Channel fader.

AUX 2 Pre Switch

This switch determines the signal source for Aux 2 bus, between Post (Up) or Pre (Down) Channel fader.

AUX 3 Pre Switch

This switch determines the signal source for Aux 3 bus, between Post (Up) or Pre (Down) Channel fader.

AUX 4 Pre Switch

This switch determines the signal source for Aux 4 bus, between Post (Up) or Pre (Down) Channel fader.

AUX 5-6 Pre Switch

This switch determines the signal source for Aux 5 and Aux 6 buses, between Post (Up) or Pre (Down) channel fader.

AUX 5-6 To Mon

When depressed selects the channel monitor input as the source to the Aux 5 - 6 Level control. In the up position sources the channel signal.





Trident 68 Input Channel Equaliser



Channel Equaliser

A three band Trident EQ with overlapping frequency ranges is provided along with a switchable high pass filter. The HIGH and LOW sections of the equaliser have a shelving response and the MID has a peaking (bell) response with two selectable bandwidth settings.

HIGH Frequency Section

Adjusts the high frequency shelving EQ response. The Level control adjusts the cut/boost between +/- 15dB of the selected "knee" frequency, this frequency is selectable between 1KHz and 15KHz. The centre "O" position of the Level control has a detent to indicate that it is having no effect on the associated channel signal. Cut or boost of the high frequency level control is usually used for minor tonal adjustments.

LOW Frequency Section

Adjusts the low frequency shelving EQ response. The Level control adjusts the cut/boost between +/-15dB of the selected "knee" frequency, this frequency is selectable between 40Hz and 650Hz. The centre "O" position of the Level control has a detent to indicate that it is having no effect on the associated channel signal. Cut or boost of the low frequency level control is usually used for minor tonal adjustments.



INSERT ON

When depressed, this switch places the rear panel channel insert path to the Insert Send and back from the Insert Return in line with the signal path. This insert point by default is after the channel EQ. By routing the signal through this connector, the insert may be used for applications such as an effect that can be switched in/out. In the event the user wants to patch in his/her favourite external EQ, it can be connected with its input fed from the Insert Send and its output feeding the Insert Return, this path being activated with this switch. It could be used in conjunction with or without the Trident EQ.

HPF

When selected this applies a high-pass (or Low- Cut) filter with a corner frequency 50Hz and a roll off rate of 18dB per octave into the signal path. This control is used to remove unwanted signal content below 50Hz. The result is usually improved signal quality of the associated input signal while decreasing the low frequency amplification demand of the audio systems amplifier and speaker combination. Mainly for use with microphones, this helps remove low frequency rumble and handling noise.

MID Frequency Section

Adjusts the mid frequency EQ peaking response. The Frequency control selects the centre frequency of the filter (between 200Hz and 3kHz) and the Level control adjusts the cut/ boost between +/- 15dB. The centre "O" position of the Level control has a detent to indicate that it is having no effect on this frequency band. The bandwidth of this filter is approximately one octave. With the addition of the Q switch, the bandwidth can be reduced to 1/3 octave. The highmid frequency controls are used for minor tonal adjustment.


EQIN

This switch inserts the 3-band EQ and High Pass Filter into the channel/monitor (see EQ TO MON switch description below) signal path. When not in use, it is suggested that the EQ be kept in the OUT position for best phase performance.

•

Trident 68 Input Channel Monitor Section



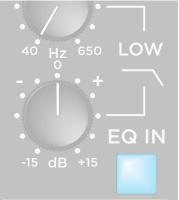

MONITOR LEVEL Control

Adjusts the monitor signal level to the Left/Right bus.

MON PAN (Monitor Pan) Control

This control blends the post monitor level signal between the Left and Right buses. When at the centre, detented position, both Left and Right buses are fed equal amounts of signal (each down by 3dB).


Channel PAN Control

This control blends the channel post-fader/post mute signal between any of the assigned bus pairs (L-R Mix, Group 1-2, Group 3-4, Group 5-6 and Group 7-8) located by the channel fader at the base of the module. When at the centre, detented position, both sides are fed equal amounts of signal (each down by 3dB).







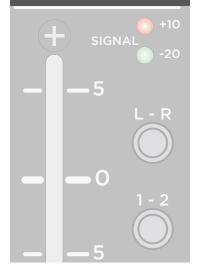

EQ to MON

Assigns the 3 band channel EQ to the Monitor Section, removing it from the channel path.

METER

This button selects the signal that is fed to the relevant channel meter situated on the meter bridge. In the up position the Channel Direct Output feed is displayed.

[The Channel Direct Output can be user defined by a selectable option on the Input module, it can be selected either Channel post fader or Channel Insert Return (signal appearing on associated Channel Insert Return)].

When this button is depressed the channel meter is fed from the signal on the associated Channel MONITOR

In a multi-track studio environment where the Channel Direct Output is fed to the recording device and the output of this device is connected to the MONITOR I/P, it is possible to see on the Channel meter what is sent to or received from the recording device.

MUTE (Channel)

When pressed will mute the assigned outputs of the channel (Group 1-8 and L-R Mix) and all post Aux sends. The Mute does not affect the channel's solo PFL feed, but WILL affect the channel metering in the Meter Bridge, the Direct Output of the channel (if selected as post fader by option on module) and the channel's solo AFL feed (which is post fader and post this mute).





Trident 68 Input Channel Group Assignment



Channel Signal Indicators

+10 - Indicates RED when the channel signal level has reached +14dBu (+10 VU)

-20 - Indicates GREEN when the channel signal level has reached -16dBu (-20 VU)

The channel indicator signal source can be selected pre or post the channel fader through an option available on the input module circuit board.

(Note: Signal headroom available on the input module is +22dBu and when the +10 indicator illuminates the signal level is approaching 6 to 8 dB before clipping when just flashing red with signal peaks).

These are extremely useful features and provide a constant indication that a signal is present in the module (green LED) and that the signal peak is being reached (red LED).


AFL/PFL Select

Selects the channel source feed that will be fed to solo bus when the Channel SOLO is pressed. UP - solo system is fed from the channel post fader/post pan pot point and is a stereo signal that follows the pan pot. This allows the user to monitor the channel in the solo system and to see its contribution to the mix.

Down - solo system is fed from the channel pre fader point and is a mono source. This allows the user to monitor the signal in the solo system before the channel fader/mute, allowing the user to check the signal in the channel without being routed to any output buses.

SOLO

When pressed, routes the channel AFL or PFL (see AFL/PFL Select above) signal to the Solo bus. Additionally this switches the Main Monitor Output (normally fed the Left/Right Mix) to source the signal from the AFL/PFL Master Level in the Master section as well as to trigger LED indicators in the Master section and Meter-Bridge stating a solo has been pressed.

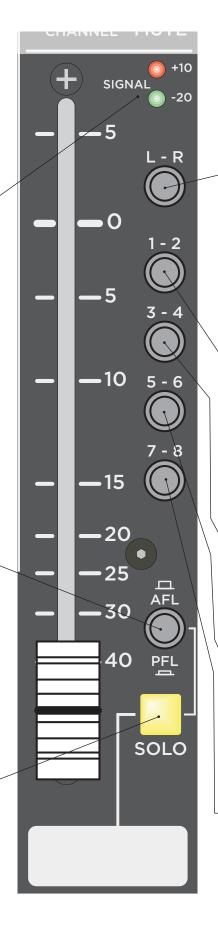

BUS ASSIGNMENTS

Assigns the Channel post-fader signal to the Left and Right mix buses through the Channel Pan Control. With the Channel Pan control in mid position, the signal will be fed to Left and Right busses in equal amounts. If the Channel Pan Control is positioned fully anti-clockwise (left) the channel signal will only feed Left bus and when positioned fully clockwise (right), the signal will only feed Right bus.

Sometimes referenced as the Main mix or Remix bus assignment. In a multi-track studio environment, this L-R assignment and the Channel Monitor Input allow the user to have two separate external inputs (Channel Mic/Line and Monitor return) that can be sent to the Left and Right mix busses, effectively doubling your inputs on mixdown (Remix)

1-2 Group Assignment

Assigns the Channel post-fader signal to the Group 1 and 2 mix buses through the Channel Pan Control. With the Channel Pan control in mid position, the signal will be fed to Group 1 and 2 in equal amounts. If the Channel Pan Control is positioned fully anti-clockwise (left) the channel signal will only feed Group 1 and when positioned fully clockwise (right), the signal will only feed Group 2.

3-4 Group Assignment

Assigns the Channel post-fader signal to Group 3 and 4 mix buses through the Channel Pan Control. Operation is the same as the 1-2 Group assignment.

5-6 Group Assignment

Assigns the Channel post-fader signal to Group 5 and 6 mix buses through the Channel Pan Control. Operation is the same as the 1-2 Group assignment.

7-8 Group Assignment

Assigns the Channel post-fader signal to Group 7 and 8 mix buses through the Channel Pan Control. Operation is the same as the 1-2 Group assignment.

Trident 68 Group Module Section





The Group section of the console greatly enhances the flexibility of the TRIDENT 68 console and provides a number of different functions. There are 8 Group channels provided on the Group Module section of the console, these are mounted on a single panel and each Group strip controlling the associated group mix bus outputs. The groups can be used as audio subgroups for combining and processing a collection of input channels. Each group bus has its own balanced Insert Send/Return and Outputs that feed the associated DSUB connector on the rear Master Connector panel.

The Group module also provides a method of monitoring and panning the group output on the control room speakers. By using these controls it is possible to build up a monitor mix of the recorded tracks and any that are about to be recorded. To enhance this monitor facility Auxiliary sends 5 and 6 are available making it possible to send a headphone mix from the groups together with reverb and effects and since all Auxiliary sends are switchable to Pre the monitor level control, they can be used to create a separate auxiliary mix independent of the monitor level.

Individual monitor source switches (MONITOR RETURN) make it possible to select either the group output or the associated balanced line (Group Monitor Input) into the monitoring system. The 12 segment bargraph metering and Auxiliary sends follow this switch so that they automatically switch according to the position of the MONITOR RETURN switch.

Each of the 8 Group channels is also provided with a SOLO pushbutton. This makes it possible to listen to the signal on any selected Group in isolation and in stereo through the consoles SOLO system. Since the SOLO function is post the Group MONITOR LEVEL control, this makes it possible to solo a number of Group channels and create a balanced mix of the soloed signals.

A separate facility on each Group channel is the inclusion of a stereo Effects Return Section.

Individual inputs are provided on the DSUB connector located on Master Connector panel and are wired in stereo and these feed the Effects Return section on the associated Group channel. This adds the ability to send a signal (from the EFX Return Inputs) with level and pan control to the master Left/Right mix.

The following gives a brief description of the controls on the Group module.




Trident 68 Group Metering Section



12-Segment Bargraph Meter

Displays one of 2 sources as determined by the Monitor Return Switch below (MON SOURCE and AUX TO MTR). The meter is a peak responding meter with a fast attack and slower release. It is very useful when used with complex dynamic waveforms and able to display sharp transient responses and greatly assist the engineer when it comes to avoiding distortion during recording.

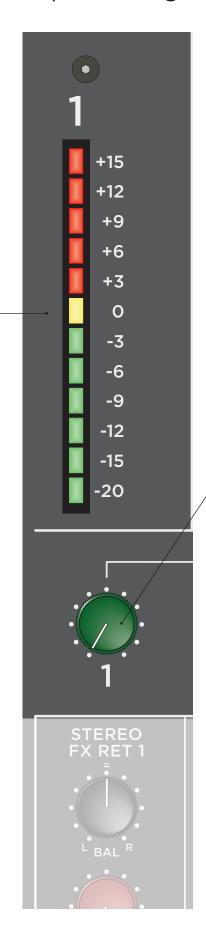

AUX MASTER LEVEL

This control adjusts the Aux bus mix level that appears on the associated Aux Output pins of the DSUB on the rear panel.

NOTE: Since there are only Six Auxiliary sends on this console, this control is not available on Group channel strip 7 and 8.

Trident 68 Group EFX RETURN Section






EFX LEVEL Control


Adjusts the Stereo Effects Return signal level to the Left/Right bus.

EFX RTN MUTE

When pressed will Mute the Effects Return signal to the Left/Right bus. It is recommended when the EFX RTN section is not being used that it be muted.

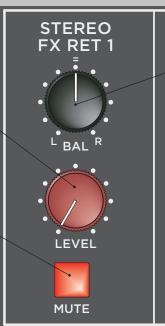



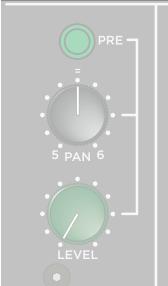

EFX RTN BAL Control

This control blends the stereo EFX post-level/post mute signal between the Left and Right buses. When at the centre detented position, both sides are fed equal amounts of signal (each down by 3dB).

GROUP INSERT ON

When depressed, this switch places the rear panel Group Insert path to the Insert Send and back from the Insert Return in line with the signal path. This insert is directly after the Group mix stage and before the Group Fader and allows the user to connect an external device in series with the Group signal and to be able to switch it in/out from the front panel.





Trident 68 Group Monitor Aux Sends



AUX 5-6 PAN Control

Adjusts the balance of the Monitor signal being fed to Aux 5 bus (CCW) and Aux 6 bus (CW). In the centre (=) position equal signal level is sent to both Aux 5 and Aux 6 buses.

AUX 5-6 Level Control

Adjusts the mix level of the Monitor Input into the Aux 5 and Aux 6 buses.

MONITOR PAN Control

This control blends the Monitor Input post-level/post mute signal between the Left and Right buses. When at the centre detented position, both sides are fed equal amounts of signal (each down by 3dB).

MONITOR RETURN (Source)

This switch determines the signal source to the Group Monitor section; additionally it displays the signal shown on the bargraph meter above. In the UP position the signal fed to the group Monitor section and bargraph meter is the Group output. When depressed (DOWN) the signal fed is derived from the associated rear MONITOR RETURN pins on the DSUB connector on the rear panel.



0

5

AUX 5-6 Pre Switch

This switch determines the signal source for Aux 5 and Aux 6 buses, between Post (Up) or Pre (Down) Monitor Level.

MONITOR LEVEL Control

Adjusts the Monitor input signal level to the Left/Right bus. It is recommended to keep this level at minimum when not in use to avoid unnecessary additional noise source to the Left/ Right buses.

MONITOR SOLO (AFL)

When pressed, routes the Monitor signal (post level and pan) to the Solo bus. Additionally this switches the Main Monitor Output (normally being fed the Left/Right Mix) to source the signal from the AFL/PFL Master Level in the Master section as well as to trigger LED indicators in the Master section and Meter-Bridge stating a solo has been pressed.

GROUP FADER

Controls the associated Group Output level that feeds the balanced outputs on the Master Dsub panel as well as the signal fed to the monitor section when selected as the source.

Trident 68 The Master Module Monitor Section



The Master section of the TRIDENT 68 console contains all of the controls that affect the overall functionality of the console.

An accurately matched 100mm stereo fader controls the level of the master stereo balanced outputs.

A talkback system is provided which incorporates an internal high quality electret microphone. The talkback signal can be routed to the auxiliary buses and the 8 subgroups. When the 'TALK TO GROUPS' button is used, the monitor signal is dimmed to avoid feedback in the control room monitor speakers.


The main monitor system is very comprehensive. The engineer can monitor any one of three stereo playback devices. '2TK 1 RET' and '2TK 2 RET' are conventional analogue connections located on the master connector section so that the playback of a stereo device such as a cd player or output of a computer sound card can be selected to the control room monitor speakers and a 3.5mm TRS mini jack available on the module allows the user to plug in his external portable audio source too (e.g. iPod). The monitor system is provided with a SUM MONO control which combines the left/ right monitor signals so that it is possible to check mono compatibility. It should be noted that the mono facility is purely a monitor function and does not affect the main stereo left/right output which remains as a true stereo image. The addition of a DIM switch allows the user to reduce the signal level fed to his monitors.

Another useful facility in this section is the provision of an alternate monitor outputs (Alt MONITOR) which when switched routes the monitor signal to associated set of output pins on the rear of the master section so that an alternative monitor system can be set up. This makes it possible to listen to the signal on (for example), a different set of monitor speakers so that comparisons can be made.

A headphone jack with a high quality stereo amplifier is provided which allows the engineer to monitor the console only on headphones if required. A separate stereo volume control is provided so that the headphones can be adjusted independently from the main monitor control level.

A stereo master SOLO level control is also provided so that the volume of the AFL/PFL system can be adjusted into the control room monitor speakers. This comes combined with an indicator LED that notifies the user that a console SOLO switch has been pressed and that the AFL/PFL signal is now being fed to the control room monitors.

The following gives a brief description of the controls on the Master module.

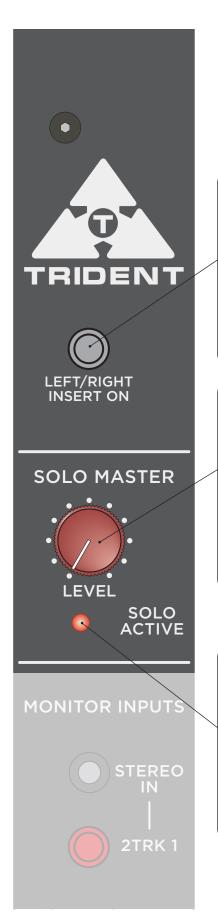

L/R INSERT ON

When depressed, this switch places the rear panel Left and Right Insert paths to the Insert Sends and back from the Insert Returns in line with the signal path. This insert point is directly after the Left/Right mix stage and before the Left/Right stereo Fader and allows the user to connect an external device in series with the Left/Right signal and to be able to switch it in/out from the front panel.

SOLO MASTER LEVEL CONTROL

This control adjusts the level of the solo left/right mix fed to the control room monitors when one or more SOLO switches are selected on the console. This presets the SOLO signal level and enables the engineer to balance the signal levels to the control room monitors from the main mix and the solo mix. Note: Main Left Right meters always show the solo signal pre this level control (and are unaffected by this control).

SOLO ACTIVE LED

When this LED is illuminated, it indicates that one or more SOLO switches have been pressed on the console. The console monitor output is now being fed from the solo left/right mix buses. Additionally the console main Left/Right meters are switched to monitor the solo left/right mix and an additional meter bridge indicator flashes to show the console is in a "SOLO" state.





Trident 68 Master Monitor Section



STEREO IN JACK (3.5mm, 1/8")

This jack allows the engineer to plug in an external stereo signal via a standard 1/8" wire cable (i.e iPod) which can then be selected to the main Control Room Monitors. To assign this signal into the main monitors, the user has to depress the 2-TRK 1 switch.

2-TRK 1


When depressed this selects either the signal from the stereo 2-TRK 1 Return pins of the DSUB (on the rear master connector panel) or the stereo signal plugged in the STEREO IN JACK (above) and feeds it to the control room monitors. The stereo 2-TRK 1 return signal from the rear connector is normalled to the STEREO IN JACK signal and if a signal wire is plugged into the STEREO IN JACK it replaces the signal from the 2-TRK 1 Return from the rear panel and that is the signal that is switched to the main monitors. Note: When this switch is depressed the main Left/Right mix is disconnected from the control room monitors, also if 2-TRK 2 switch is depressed (below) this kills the 2-TRK 1 signal to the control room monitors. For monitoring signals into control room monitors the Priority is SOLO mix → 2-TRK 2 → 2-TRK 1 → Main Left/Right mix.

2-TRK 2

When depressed this selects the signal from the stereo 2-TRK 2 Return pins of the DSUB (on the rear master connector panel) to the control room monitors. This switch has priority over 2-TRK 1 switch above. (see description 2 TRK 1 above)

DIM

When depressed, this reduces the level of the main monitor outputs by approx 30 dB. Note: this has no effect on the main Left/Right outputs of the console.

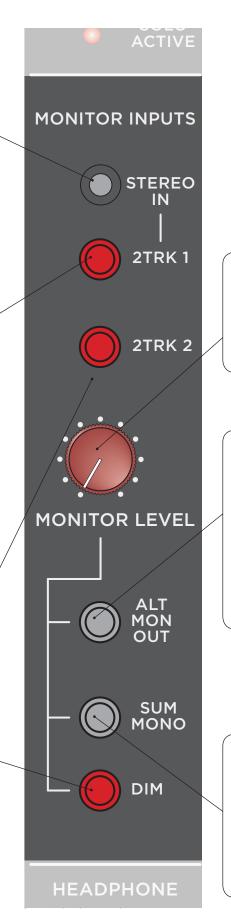

MONITOR LEVEL CONTROL

This control adjusts the level of the stereo signal feeding the control room monitors and Alternate monitor outputs if selected.

ALT MON OUT

When this switch is depressed the main Left/Right Monitor feed is diverted to the ALT MONITOR output pins of the associated DSUB on the rear connector panel. In doing so, the console main Left /Right monitor signal is switched OFF.

This allows the engineer to set up a separate monitor feed (say to another set of monitor speakers) and be able to A/B the systems for comparison.

SUM MONO

Combines the Left and Right signals feeding the control room monitors to produce a summed (L+R) mono signal that feeds both Left and Right monitor outputs. Note: The SUM MONO facility is purely a monitor function and does NOT affect the main stereo Left/Right output which remains as a true stereo image.

Trident 68 Master Talkback Section



HEADPHONE JACK (3.5mm, 1/8")


To monitor the console on headphones the engineer can plug them into this jack. The headphones jack is driven by a dedicated high quality, high current stereo amplifier.

HEADPHONE LEVEL

This control adjusts the level of signal fed to the headphone jack above. The signal fed to the Control Room Monitors also feeds the headphone jack and this Headphone level control can be adjusted independently of the main MONITOR CONTROL LEVEL.

TALKBACK MIC

Directly behind this location is situated the internal high quality electrets microphone.

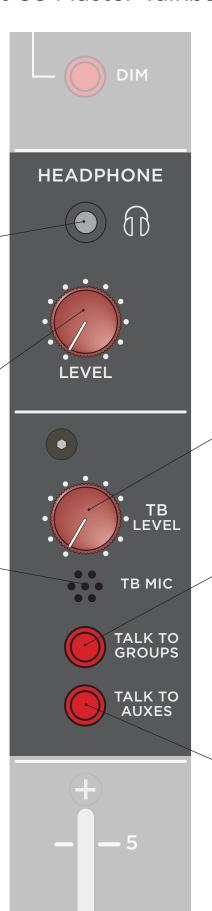

TALKBACK LEVEL CONTROL

This control adjusts the level of the talkback microphone to the talkback destinations below.

TALK TO GROUPS

Momentary switch, which when depressed, assigns the talkback signal (post the talkback LEVEL Control) to the all the group buses. Additionally when depressed the signal to the control room monitor is dimmed (attenuated) by approx 30 dB to avoid a feedback situation in the control room monitor speakers.


TALK TO AUXES

Momentary switch, which when depressed assigns the talkback signal (post the talkback LEVEL Control) to all AUX mix busses.






Trident 68 Rear Connections | Power Supply

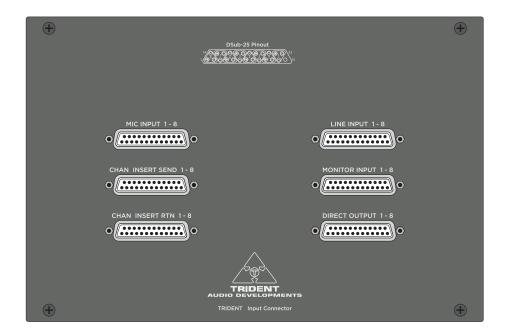


Input Connector

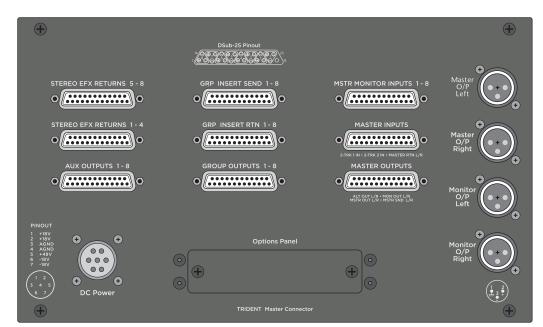

Master Connector


Power Supply

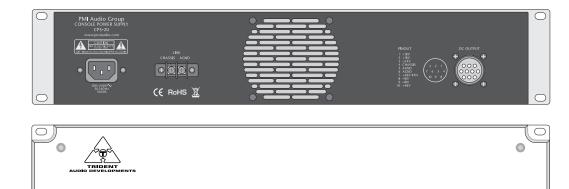


Trident 68 DSub-25 Pin Out



DSub-25 Pinout

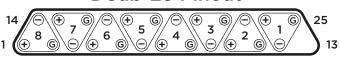

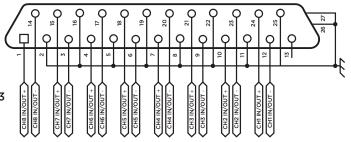

DSub	Position							
	8	7	6	5	4	3	2	1
INPUTS								
Mic Input	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
Channel Send	Send 8	Send 7	Send 6	Send 5	Send 4	Send 3	Send 2	Send 1
Channel Return	Return 8	Return 7	Return 6	Return 5	Return 4	Return 3	Return 2	Return 1
Line Input	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
Monitor Input	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
Direct O/P	O/P 8	O/P 7	O/P 6	O/P 5	O/P 4	O/P 3	O/P 2	O/P 1
	8	7	6	5	4	3	2	1
MASTER								
Stereo EFX Returns 5 - 8	Stereo EFX Ret 8R	Stereo EFX Ret 8L	Stereo EFX Ret7R	Stereo EFX Ret 7R	Stereo EFX Ret7R	Stereo EFX Ret 7R	Stereo EFX Ret 5R	Stereo EFX Ret 5R
Stereo EFX Returns 1 - 4	Stereo EFX Ret 4R	Stereo EFX Ret 4L	Stereo EFX Ret3R	Stereo EFX Ret 3R	Stereo EFX Ret2R	Stereo EFX Ret 2R	Stereo EFX Ret 1R	Stereo EFX Ret 1R
Aux O/Ps	NC	NC	Aux 6	Aux 5	Aux 4	Aux 3	Aux 2	Aux 1
Group Send	Send 8	Send 7	Send 6	Send 5	Send 4	Send 3	Send 2	Send 1
Group Return	Return 8	Return 7	Return 6	Return 5	Return 4	Return 3	Return 2	Return 1
Group O/Ps	O/P 8	O/P 7	O/P 6	O/P 5	O/P 4	O/P 3	O/P 2	O/P 1
Group Monitor Input	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
Master Inputs	Ext Mic Input (for TR 78 only)	Spare	2TRK1 Right	2TRK1 Left	2TRK2 Right	2TRK2 Left	Master Right Return	Master Left Return
Master O/Ps	Alt Out Right	Alt Out Left	Mon Out Right	Mon Out Left	Master Right Out	Master Left Out	Master Right Send	Master Left Send



Trident 68 Warranty Information

Tident Audio Developments Limited Warranty Statement

The following outlines the warranty periods for The Trident 68 Analogue console. All extended coverage is based on the timely registration of said products within the 30 days of purchase to the original purchaser from the date of Proof Of Purchase. Proof of purchase is the original Bill Of Sale or Sales Invoice from an authorized dealer.

Inquire about extended warranty.

Trident Audio Developments is covered by a limited warranty against defects in materials and workmanship (parts and labor) for a period of Two (2) Years from the date the unit is sold to the Dealer or original purchaser only.

Receive an additional free year warranty covering parts and labor with the registration of your console!

Acceptable registration is met by filling out online the warranty registration, along with a copy of the original sales receipt as proof of the original date of purchase. http://www.tridentaudiodevelopments.com/product-registration/

The terms and conditions of this limited warranty are:

- 1. The warranty applies to Trident Audio Developments purchased from Trident Audio or authorized Trident Audio dealers. The authorized dealers of Trident Audio products are listed at each brands websites, or on the main page at www.tridentaudiodevelopments.com
- 2. The warranty covers any defects in materials and workmanship, and is limited to the repair or replacement of the original registered product. In its sole discretion, Trident Audio may either repair or replace the product with a product of the same model, or replace the product with a new model of a similar specification, when the same model is no longer available.
- 3. The warranty does not cover any of the following: damage caused by the user; spillages or moisture damage; neglect, abuse or misuse, including but not limited to the failure to use the products for its normal purpose in accordance with the manufacturer's instructions for use, failure to properly maintain the product in ac-cordance with the manufacturer's instructions, and/or the failure to use the prod-ucts in accordance with the manufacturer's specifications; normal wear and tear; use of products with incompatible or faulty equipment; unauthorized modifications; repairs conducted by unauthorized persons or service center's; the model and/or serial number being altered, removed or made illegible; accidents; or acts of God or any cause beyond the control of Trident Audio. It does not cover damage caused by connecting to improper power voltage supply, cosmetic defects, such as paint finish, and general wear and tear, as well as certain consumables not covered under warranty such as fuses, meter bulbs and component shelf life on pots, faders and switches. Products sold in AS IN condition are not covered.
- 4. The warranty is applicable to the original purchaser throughout the warranty period as stated above or until original owner resells product. If a unit is received for warranty repair, and after complete examination and testing, no problem is found with the unit, customer will be charged for time labor plus return shipping costs, presuming initial user error falsely caused the unit to be determined faulty.
- 5. The warranty does not affect any statutory rights the original purchaser may have in accordance with the law applicable in the jurisdiction where the product was purchased, or any rights the original purchaser may have against the author-ized dealer pursuant to their original purchase agreement. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state, and or country to country.
- 6. Any claim pursuant to this warranty from the date of purchase of any Trident Audio Developments product must be returned, together with the original proof of purchase, to the authorized Trident Audio reseller that sold the product, or to the Trident Audio service center in either the USA or the UK. All returns to Trident Audio, Trident Audio UK or any Trident Audio Service Center must be in the original packing, accompanied by the issued Repair Authorisation, and must be shipped to the address specified on the Return Authorisation via insured freight at the customer's own expense. Factory original packaging can be ordered from Trident Audio, Inc. Customer will be

charged for new factory original packaging if customer fails to ship product to Trident Audio in the original factory packaging. Trident Audio will not pay for express or overnite delivery.

- 7. Once the product has been received, the authorized Trident Audio service center will assess the warranty claim and arrange to either repair or replace in accordance with the warranty procedure prescribed by Trident Audio for their authorized service center network. The warranty replacement will be conducted by the authorized Trident Audio service center as promptly as possible and within a reasonable time from the date of submission of the warranty claim. In all circumstances, a claimant under this warranty will be liable for all costs in delivering their Trident Audio brand product to the authorized service center for war-ranty replacement and for all costs in collecting the repaired/replacement Trident Audio product from that authorized Trident Audio service center may waive the cost of return shipping after full inspection to determine cause of warranty.
- 8. Trident Audio will not accept any warranty replacement without the original proof or purchase of the Trident Audio product, and without the registration of the Trident Audio product within 30 days of purchase by mail, or online. It is the original purchaser's responsibility to keep the original proof or purchase safe at all times, as Trident Audio is not obliged to provide a replacement of the original proof or purchase.
- 9. The warrantor assumes no liability for property damage or any other incidental or consequential damage whatsoever which may result from failure of this product.
- 10. A Trident Audio product that was not purchased through an authorized and legitimate sales channel is considered "Grey Market". Warranties for Trident Audio Products purchased outside the USA will be covered by Trident Audio UK for that specific country or region, or by local Trident Audio distributors. Trident Audio product originally sold to the USA market and consequently resold overseas forfeits its warranty. American Trident Audio Dealers are forbidden to export Trident Audio Products. Non-American deal-ers are forbidden to export to the USA. "Grey Market" purchases are not covered by any warranty. In the case that a Trident Audio Product must be returned, it should be returned to the original place of purchase, or the Trident Audio factory, with proper return authorisation. Returns from outside the USA, customer shall adhere to specific shipping, customs, and commercial invoicing instructions given with the Return Authorisation. Trident Audio will not be responsible for transportation costs or customs fees related to any importation or re-exportation charges whatsoever.
- 11. Trident Audio shall not be liable for damages in excess of the purchase price of the Trident Audio product arising out of the use or inability to use the Trident Audio product insofar as allowed to be disclaimed by law in the jurisdiction where the Trident Audio product was purchased.

Governing Laws

If the purchaser acquired a Trident Series 68 originating from the Trident USA office direct, or through any Authorized US Dealer, then any order or contract to which these terms and conditions apply and all matters arising there under shall be con-strued according to and governed by the Laws of The State of California. If the purchaser acquired a Trident Series 68 originating from the UK office direct, or through any Authorized European Dealer, then any order or contract to which these terms and conditions apply and all matters arising there under shall be con-strued according to and governed by the Laws of England (UK).

For Tech Support and Repair Authorisation, please contact:

US Service & Sales


1845 W. 169th Street Gardena, CA 90247 +1 (310) 323-9050 sales@tridentaudiodevelopments.com

UK Service Only

+44 (0) 1392 826 005 ukservice@tridentaudiodevelopments.com tridentaudiodevelopments.com


Trident 68 Input Module Flow Diagram



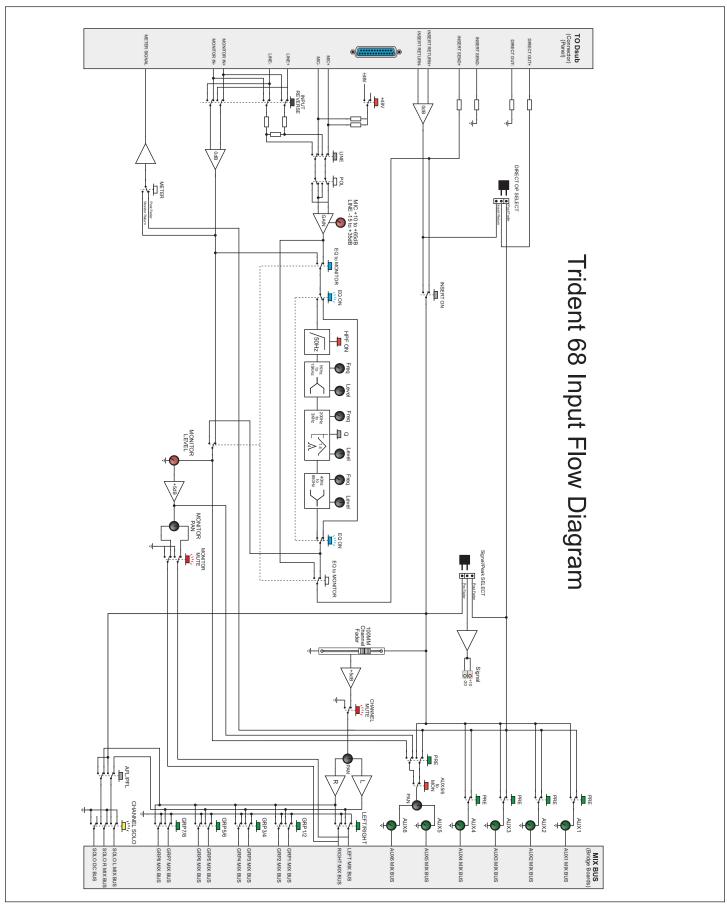




Trident 68 Group Module Flow Diagram

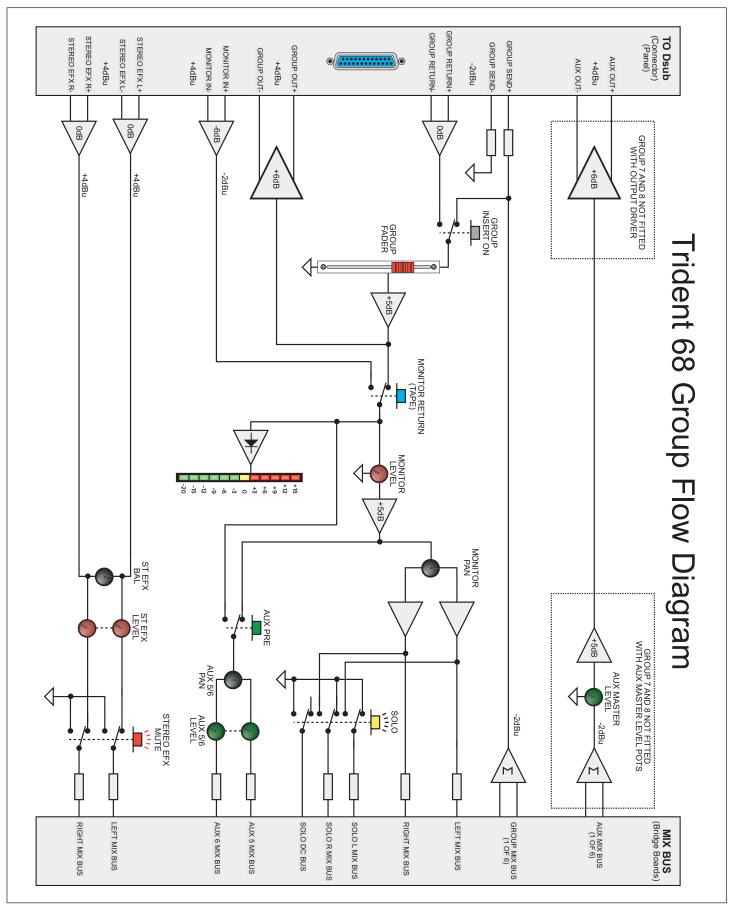

Trident 68 Master Module Flow Diagram



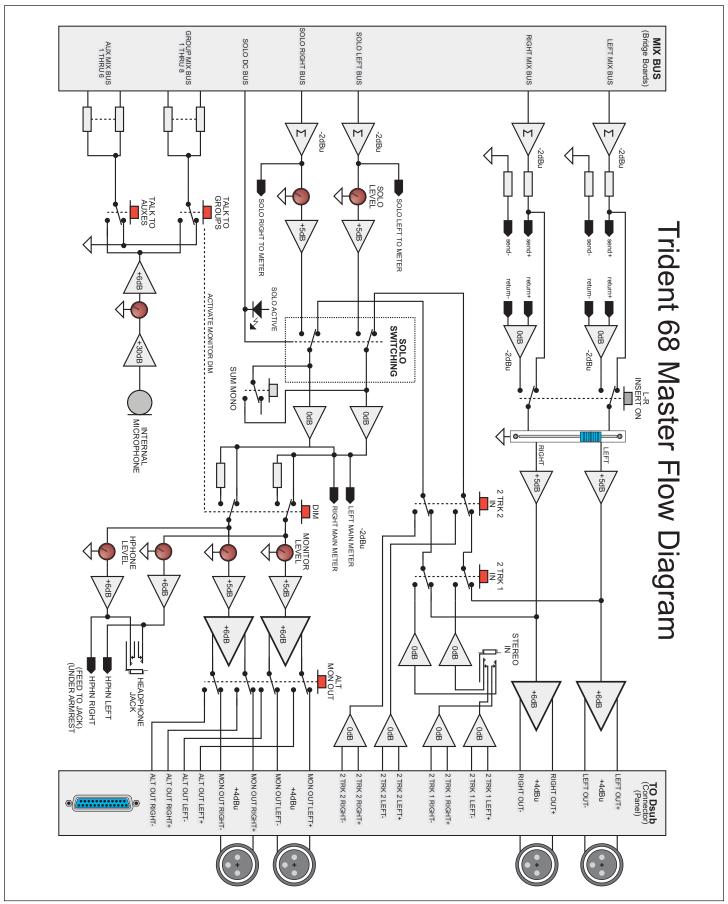



Trident 68 Warning & Policies







CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO-USER SERVICEABLE.



The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important, operating and maintenance (servicing) instructions in the literature accompanying the appliance accordance with manufacturers' instructions.

WARNING: TO AVOID FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPARATUS TO WATEWR, RAIN OR MOISTURE.

NOTE: This apparatus doe snot exceed the Class A/Class B (whichever is applicable) limits for radio noise emissions from digital apparatus as set ou tin the radio interference regulations of the Canadian Department of Communications.

ATTENTION: Le présent apparell numérique n'émet pas de bruits radioélectriques dépassant las limites applicables aux appareils numériques de class A/de class B (selon le cas) prescrites dans le réglement sue le brouillage radioélectrique édicté par les ministere des communications du Canada.

These limits are designed to provide reasonable protection against harmful interference in a commercial/residential installation respectively. This equipment generates, uses, and can reduce radio frequency energy, and, if not installed and use din accordance with the instruction manual, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

If this equipment does not cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by any combination of the following measures,: (1) Relocate or reorient the receiving antenna, (2) Increase the separation between the equipment and the receiver, (3) Plug the equipment into an outlet on a technician for additional assistance.

CAUTION: Changes or modifications to this eqipment not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



STATEMENT OF COMPLIANCE RoHS COMPLIANCE: Trident Audio Developments manufactures complete electronic products which are covered by the European Union's "Removal of Hazardous Substances" directive 2002/95/EC (roHS). This directive seeks to eliminate toxic substances from the manufacturing process, such that when equipment is disposed of at the end of its life cycle, thematerials it contains do not contaminate the environment and pose health risks. Banned substances are

lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE). Lead is used together with tin in solder connections to reduce the melting point of solder. Lead-free solder requires higher soldering temperatures which in turn places greater thermal stress on components.

Trident Audio Developments takes seriously its obligations unde thw RoHS directive and insists that its factoriesuse only components that are certified RoHS compliant, as well as lead-free solder. In a very few cases the necessary components may not yet be available to the world market but we work continuously to eliminate any such exceptions at the earliest opportunity. Our printed circuit boards (PCB's) and all soldered joints have been lead-free since 2005.



STATEMENT OF WEEE POLICY: Trident Audio Developments manufactures many complete electronic products which are covered by the European Union's "Waste Electric and Electronic Equipment" directive 2002/95/EC (WEEE). This directive seeks to ensure that atset electric and electronic equipment is disposed of in an environmentally responsible manner, at the end of its life cycle. Trident Audio Developments take seriously its obligations under this directive to take back WEEE-affected products and, from 13th August 2005, will mark all such products with the crossed-out wheeled bin symbol.

Business to business products: Trident Audio Developments will cost neutrally take back WEEE-affected electric and electronic equipment in this category, from 1st January 2006. Trident Audio Developments will work with disposal and recycling partners working within the EU. The waste electric and electronic equipment can be turned over to a disposal and recycling compnaies in the countries concerned.

Business to customer products: emerging electric and electronic equipment will be disposed of by local authorities' collection systems. Dual use products: this equipment will be disposed of by local authorities' collection systems.

Trident 68 Input Channel Recall Sheet



Date:	Engineer:
Artist:	Project:
Session Notes	





Trident 68 Group Channel Recall Sheet

	Date:	Engineer:
	Artist:	Project:
 ⊙ 1		
+15 +12 +9	Session Notes	
+6 +3 0		
-3 -6 -9 -12 -15 -20		
\(\frac{1}{1}\)		
STEREO FX RET 1		
BALR		
LEVEL		
GROUP 1 INSERT ON		
PRE		
5 pan 6		
LEVEL		
MON LEVEL		
MON PAN		
SOLO 1 DOWN MARKET OUP MONITOR		
+ - 1 - 5		
5 10		
15		
20 - 25		
-1-30		

Trident 68 Master Channel Recall Sheet



Date:	Engineer:
Artist:	Project:
Session Notes	

