

# USER'S MANUAL

## MYTEK DIGITAL



## 8X192 ADDA

### 8 CHANNEL MASTERING ANALOG TO DIGITAL AND DIGITAL TO ANALOG CONVERTER

DSD  
Direct Stream Digital



**User's Manual ver. 1.2 / September 2015**

© Mytek 2015

There are periodic updates to this manual.

To download the latest version, technical support, and for setup tips

please visit:

**<http://www.mytekdigital.com>**

or call us at:

tel. +1 (347) 384-2687

Mytek Digital  
148 India St.  
Brooklyn, NY 11222  
USA

## Owner's record

The serial number is located on the bottom of the unit. We suggest you record the serial number in the space provided below. The firmware version label is located on the 8 pin emprom chip located in a socket under the top lid. The firmware can be updated and chip replaced by the user if necessary. Please be sure to return your completed warranty card.

8x192 ADDA Serial NO.:

Firmware Version:

Purchase Date:

Dealer/ Contact:

Cards Installed, Serial ##

## Contents

1. Introduction .....	3
2. Package contents .....	3
3. Signal flow .....	4
4. Block schematics .....	5
5. Back panel connections .....	6
6. Front panel controls .....	7
7. Input / output gain and other internal adjustments .....	8
8. Setting Clocks and Signal Sources .....	10
9. Updating the firmware .....	14
10. Expansion cards .....	16
11. Specifications .....	16
12. Warranty .....	18
13. Important safety informations .....	18
14. Information on Disposal for Users of Waste .....	19

## 1. Introduction

Mytek 8X192 ADDA is an 8 channel Analog to Digital and an 8 channel Digital to Analog converter meticulously designed to provide the highest quality signal path. No compromises have been made to sound quality, and we feel that this is the best sounding Mytek converter to date. In trial tests in comparison with other hi-end brands this unit provided the same or better sonic performance, which makes it suitable for the most demanding mastering and recording applications.

Users choose Mytek converters primarily for their outstanding sonic quality. The sound of Mytek converters can best be described as "transparent". We design our converters to be as faithful to the original signal as possible, rather than adhering the philosophy of some other manufacturers who offer "analog" or "tube" sounding converters. Mytek converters are designed to be as close to a straight wire as possible, which is especially evident when used at full 24/192 or DSD resolution.

On the Mytek website you can find and download various sound samples to evaluate the 8X192's sound quality and compare it to the sound of other high end converter units. Please log onto: <http://www.mytekdigital.com> to download samples. Thanks to the wide choice of daughter interface cards (DIO Cards), the 8X192 becomes an 8 channel "digital swiss army knife", which allows the user to adapt converter performance to most studio setups and situations."

In addition to typical converter functions, the Mytek 8X192 features a unique analog mix bus designed with transparency in mind, a monitor section with a mastering grade stepped attenuator, and a hi-end headphone amp.

The built in CX 797 clock generator with multiple wordclock outputs is the best source for stable studio house clock, and the 8x192 will perform best using this internal clock.

## 2. Package Contents

- the 8x192 ADDA converter
- power cord
- manual


### 3. Signal flow

The 8X192 ADDA has two independent signal paths within the unit. They offer independent signal paths but must operate at the same clock source and sampling frequency. It's recommended that as much as possible the unit should be clocked from its internal CX 797 clock generator. This mode offers minimum jitter allowin for the best performance and system stability. Associated equipment should be slaved to 8X192 clock outputs whenever possible. There is no measurable improvement (rather typically a degradation) when the unit is clocked by external clock generator.


1. The first path is built around the ADC converter and essentially defines what input is selected to be sent to digital outputs. All digital outputs are simultaneous, so if the analog input is engaged, the analog signal is converted to digital and sent to all installed digital outputs.

If the digital input is selected, only digital format conversion is performed, and the signal is then passed to the digital outputs. There is no SRC or any kind of digital processing induced. When operating in DSD mode only the inputs and outputs compatible with DSD format are active.


2. The second signal path is built around the DAC. It defines what signal is present at the analog outputs. The selected digital signal is converted to analog. If the analog input is selected, it's first converted to digital by the ADC and then sent to the DAC and converted back to analog.

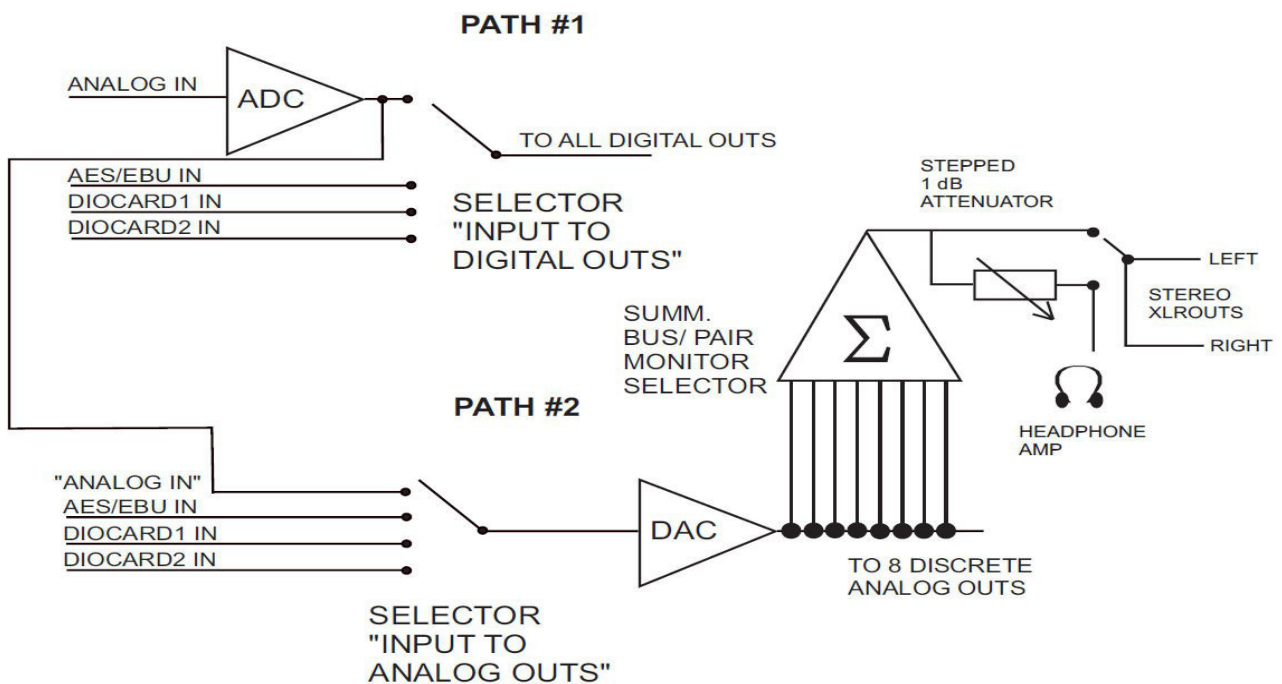

### 4. Block schematic

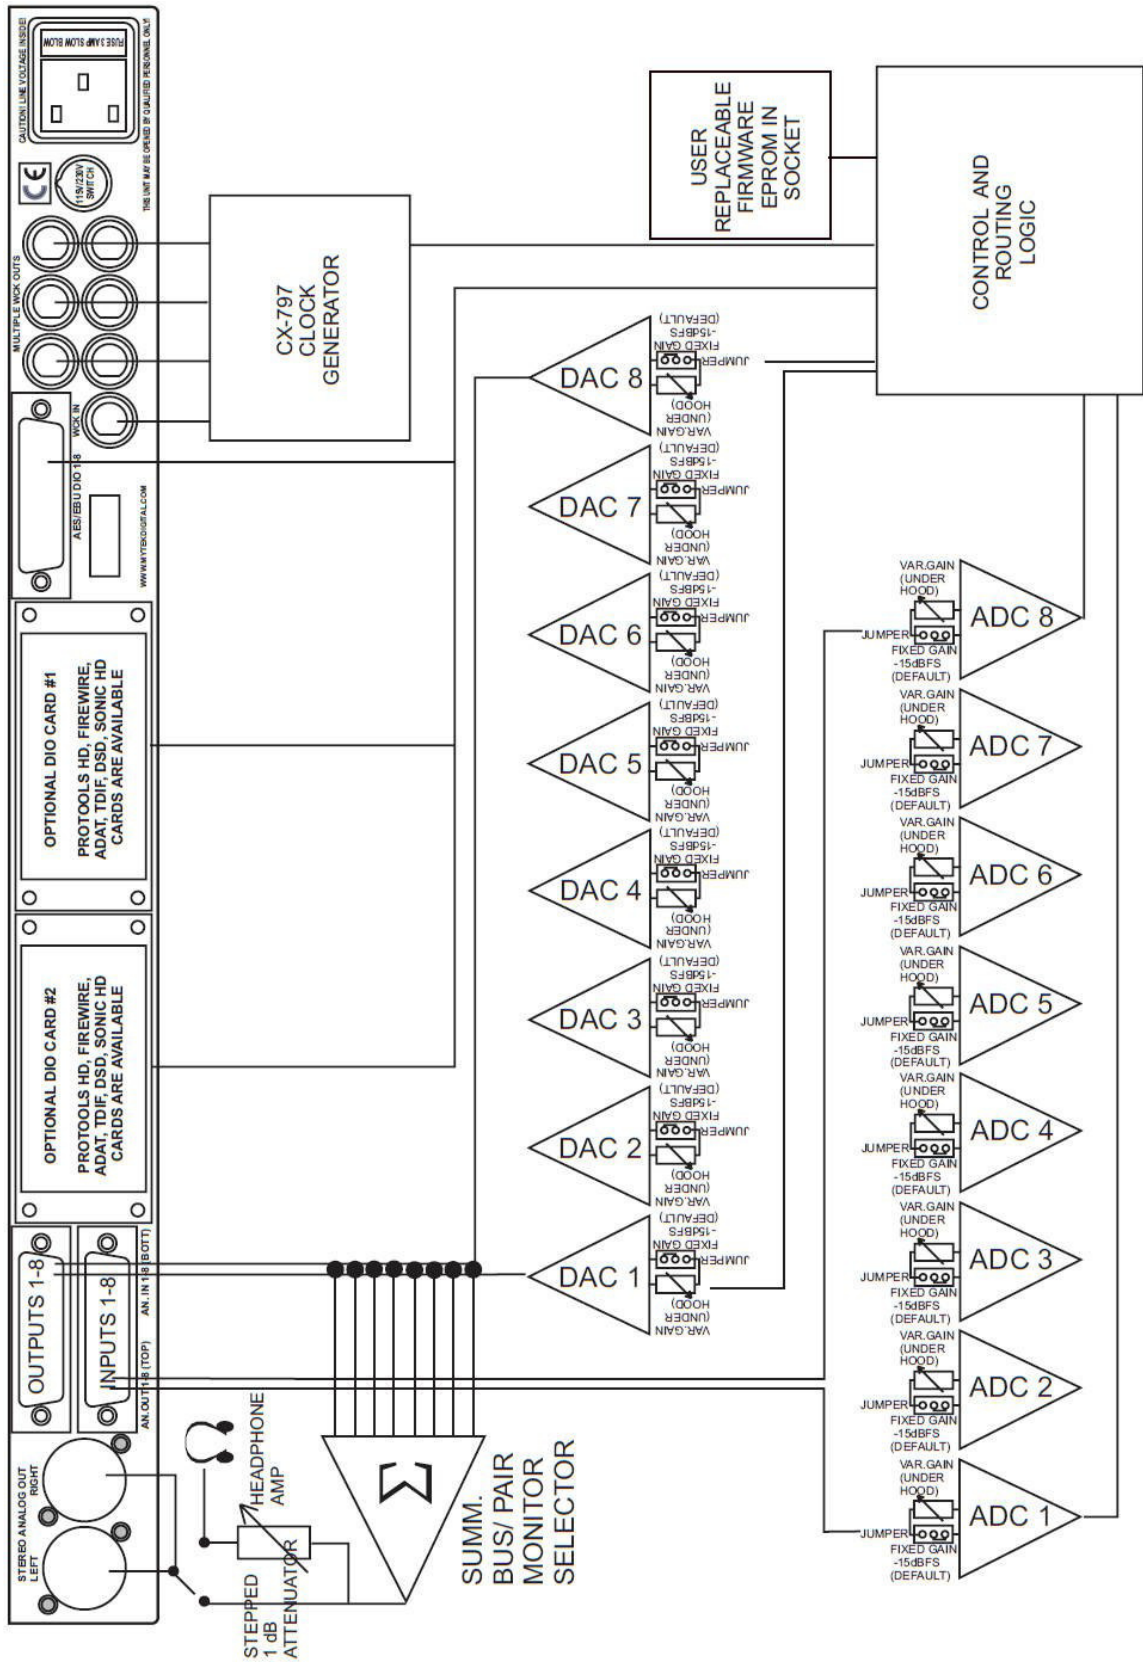

## 5. Back Panel Connections

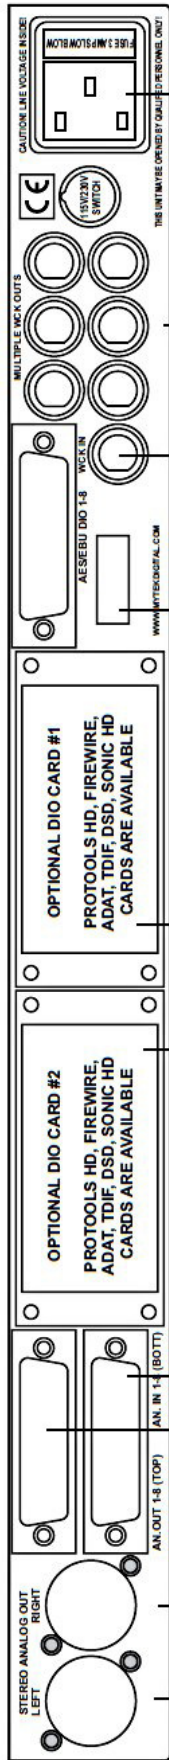

**Stereo monitor XLR outputs.** These are +4dB balanced outputs with 75 Ohm output impedance. They are buffered following mix bus/monitor selector and can be run directly from bus/selector or via 1dB precision stepped attenuator by holding down selector button until "through knob" led is on. When driving unbalanced loads pin 3 should be lifted (not shorted to gnd). There is no internal gain adjustment on this output other than the volume knob. **Headphone jack present on front panel features the same signal as XLR outs but it is always routed through knob.** Mute switch mutes XLR outs only.

**Discrete 8 analog inputs.** These are direct inputs to each A/D converter. The inputs are balanced +4dB and have a set gain of +4dB--15dBFS or can be adjusted (see previous chapter). They have 10 kOhm input impedance and can be driven by single ended sources (including -10dBV consumer). The DB25 pinout is described elsewhere on this page.

**Two optional DIOCARD slots.** Up to two extra digital interfaces can be installed for formats stated on the back of the slot. These cards can be installed by user without voiding the warranty, providing the connecting ribbon is properly inserted on both ends. To install the card: Power down, remove top unit cover and the back small slot cover. Secure the card with 4 screws and connect short ribbon straight to motherboard (without twisting the cable). Make sure all pins match the connector properly. Power up- once card is identified by system, it will become accessible from front panel. DSD DIOCard additionally to providing DSD I/O will also load the DSD firmware into the unit thus enabling DSD conversion.


**DIP Switch** enables addtl special functions. ON is down OFF is up.  
 dipsw8 ON: wckin 75 ohm termination  
 dipsw7 ON: dual wire - for FSx2 or x4.  
 dipsw6 ON: makes BNCs superclock instead of wordclock.

**Internal hi-performance CX 797 Clock Generator** features one wordclock input (TTL or 3-5V) which can be terminated (see DIP switch). It can be multiplied if necessary by switch on front panel. There are also multiple wordclock outputs for synchronizing the rest of studio to the 8X192 ADDA. Both in and outs can also be Protools Superclock (256x FS) (see DIP switch).


**Powers supply** is an oversized linear type and has to be set for appropriate line voltage by the user using the round switch. The fuse is 20 mm 3Amp SLOW BLOW type and can be replaced by lifting the module next to power cord receptacle.

**Discrete 8 analog outputs.** These are direct outputs from each D/A converter. Since they are not followed by more electronics they are slightly more transparent than the monitor outputs and recommended for use whenever ultimate transparency is desirable. The outputs are balanced +4dB and have a set gain of +4dB--15dBFS or can be adjusted (see previous chapter). They have 75 Ohm output impedance and can drive single ended (including -10dBV consumer) outputs. For single ended drive lift all cold signals. The DB25 pinout is described elsewhere on this page.


**Analog input and output DB25 pinout** corresponds to standard used by Protools, Tascam, Radar and Apogee as in drawing below. High end versions of DB25 to XLR breakout cables are available from Mytek, while basic cables are available through larger music retailers. Note that all DB25 pinouts including AES DIO are similarly wired with only difference being the sex of XLR connectors.

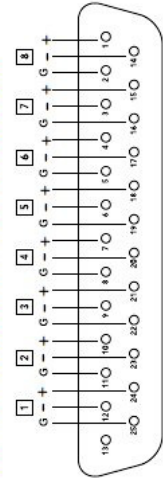

**AES DIO DB25 pinout** corresponds to standard used by Protools as in drawing below. **Note, it is different than Apogee Standard.** High end versions of DB25 to XLR breakout cables are available from Mytek, while basic cables are available through larger music retailers. Note that all DB25 pinouts including AES DIO are similarly wired with only difference being the sex of XLR connectors.

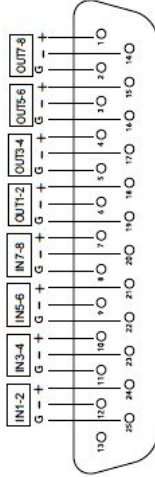

## 6. Front Panel Controls

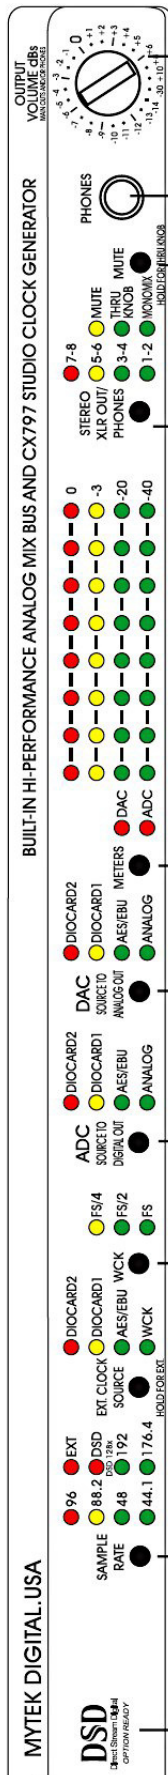

**DSD and 128x DSD** (hi-speed) feature can be enabled by installing the DSD DIOCARD.

**Sample Rate** switch toggles btwn sampling rates for PCM and if DSD option is installed, sets the unit to DSD or 128x DSD mode. This switch sets sample rate for both AD and DA and has to be set manually even if ext. clock is applied. In such case it has to be the nearest approximation of applied clock (or its multiplication if FS/2 or FS/4 is selected).

Pressing and holding **Ext.Clock Source** button enables or disables external sync. Toggling this switch selects the source of external clock.

**WCK switch** allows toggles btwn sampling rates wordclock (both in and out) to be a division of sampling frequency. For example- when FS/4 is selected, the converter will operate at FS=176.4k while the wordclock is 44.1k.

**Source to Digital** Out- See Signal Flow on pg 6.

**Source to Analog** Out- See Signal Flow on pg 6.

**Meters**- Selects signal displayed by Meters- either ADC or DAC. Red meter LED is a full scale signal at 1 sample or more. We do not recommend peaking at red.

**Stereo Output selector** determines what is present on stereo XLR outputs and headphone. It can either be any pair of DACs or L/R sum of them (odd channels summed to L and even to R) or Mono sum of all 8 chan. Holding this button selects Thru XLR output which routes the XLR output via volume attenuator. These outputs are typically connected directly to power amp or powered speakers providing hi-fidelity short signal monitor path.

Hi-Fidelity, high drive headphone out can drive any type of headphones with ultimate fidelity. It's able to provide up to 1 Amp of instant current drive. The headphone out is the same as XLR and it's always routed through the knob.

Precision 1dB steeped attenuator features a precision 24 step switch and precision resistor ladder resulting in very accurate level monitoring for mastering purposes.

Mute button mutes main XLR outs.



## 7. Input / output gain and other internal adjustments

### 7.1 Analog input/output alignment

The 8X192 ADDA analog input/output sensitivity comes as factory default fixed at  $-15\text{dB}$ Fs corresponding to  $+4\text{dB}$  ( $\text{OVU}=1.228\text{VRMS}$  measured between hot and cold). This gain is optimal for most situations and unless another level "is necessary for systemic reasons, we recommend leaving the gain at the default setting. If the gain has to be changed the appropriate jumpers and trimpots have to be accessed by lifting the top cover. Please review the drawing on following page.

The gain alignment does not affect audio quality, only input/output sensitivity. A small tweaker or screwdriver is necessary. First you have to arbitrarily decide what will be your studio "0 VU" analog/digital reference level. It is usually between  $-20$  and  $-14\text{dB}$ . It defines how much headroom is left over the normal operating "0 VU" level. You may set it at the same level as other piece of equipment in your studio.


#### Step 1 – Analog output alignment

1. Play a digital audio source (DAW generator, test CD etc.) set to approx. 1kHz at the peak operating level you have chosen (let's say you have chosen  $-18\text{dB}$ ).
2. Send the signal from the analog output to the console VU meter. If you don't have a VU meter you can use an AC voltmeter set to measure AC RMS values. "0 VU" at  $+4\text{dB}$  corresponds to 1.225 Volts RMS measured between pin hot and pin cold of the output signal.
3. Using a tweaker or a small screwdriver adjust the analog outputs until the VU meter reads "0 VU".
4. Repeat the same for all outputs.

#### Step 2 – Analog input alignment


1. Set the oscillator in your console at 1kHz and "0 VU". Send the oscillator to the 8X192ADDA analog input. "0 VU" at  $+4\text{dB}$  corresponds to 1.225 Volts RMS measured between pin 2 and 3 of the output XLRs. If you do not have an analog oscillator, you can use a calibrated analog out of a DA converter and generate a sinewave inside the DAW. Alternatively, if you do not have an oscillator you can use the analog outputs you have just aligned as a source of a sinewave at  $+4\text{dB}$  (generating sinewave digitally as in step 1).
2. Select the "analog input". Connect a digital meter to a digital output. If you don't have a dedicated digital meter use the most precise meter available in you existing digital recording equipment or DAW.
3. Adjust the analog input level to get appropriate reading of the meter (for example  $-18\text{dB}$ ).
4. Repeat the same for all of the analog inputs.

## 7.2 Other internal adjustments

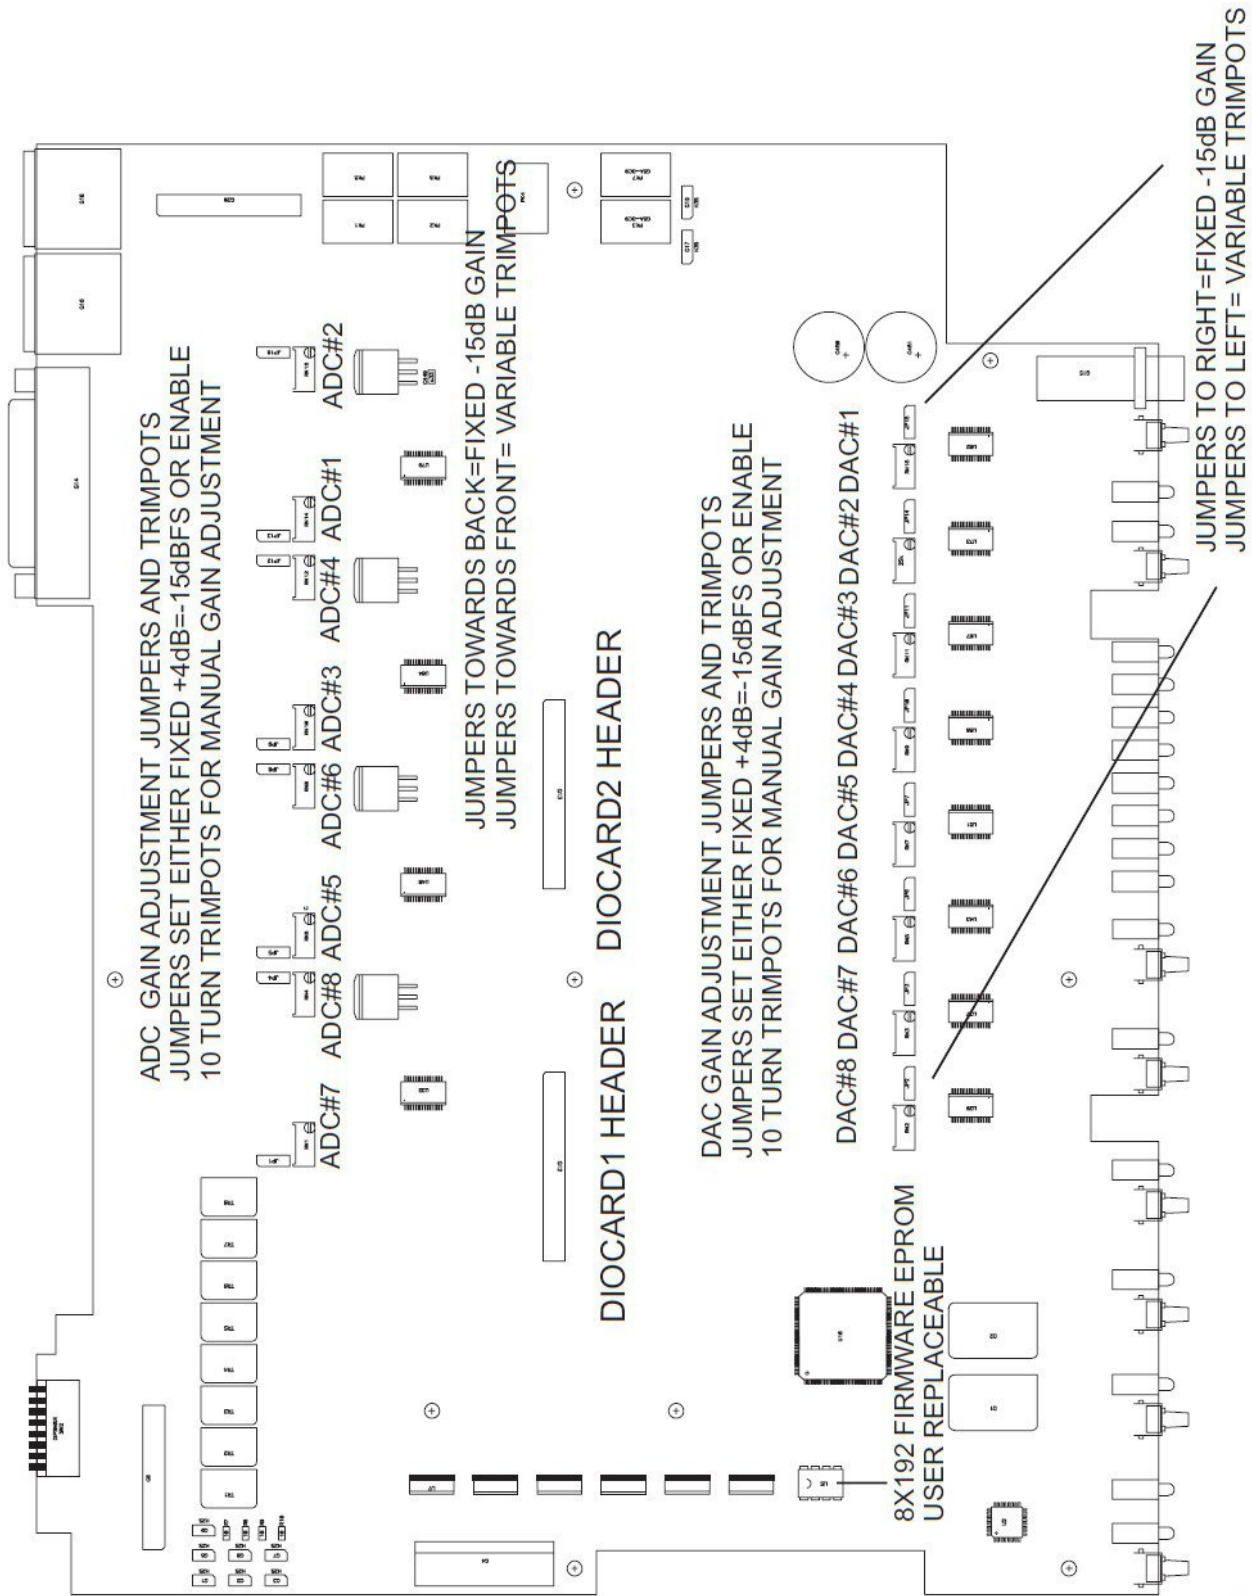

## 8. Setting clocks and signal sources

### 8.1 Normal operation; AD & DA switched to internal clock, AD feeding the recorder and DA monitoring recorder.

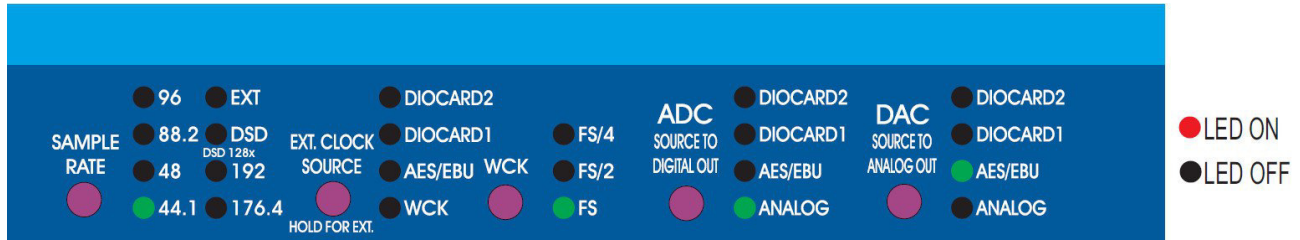


In this mode both the AD and DA run on the internal clock. This mode provides the lowest jitter and most sonically robust performance. External recorders (such as DAW etc) have to be synchronized either to the AD digital outputs (any format: AES or DIOCARD1 or DIOCARD2) or to the converter Wordclock output.

This example shows 44.1 PCM, but any FS can be any selected, including DSD and 128x DSD. Also instead of AES, any other digital input to DA can be selected, depending on the particular system configuration. The unit will output on its BNC outs Wordclock corresponding to the sampling frequency unless it's divided by using WCK button.

If the DA converter receives no selected digital in OR this input is not synchronous with AD clock, the LED will flash and DA converter will mute.


### 8.2 Feed through operation; AD & DA clocked internally, AD feeding DA directly

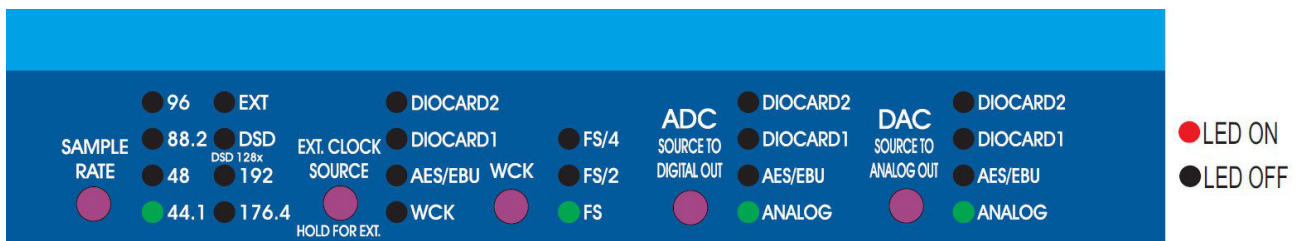

In this mode both the AD and DA run on the internal clock. This mode also provides the lowest jitter and most sonically robust performance. External recorders (such as DAW etc) must be synchronized either to AD digital outputs (any format: AES or DIOCARD1 or DIOCARD2) or to the converter Wordclock output.

In this mode signal is fed from AD to digital outputs and also to DA directly. This mode may be useful when conversion latency has to be minimized during the recording. It functionally corresponds to a multitrack tape machine always on "input". This example shows 44.1 PCM, but any FS can be any selected, including DSD and 128xDSD. Also instead of AES any other digital input to DA can be selected depending on particular system configuration. The unit will output on its BNC outs Wordclock corresponding to the sampling frequency unless it's divided by using WCK button.

### 8.3 Normal operation; AD & DA on external WordClock, AD feeding the recorder and DA

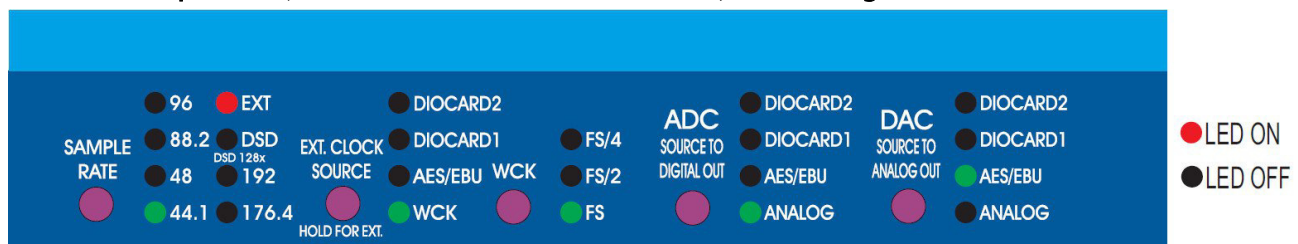


In this mode both the AD and DA run on an external clock. Holding the "Ext. Clock Source" button selects this mode. Although this mode does not provide the lowest jitter performance it might be desirable for systemic reasons. External recorders (such as DAW etc) can be synchronized to external wordclock sources OR AD digital outputs (any format: AES or DIOCARD1 or DIOCARD2) OR to converter Wordclock output.

This example shows 44.1 PCM, but any FS can be selected, including DSD and 128xDSD. Also instead of AES any other digital input to DA can be selected depending on a particular system configuration.

The unit will output on its BNC Wordclock outs corresponding to the sampling frequency provided externally unless it's divided by using WCK button. If the DA converter receives no selected digital in OR this input is not synchronous with AD clock, the LED will flash and DA converter will mute. Sample Rate has to be selected manually to match wck or its nearest approximation. WCK will be the base of sampling rate. If no WCK source is detected, WCK LED will flash and the unit will not pass signal.

### 8.4 Feed through operation; AD & DA on external clock, AD feeding DA directly.

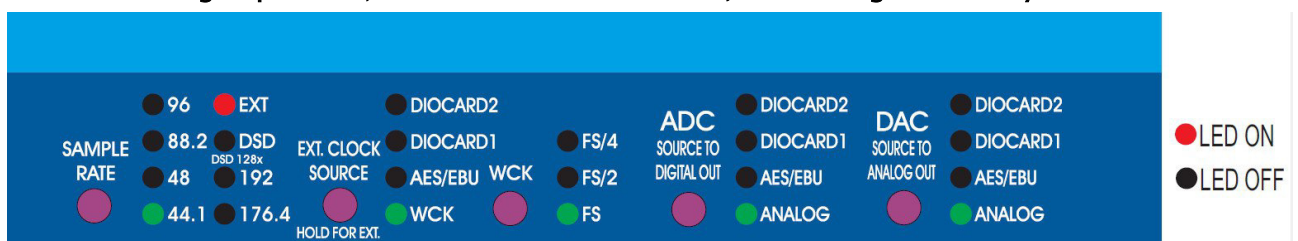


In this mode both the AD and DA run on an external clock. Although this mode does not provides the lowest jitter performance it might be desirable for systemic reasons. External recorders (such as DAW etc.) can be synchronized to an external wordclock source OR AD digital outputs (any format: AES or DIOCARD1 or DIOCARD2) OR to a converters Wordclock output. In this mode signal is fed from the AD to digital outputs and also to DA directly. This mode may be useful when conversion latency has to be minimized during the recording. It functionally corresponds to a multitrack tape machine always being on "input".

This example shows 44.1 PCM, but any FS can be selected, including DSD and 128xDSD. Also instead of AES any other digital input to DA can be selected depending on a particular system configuration.

The unit will output on its BNC outs a Wordclock signal corresponding to the sampling frequency provided externally, unless it's divided by using the WCK button. If the DA converter receives no selected digital in OR this input is not synchronous with AD clock, the LED will flash and DA converter will mute. The Sample Rate has to be selected manually to match wck or its nearest approximation. WCK will be the base of sampling rate. If no WCK source is detected, the WCK LED will flash and the unit will not pass signal.

### 8.5 Normal operation; AD & DA on external clock other than WCK, AD feeding the recorder and DA monitoring recorder.

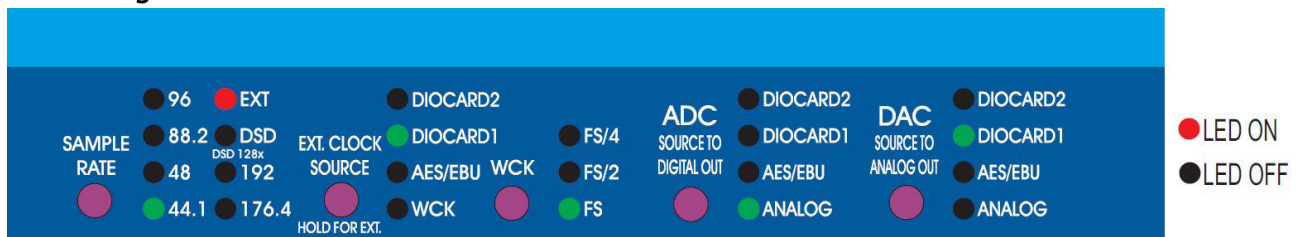


In this mode both the AD and DA run on an external clock. Although this mode does not provides the lowest jitter performance it might be desirable for systemic reasons. For example a second 8X192 unit running can be coupled with a master 8X192 unit via Firewire cable only. In this case the clock for the second unit is provided via a Firewire card (DIOCARD1 in this example). External recorders (such as DAW etc) can be either AD digital outputs (any format: AES or DIOCARD1 or DIOCARD2), converter Wordclock outputs, or can run in asynchronous Firewire mode.

This example shows 44.1 PCM, but any FS can be any selected, including DSD and 128xDSD. Also instead of AES any other digital input to DA can be selected depending on a particular system configuration.

The unit will output on its BNC outs Wordclock corresponding to the sampling frequency provided externally unless it's divided by using WCK button. If the DA converter receives no selected digital in OR this input is not synchronous with AD clock, the LED will flash and DA converter will mute. The Sample Rate has to be selected manually to match wck or its nearest approximation. WCK will be the base of sampling rate. If no WCK source is detected, WCK LED will flash and unit will not pass signal.

### 8.6 Feed through operation; AD & DA on internal clock, AD feeding DA directly

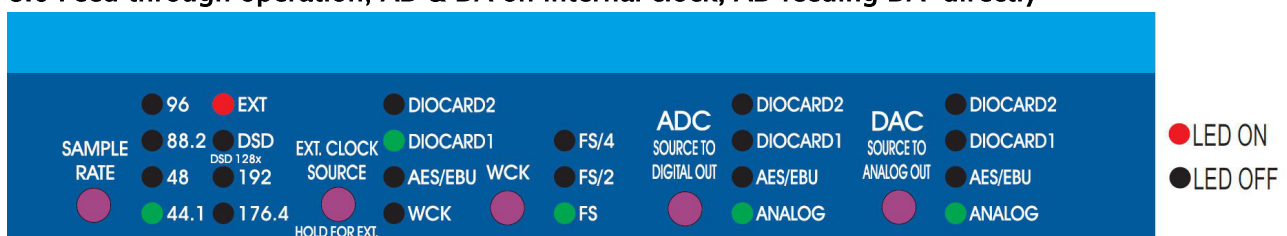


In this mode both the AD and DA run on an external clock. Although this mode does not provides the lowest jitter performance it might be desirable for systemic reasons. For example a second 8X192 unit running can be coupled with a master 8X192 unit via a Firewire cable only. In this case the clock for second unit is provided via Firewire card (DIOCARD1 in this example).

External recorders (such as DAW etc) can be either AD digital outputs (any format: AES or DIOCARD1 or DIOCARD2), converter Wordclock output, or can run in asynchronous Firewire mode. In this mode signal is fed from AD to digital outputs and also to DA directly. This mode may be useful when conversion latency has to be minimized during the recording. It functionally corresponds to a multitrack tape machine always on "input".

This example shows 44.1 PCM, but any FS can be any selected, including DSD and 128xDSD. Also instead of AES any other digital input to DA can be selected depending on a particular system configuration.

The unit will output on its BNC outs Wordclock corresponding to the sampling frequency provided externally unless it's divided by using WCK button. If the DA converter receives no selected digital in OR this input is not synchronous with AD clock, the LED will flash and DA converter will mute. The Sample Rate has to be selected manually to match wck or its nearest approximation. WCK will be the base of sampling rate. If no WCK source is detected, WCK LED will flash and unit will not pass signal.

### 8.7 Format conversion operation; ADC is OFF, digital IN to digital OUT, DA monitoring digital IN

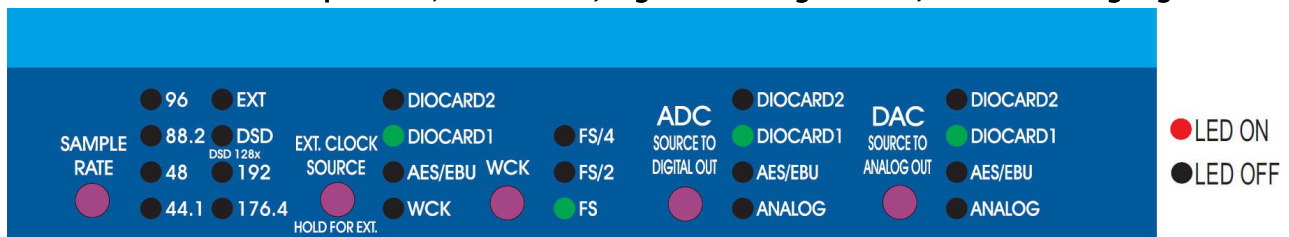

In this mode the 8X192 unit can be used for format conversion between all installed digital interfaces. Once a digital input is selected for "SOURCE TO DIGITAL", the "SAMPLE RATE" switch is disabled and EXT.CLOCK SOURCE and SOURCE TO ANALOG OUT automatically set to selected digital input. The incoming digital signal is converted to all available digital formats simultaneously as well as is sent to DA converter for monitoring. The wck divider affects only WCK outs. WCK is derived from incoming digital input, in this example DIOCARD1.

## 9. Updating the firmware

This update might be necessary to bring the converter's motherboard up to date to allow its operation with an expansion card of your choice. Generally installed firmware should be of rev. 6.0 or greater. Contact Mytek via email to obtain current firmware chip.

### **WARNING!**


Remember to follow basic safety rules about handling of electronic device while opening the converter:

- keep your hands dry,
- remember to turn off power and disconnect power and signal cables while working with the top cover removed.


Please follow steps below to perform firmware update of 8X192 ADDA converter.

A. Check if the power cord and signal and clock lines are disconnected.


B. Remove the top lid.

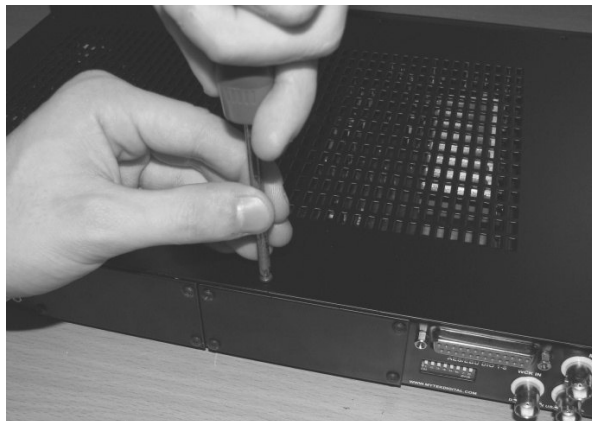


C. Locate the memory socket on the converter main board

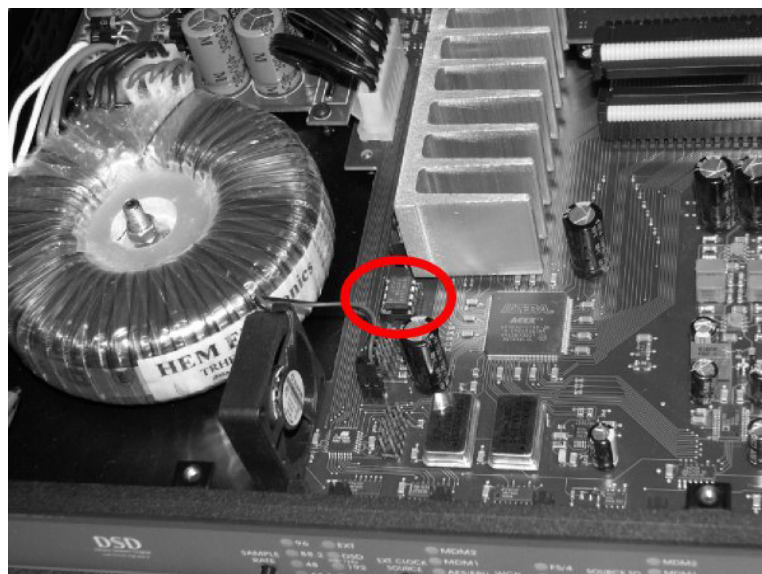


D. Gently remove old memory chip.

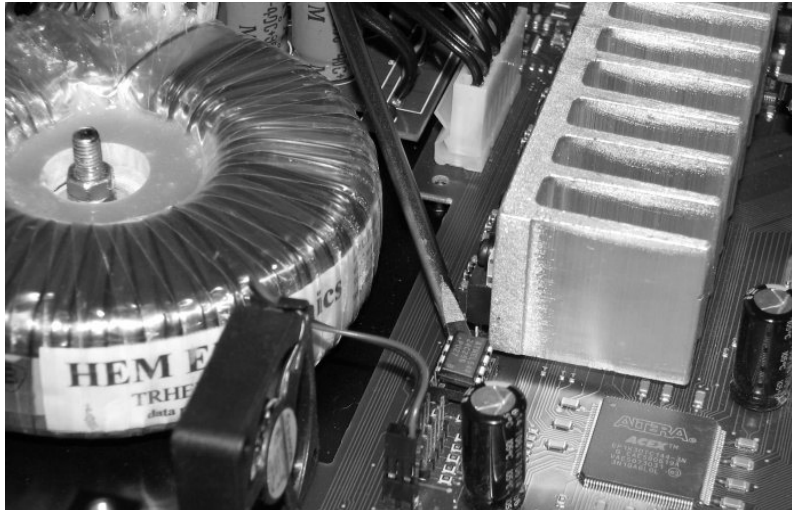

E. Carefully insert new memory chip in the socket. The chip slot (pin1) should be matching the socket slot ie must be facing back of the unit. If necessary gently manually bend pins inward, to match the holes in the slot. **During installation check correct chip position.**

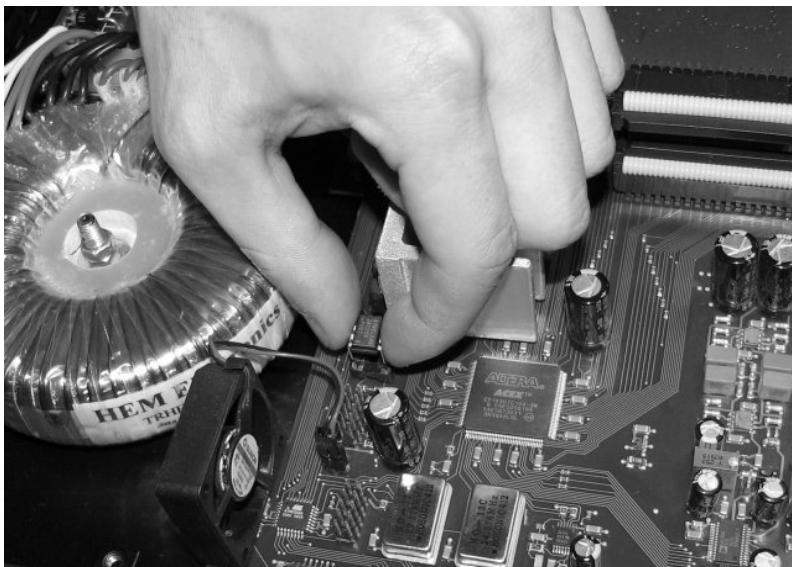

F. Mount the top lid back.

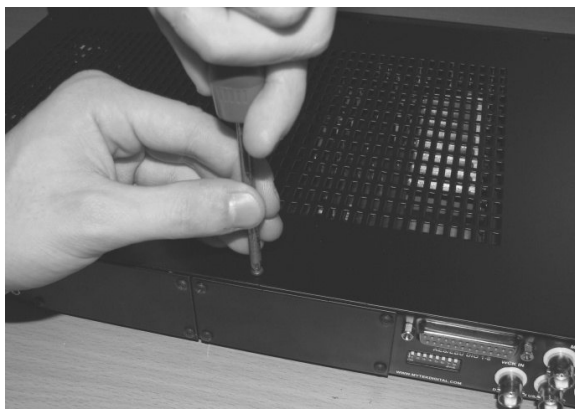



- G. Attach power cord and other cabling.
- H. Turn on the converter.

For about 2 seconds no LED should be lit on the converter's front panel, as new software is copied from memory to the main board chips. Then, all LEDs should turn on momentarily for about 10–20sec and subsequently the unit should begin normal operation.

## 10. Expansion cards

There are following cards available:

[DIO FW](#), [DIO USB2](#), [DIO MADI](#), [DIO ADAT](#), [\\*DIO DSD/SDIF](#), [\\*DIO SONOMA](#), [\\*DIO DANTE](#), [DIO HDX](#)

FW, USB2, MADI, ADAT and HDX DIO cards can be ordered with the 8X192 ADDA with no additional charge. Cards marked with \* can not be a part of the bundle and can only be purchased separately.

Note! – DIO HDX expansion card must be mounted in first slot only.

## 12. Technical Specifications

### AD Section

Conversion:	Linear, 1 Bit *, 128x oversampling at 44.1–48kHz, 64x oversampling at 88.2–192kHz, optional 64xDSD and 128xDSD
Resolution:	24 bit, ( or 1 bit DSD)
Sample rates:	44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz, 192kHz or wordclock 25–200kHz
Dynamic Range:	120dB A-weighted, 117dB Total
THD+Noise:	-106dB (<0.0005%)
Internal clock jitter:	<10picoseconds
Analog Inputs:	+4dBm balanced or unbalanced, 10 kOhm

\* This ADC uses a 1 bit delta sigma modulator which achieves instristically better low level linearity than the multibit counterparts. Although multibit ADC THD measurements are marginally better, the distribution of distortion subjectively sounds less desirable than in 1 bit converter which tends to exhibit certain silky quality. The same, currently worlds' highest performance 1 bit modulator is used to produce genuine 1 bit DSD signal.

**DA Section**

Conversion:	Linear, multibit delta-sigma PCM and 64xDSD and 128xDSD
Resolution:	24 bit, ( or 1 bit DSD)
Sample rates:	44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz, 192kHz or wordclock 25–200kHz
Dynamic Range:	123dB A-weighted, 120dB Total
THD+Noise:	-110dB (<0.0004%)
Internal clock jitter:	<10picoseconds
Analog Outputs:	+4dBm balanced or unbalanced, 75 Ohm

**Others**

Digital outputs:	Hi-Speed AES/EBU built in up to 200k or dual wire for 4 chan operation; other formats on optional DIO Cards
Expansion cards:	DIO HDX, DIO MADI, DIO USB2.0, DIO FW, DIO SONOMA, DIO DANTE, DIO ADAT, DIO DSD/SDIF.
External Sync:	Wordclock IN and OUT or 256x Superclock
WordClock OUT used as house clock:	15 LS TTL loads max. / can be terminated with 75 Ohm / 6 OUTs
WordClock IN:	TTL/5V input- internally switchable termination 75 Ohm. Wordclock can be replaced by Superclock fiunction.
Power supply:	100/115V–220/240V 50/60Hz switchable
Weight:	14 pounds [ 7 kg ]
Dimensions:	1U x 19 inch x 10.5 inch deep

## 13. Warranty

This 8x192ADDA digital audio converter is warranted by Mytek to the original purchaser against defects in workmanship and materials used in manufacture for a period of two years from the date of purchase. Faults due to customer misuse, unauthorized modifications or accidents are not covered by this warranty. No other warranty is expressed or implied.

Any faulty unit should be sent, shipping prepaid to the manufacturer service center. Prior to shipping the client must obtain an RMA number from Mytek for warranty services. Units sent without RMA number will not be accepted.

Mytek extends affordable repair service for all units manufactured to date that are not covered by this Warranty. Mytek repair centers are located at Mytek Headquarters in Brooklyn, New York, and in Warsaw, Poland (at Mytek EU Distribution Office).

## 14. Important safety informations

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this device near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## 15. Warning

Excessive sound pressure from speakers and headphones can cause hearing loss. In order to use this product safely, avoid prolonged listening at excessive sound pressure levels.

For the customers in the U.S.A.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

All interface cables used to connect peripherals must be shielded in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product with the CE marking complies with the EMC Directive issued by the Commission of the European Community. Compliance with this directive implies conformity to the following European standards:

- EN55103-1 : Electromagnetic Interference (Emission)
- EN55103-2 : Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environments: E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors), E4 (controlled EMC environment, ex. TV studio).

## 16. Information on Disposal for Users of Waste

Electrical & Electronic Equipment  
(private households).



The Wheelie Bin symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment.

To properly dispose harmful substances and recycle the product, the user is obliged to return it at the point of collection of electrical and electronic equipment waste. For more information please contact your local authorities, waste disposal units or retailer.