

Installation Instruction for Shadow SH 2500 E Concealed Permanent Mount Transducer

Content:

Transducer with 25cm cable (3.5mm)
endpin (6.3mm / 3.5mm)
mounting adhesive

1. Remove strings and original endpin.
2. Drill a 7/16" (11mm) hole using the original endpin hole as a pilot.
3. Slightly bevel the edges of the hole to avoid cracking the finish.
4. Press the endpin into the hole until it is flush with the body.
5. Apply an even amount of included adhesive to the bottom of the pickup.
6. Locate the pickup under the bridge between the second and third strings (B2-G3). See suggested locations in fig. 1.
7. Use gentle but firm pressure to apply the pickup.
8. Connect the pickup output into the endpin jack input.
9. Reinstall strings and retune.

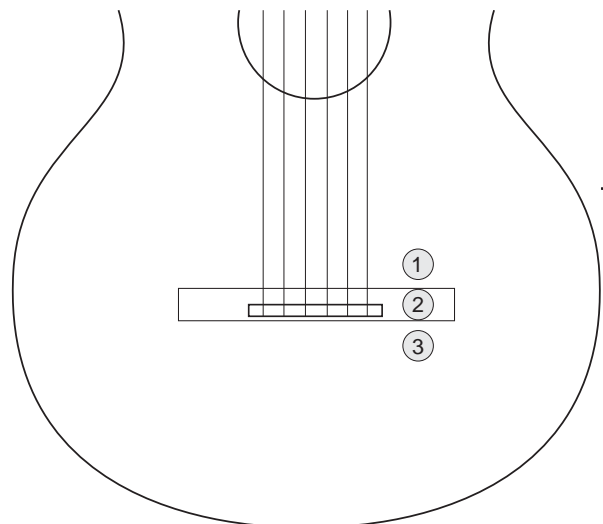


Fig. 1

Note:

Piezo pickups and transducers have a very high output impedance. In order to get the optimum sound output we recommend an amplifier with low impedance input.