

MULTI-FORMAT VIDEO MIXER V-02HD



Use the "V-02HD RCS" dedicated software to back up and restore settings

You can use the "V-02HD RCS" dedicated software to back up the settings of the V-02HD to a USB-connected computer, and restore backed-up settings when needed.

You can download "V-02HD RCS" from the Roland website.

<https://proav.roland.com/>

* For details on operation, refer to the Owner's Manual included with V-02HD RCS.

Contents

Operating Guide (Panel Description)	2
Front Panel	2
Rear Panel	4
Connecting a Footswitch	6
Basic Operations	7
Turning the Power On/Off	7
Operating the Menu	7
Video Input/Output Settings	8
List of Compatible Video Formats	8
Setting the Output Format	8
Specifying the Input Format (EDID)	9
Adjusting Output Video	9
Adjusting the Input Video	10
Outputting the Program Video from the PREVIEW OUT Connector ...	10
Inputting Copy-Protected (HDCP) Video	11
Video Operations	12
Using Mix/Wipe to Switch Video (MIX/WIPE)	12
Using Picture-In-Picture to Composite Video (PinP)	13
Using a Key to Composite Video (KEY)	14
Compositing a Logo or Image (Luminance Key)	14
Compositing a Subject and Background (Chroma Key) ..	16
Applying a Visual Effect to the Video (VFX)	18
Applying a Fade to the Program Output Video (Output Fade)	19
Using a Captured Still Image	20
Audio Operations	22
Adjusting the Volume Level	22
Applying Effects to Input Audio	23
Applying Effects to Output Audio	24
Silencing Only Specific Audio (Mute)	24
Interlinking Audio Output to Video Switching (Audio Follow)	25

Other Features	26
Saving/Recalling Settings (Preset Memory)	26
Using a Footswitch	27
Using an Expression Pedal	28
Preventing Unintended Operation (Panel Lock)	29
Returning to the Factory Settings (Factory Reset)	29
Menu List	30
1: VIDEO INPUT	30
2: VIDEO OUTPUT	31
3: TRANSITION TIME	32
4: MIX/WIPE	32
5: PinP	32
6: KEY	33
7: VFX	34
8: AUDIO INPUT	36
9: AUDIO OUTPUT	38
10: AUDIO FOLLOW	39
11: PRESET MEMORY	39
12: CTL/EXP	40
13: CAPTURE IMAGE	41
14: SYSTEM	41
Appendices	43
Troubleshooting	43
Block Diagram	44
Main Specifications	46
Dimensions	47

Operating Guide (Panel Description)


Front Panel

■ Fading video and audio in or out (p. 19)

■ Outputting a captured still image (p. 20)

Turn counterclockwise from the center

The program output video and audio fade in/out simultaneously. The video fades to a black screen.



Turn clockwise from the center

If you turn the knob all the way clockwise, the captured still image is output to preview/program as a cut (instant switching).

Center

Normal output.

- The settings described above are the factory defaults. You can also assign other functions to the [OUTPUT FADE] knob.

[OUTPUT FADE] knob

The indicators located at the left and right of the [OUTPUT FADE] knob show the status.

Left indicator

Blinking red	Fading in/out
Lit red	Fade-out completed

Right indicator

Lit green	Unit contains still image
Lit red	Still image is being output
Dark	Unit contains no still image

■ Selecting a Video Effect

[TYPE] button

You can select the effect that's applied to the video. The video effect is switched each time you press the button. The indicator of the selected video effect is lit.

Transition effects (p. 12)

MIX	The two videos are mixed as the transition occurs.
WIPE	The next video moves across to replace the original video.

Composition effects (p. 13, 14, 16)

Picture-in-picture (PinP)	The inset screen (a separate small screen) is shown on top of the background video.
KEY	A portion of the video is made transparent, and composited with the background video.



■ Switching video (p. 12)

[1] [2] buttons, Video fader

[1] [2] buttons

Switch between the videos being input to INPUT 1 and 2, and send them to the program output.

[1] [2] buttons	Status
Lit red	Program output video
Lit green	Preview output video (standby video)

Video fader

Manually switch between the videos being input to INPUT 1 and 2, and send them to the program output.

Transition indicators (both sides of the fader)

The lit indicator shows the video that is being output as the program.

■ Compositing video (p. 13, 14, 16)

[1] [2] buttons, Video fader

[1] button (Lit yellow)/

Transition indicators (both sides of the fader)

Selects the background video when compositing video. A transition indicator (left or right) is lit to indicate the selected background video.

[2] button/Video fader

Outputs the resulting composited video as the program. The inset screen of picture-in-picture or the key video or image for key compositing is revealed or removed.

[2] button	Status
Lit red	Outputting the composited result as the program
Dark	Outputting only the background video as the program

■ Adjusting the video effect (p. 12–18)

[CONTROL 1] [CONTROL 2] knobs

These adjust the video effect or visual effect (VFX).

- If the visual effect is on ([VFX] button lit), these knobs control the visual effect.

■ Applying a Visual Effect to the Video (p. 18)

[VFX] button

Turns the visual effect on/off.

When on, the [VFX] button is lit.

■ Operating the Menu (p. 7)

[MENU] button, [VALUE] knob

[MENU] button

Turning this button on (lit) makes a menu appear on the display that is connected to the PREVIEW OUT connector. If you've moved to a lower-level item of the menu, this button returns you to the next higher level. If the highest menu level is already shown, the button closes the menu.

[VALUE] knob

Turning: This selects a menu item or changes a setting value.

Pressing: This accepts the selected menu item or applies changes to a setting.




What is the program output?

This is the video output that reflects all processing such as video compositing and visual effects. It is output from the PROGRAM OUT connector.

This is the video that is seen by the people who are watching the live stream or presentation.

Tripod mounting socket (bottom panel)

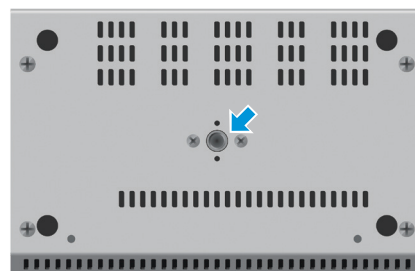

This is used when attaching the V-02HD to a commercially available camera tripod. The socket is threaded for a 1/4" screw.

Rear Panel


* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

DC IN jack


Connect the included AC adaptor to this jack.

* Use the cord hook to secure the cord of the AC adaptor as shown in the illustration.

For information on how to attach the cord hook, refer to "Attaching the Cord Hook" (p. 5).

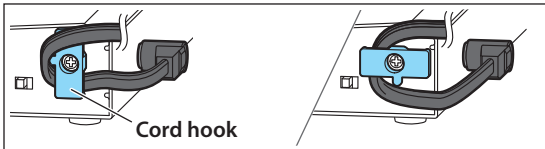

* Place the AC adaptor so the side with the indicator (see illustration) faces upwards and the side with textual information faces downwards. The indicator will light when you plug the AC adaptor into an AC outlet.



PROGRAM OUT connector

This outputs the resulting mixed video (the program video). Here you can connect a display, projector, or video recorder that is equipped with an HDMI input connector.





HDMI cable

Ground terminal

Connect this to an external earth or ground if necessary.

USB () port

Connect your computer here. This is used when backing up the unit's settings, or when updating the system program.

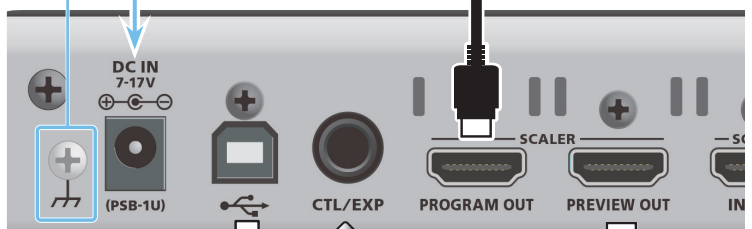

USB2.0 cable

HDMI cable

CTL/EXP jack (TRS phone)



Connect an expression pedal (sold separately: EV-5, etc.) or footswitch (sold separately: BOSS FS-6, etc.). This is used when using your foot to control operations such as video switching.

For details on connecting a footswitch, refer to "Connecting a Footswitch" (p. 6).

* Use only the specified expression pedal (EV-5, BOSS FV-500L, or FV-500H sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

PREVIEW OUT connector



This outputs the preview video (the standby video). Connect this to a display that is equipped with an HDMI input connector.

• The V-02HD menu is shown on the display that's connected to the PREVIEW OUT connector.

* Do not block the ventilation openings (the slits located on the front and side panels, etc.). If the ventilation openings are blocked, the internal temperatures may rise, causing malfunctions due to excessive heat.

PHONES () jack (stereo mini)

Connect headphones here.





[PHONES] knob

Adjusts the volume of the headphones.

AUDIO IN jack (stereo mini)

This inputs audio. Connect this to your audio or video device such as an audio mixer or CD player.


Audio output connectors

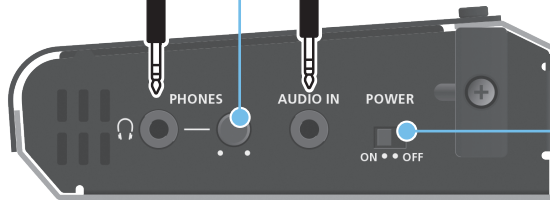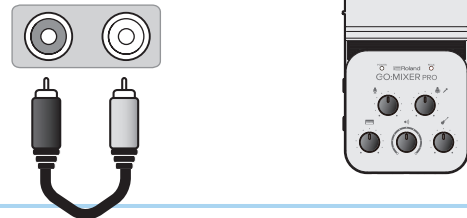

Turning the Power On/Off (p. 7)


[POWER] switch

This switch turns the power on/off.

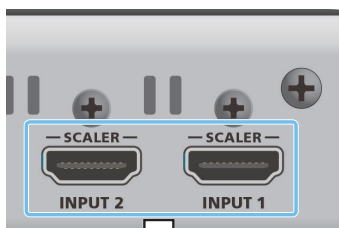

HDMI cable

INPUT 1, 2 connectors

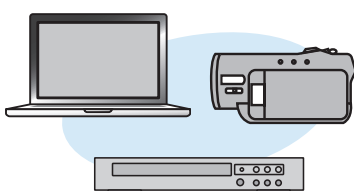


HDMI output connector

These input video. Connect these to a video camera, video device such as a BD player, or a computer that is equipped with an HDMI output connector.


Attaching the Cord Hook

Attach the included cord hook.

1. Remove the screw (one) indicated in the illustration.


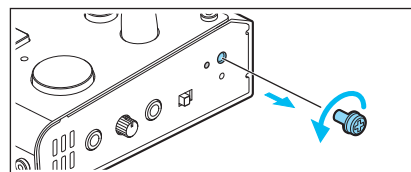


2. Using the screw that you removed in step 1, attach the cord hook as shown in the illustration.

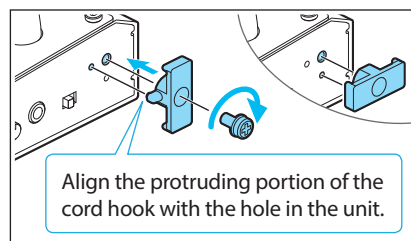


Align the protruding portion of the cord hook with the hole in the unit.

Connecting a Footswitch

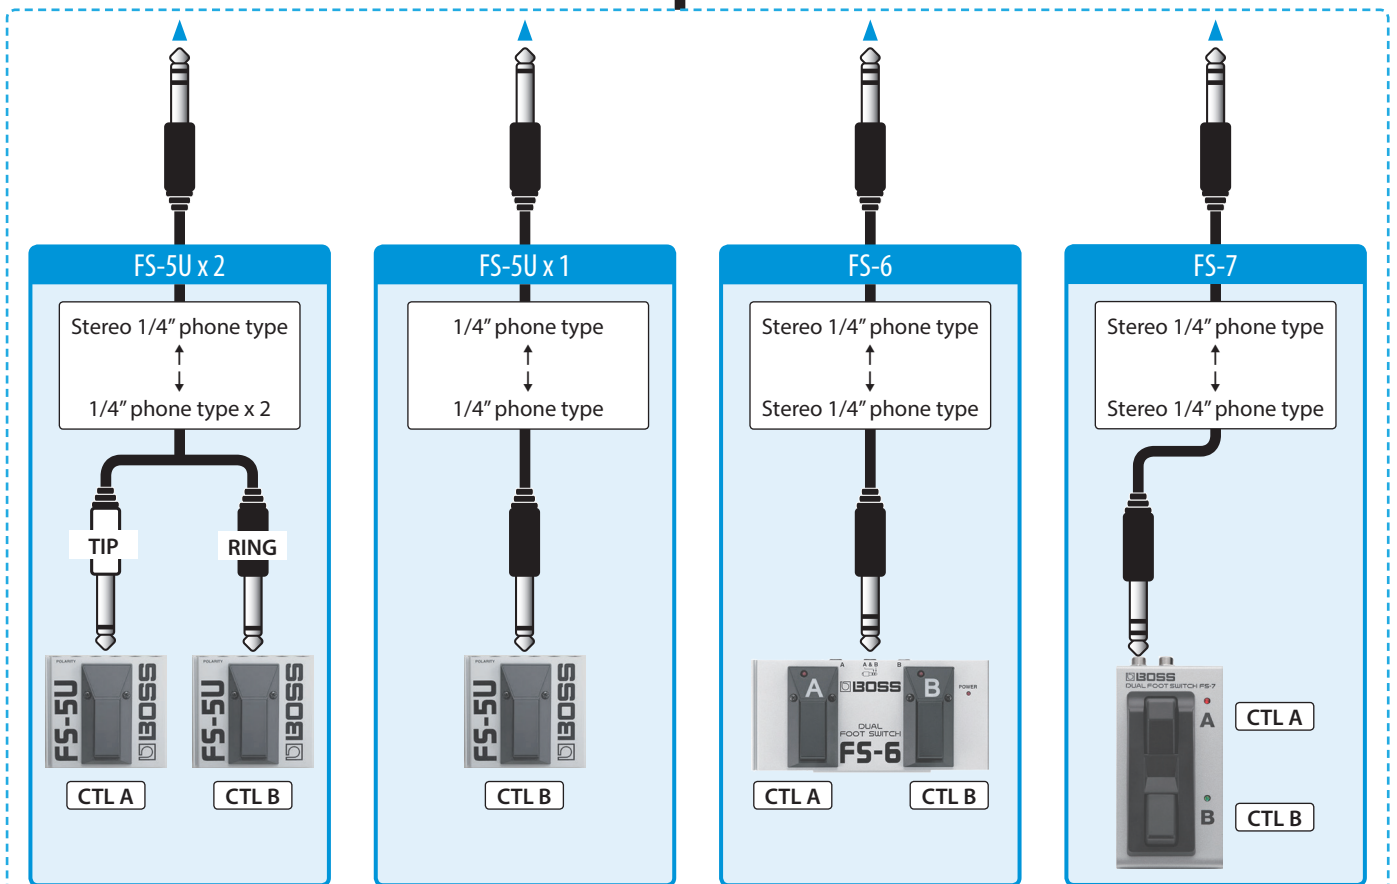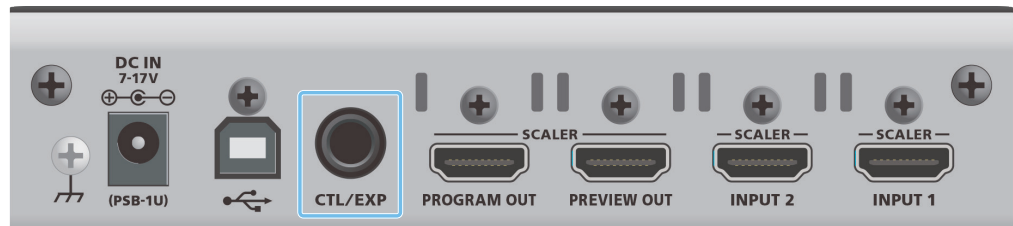


MODE/POLARITY switch


FS-5U



FS-6

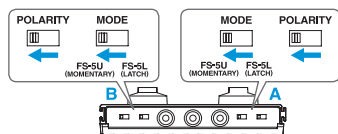

FS-7



NOTE

The BOSS FS-6's A, B, and A&B jacks also act as the power switch. The power turns on when you insert a plug into the jack, and turns off when you remove the plug.

To prevent the batteries from running down, remove the plugs from the jacks when you're not using the BOSS FS-6.


Basic Operations

Turning the Power On/Off

* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

Turning the power on

1. Make sure that all devices are powered-off.
2. Turn on the V-02HD's [POWER] switch.

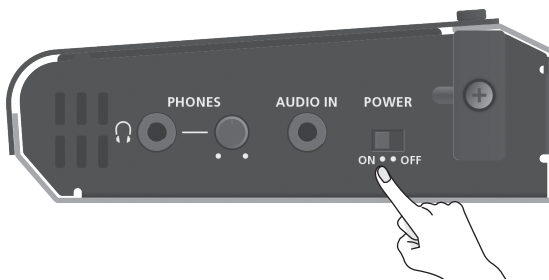

3. Turn on the power in the order of source devices → output devices.

Turning the power off

1. Turn off the power in the order of output devices → source devices.
2. Turn off the V-02HD's [POWER] switch.

About the Auto Off function

The power to the V-02HD turns off automatically when all of the following states persist for 240 minutes (Auto Off function).

- No operation performed on the V-02HD
- No audio or video input
- No equipment is connected to the PROGRAM OUT/PREVIEW OUT connectors


If you do not want the power to be turned off automatically, disengage the Auto Off function. Press the [MENU] button → "SYSTEM" → set "AUTO OFF" to "OFF."

- * Unsaved data is lost when the power turns off. Before turning the power off, save the data that you want to keep.
- * To restore power, turn the power on again.

Operating the Menu



Here's how to access the menu, and make video/audio settings and settings for the V-02HD itself. The menu is shown on the display that's connected to the PREVIEW OUT connector.

1. Press the [MENU] button to display the MENU screen.

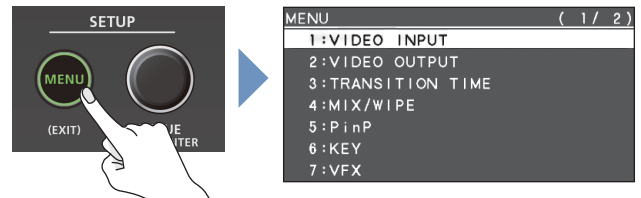

The menu is organized into functions.

2. Turn the [VALUE] knob to move the cursor to the menu item that you want to change, and then press the [VALUE] knob.

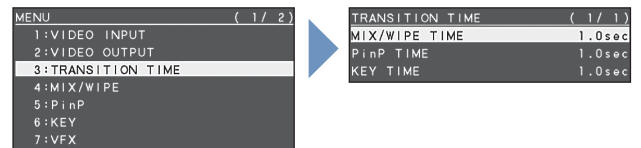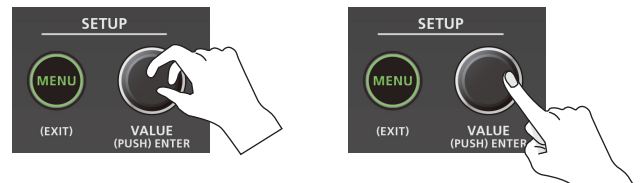

3. Repeat step 2 as needed.

Pressing the [MENU] button moves you back one level higher.

4. Turn the [VALUE] knob to change the setting value, and then press the [VALUE] knob to confirm.

MEMO

- By turning the [VALUE] knob while pressing it, you can change the value more greatly.
- Long-pressing the [VALUE] knob returns the current menu item you're setting to its default value.

5. Press the [MENU] button several times to close the menu.

Video Input/Output Settings

List of Compatible Video Formats

Input video formats

Frame rate	
When set to "59.94 Hz"	When set to "50 Hz"
480/59.94i	576/50i
720/59.94p	720/50p
1080/59.94i	1080/50i
1080/59.94p	1080/50p
VGA (640 x 480/60 Hz)	VGA (640 x 480/60 Hz)
SVGA (800 x 600/60 Hz)	SVGA (800 x 600/60 Hz)
XGA (1024 x 768/60 Hz)	XGA (1024 x 768/60 Hz)
WXGA (1280 x 800/60 Hz)	WXGA (1280 x 800/60 Hz)
FWXGA (1366 x 768/60 Hz)	FWXGA (1366 x 768/60 Hz)
SXGA (1280 x 1024/60 Hz)	SXGA (1280 x 1024/60 Hz)
SXGA+ (1400 x 1050/60 Hz)	SXGA+ (1400 x 1050/60 Hz)
UXGA (1600 x 1200/60 Hz)	UXGA (1600 x 1200/60 Hz)
WUXGA (1920 x 1080/60 Hz)	WUXGA (1920 x 1080/60 Hz)

Audio input format HDMI: Linear PCM, 24 bits/48 kHz, 2 ch

Output video formats

Frame rate	
When set to "59.94 Hz"	When set to "50 Hz"
480/59.94p	576/50p
720/59.94p	720/50p
1080/59.94i	1080/50i
1080/59.94p	1080/50p
SVGA (800 x 600/60 Hz)	SVGA (800 x 600/75 Hz)
XGA (1024 x 768/60 Hz)	XGA (1024 x 768/75 Hz)
WXGA (1280 x 800/60 Hz)	WXGA (1280 x 800/75 Hz)
FWXGA (1366 x 768/60 Hz)	FWXGA (1366 x 768/75 Hz)
SXGA (1280 x 1024/60 Hz)	SXGA (1280 x 1024/75 Hz)
SXGA+ (1400 x 1050/60 Hz)	SXGA+ (1400 x 1050/75 Hz)
UXGA (1600 x 1200/60 Hz)	UXGA (1600 x 1200/60 Hz)
WUXGA (1920 x 1080/60 Hz)	WUXGA (1920 x 1080/60 Hz)

Audio input format HDMI: Linear PCM, 24 bits/48 kHz, 2 ch


Setting the Output Format

Here's how to specify the output format as appropriate for the device that's connected.


NOTE

If the display does not support the V-02HD's output format, the image might not be shown correctly.

1. [MENU] button → "VIDEO OUTPUT" → select "SCALING."

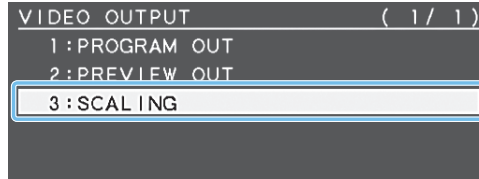

2. Use the [VALUE] knob to select "FORMAT."

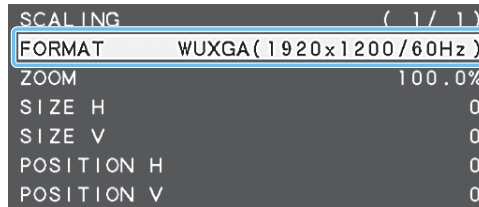

3. Use the [VALUE] knob to set the output format.
4. Press the [VALUE] knob to confirm.
The output format switches.
5. Press the [MENU] button several times to close the menu.

Specifying the Input Format (EDID)

With the factory settings, EDID is set to "INTERNAL" (the unit transmits EDID information for all formats that it is able to input).


Change this setting if you want EDID information for a specific input format to be sent to a source device.

What is EDID?


EDID is data that is transmitted from the V-02HD to the source device when the V-02HD is connected to a source device. EDID contains data such as the formats that can be input to the V-02HD (resolution, color space, color depth) and audio information.

Based on the EDID information that the source device receives, it will output the most appropriate video format to the V-02HD.

1. [MENU] button → "VIDEO INPUT" → select "INPUT 1" or "INPUT 2."

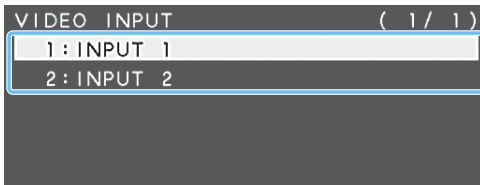

2. Use the [VALUE] knob to select "EDID."

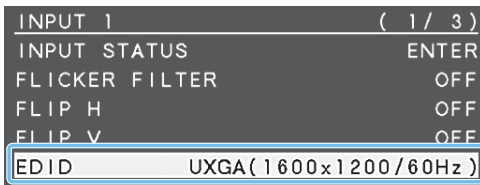


3. Use the [VALUE] knob to set the input format (EDID).
4. Press the [VALUE] knob to confirm.
The input format (EDID) switches.
5. Press the [MENU] button several times to close the menu.


Adjusting Output Video

Here's how to adjust the output image appropriately for the device that's receiving the V-02HD's output.

1. [MENU] button → "VIDEO OUTPUT" → select "PROGRAM OUT" or "PREVIEW OUT."

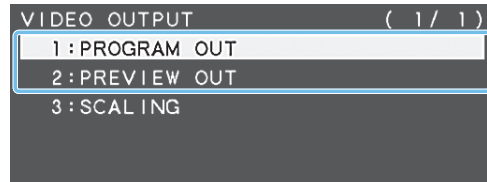

2. Use the [VALUE] knob to select a menu item.

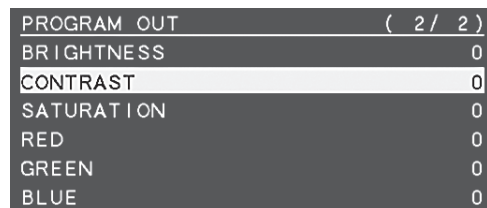

Menu item	Explanation
COLOR SPACE	Specifies the color space (system for representing colors in video).
DVI-D/HDMI SIGNAL	Specifies the output mode for HDMI output.
BRIGHTNESS	Adjusts the brightness.
CONTRAST	Adjusts the contrast.
SATURATION	Adjusts the saturation.
RED	Adjusts the red level.
GREEN	Adjusts the green level.
BLUE	Adjusts the blue level.

3. Use the [VALUE] knob to change the value, and press the [VALUE] knob to confirm.
4. Repeat steps 2–3 as necessary.
5. Press the [MENU] button several times to close the menu.


MEMO

You can output a test pattern, useful for adjusting the image quality of a display. Use the SYSTEM menu item "TEST PATTERN" to specify the test pattern that is output.


Adjusting the Input Video

Here's how to adjust the character and scaling of the video that's input to INPUT 1 and 2.

1. [MENU] button → "VIDEO INPUT" → select "INPUT 1" or "INPUT 2."

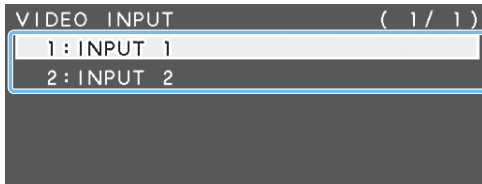

2. Use the [VALUE] knob to select a menu item.

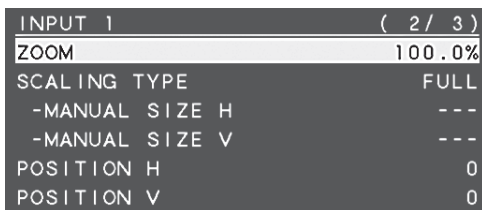

Menu item	Explanation
FLICKER FILTER	If this is "ON," flickering is reduced.
FLIP H	If this is "ON," the video is input with left and right flipped.
FLIP V	If this is "ON," the video is input with top and bottom flipped.
ZOOM	Adjusts the zoom ratio.
SCALING TYPE	Specifies the scaling type.
MANUAL SIZE H (*1)	Adjusts the horizontal size.
MANUAL SIZE V (*1)	Adjusts the vertical size.
POSITION H	Adjusts the display position in the horizontal direction.
POSITION V	Adjusts the display position in the vertical direction.
BRIGHTNESS	Adjusts the brightness.
CONTRAST	Adjusts the contrast.
SATURATION	Adjusts the saturation.
RED	Adjusts the red level.
GREEN	Adjusts the green level.
BLUE	Adjusts the blue level.

(*1) This is valid when "SCALING TYPE" is set to "MANUAL."


3. Use the [VALUE] knob to change the value, and press the [VALUE] knob to confirm.
4. Repeat steps 2–3 as necessary.
5. Press the [MENU] button several times to close the menu.

Outputting the Program Video from the PREVIEW OUT Connector


Here's how you can output the program video to the display that's connected to the PREVIEW OUT connector.

This can be useful in situations such as live distribution, since the same video as seen by the viewers can be shown on a different display that is used by the performers to monitor themselves.

1. [MENU] button → "VIDEO OUTPUT" → select "PREVIEW OUT."

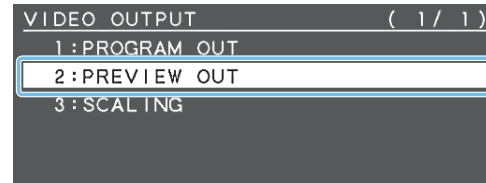

2. Use the [VALUE] knob to select "OUTPUT ASSIGN."

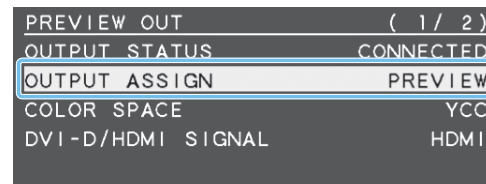

3. Use the [VALUE] knob to set it to "PROGRAM."

Menu item	Explanation
PROGRAM	Output the program video.
PREVIEW	Output the preview video (standby video).

4. Press the [VALUE] knob to confirm.
5. Press the [MENU] button several times to close the menu.

Inputting Copy-Protected (HDCP) Video


If you want to input HDCP-protected video from a BD player or other device, you can enable HDCP input.

* If you want to output HDCP-protected video, connect an HDCP-capable display.

What's HDCP?

HDCP is copyright-protection technology that prevents unlawful copying of content by encoding the path when sending digital signals from a video playback device to a display monitor or other display equipment.

1. [MENU] button → "SYSTEM" → select "HDCP."

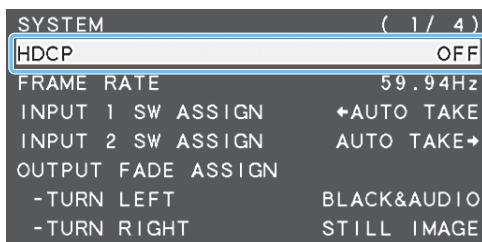

2. Use the [VALUE] knob to set it to "ON."

Value	Explanation
ON	HDCP-protected video can be input. HDCP is applied to the output video.
OFF	HDCP-protected video cannot be input.

3. Press the [VALUE] knob to confirm.


4. Press the [MENU] button several times to close the menu.

Video Operations

Using Mix/Wipe to Switch Video (MIX/WIPE)

Here's how to switch between input video while applying an effect, and output the program.

1. Press the [TYPE] button several times to select the transition effect (MIX, WIPE).

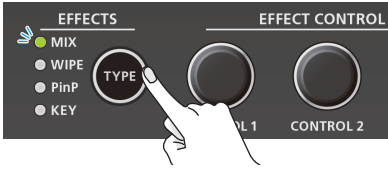

The MIX or WIPE indicator is lit.

Transition effects	Explanation
MIX	The two videos are mixed as the transition occurs.
WIPE	The next video moves across to replace the original video.

<Using the buttons to switch>

2. Press the button [1] or [2] that is lit green.

Lit red: Program output video
 Lit green: Preview output video (standby video)



The button you press blinks red, and the video switches.
 When the video has switched completely, the lit state (red, green) of buttons [1] [2] is exchanged.

MEMO

- **Video transition time**
 If you use the buttons to switch video, the transition occurs over a pre-specified time. To specify the video transition time, set the TRANSITION menu item "MIX/WIPE TIME."
- **Functions of the [1] [2] buttons**
 You can assign other functions to the [1] [2] buttons, such as Cut (instant transition). To specify this, set the SYSTEM menu items "INPUT 1 SW ASSIGN" and "INPUT 2 SW ASSIGN."
 * These settings are effectively only if mix/wipe are selected as the video effect.

<Using the fader to switch>

2. Slide the video fader to the far left or far right.

The transition indicator for the video that is the program output is lit. Slide the fader toward the side that is not lit.



The video is switched according to the movement of the video fader.
 When the video has switched completely, the lit state (red, green) of buttons [1] [2] is exchanged.

MEMO

Depending on the timing at which you switch the video effect, the position of the video fader might differ from the actual output. If you operate the video fader in this state, the output does not change until the position of the video fader matches the actual output.

Changing the mix/wipe pattern

You can use the MIX/WIPE menu to specify the pattern by which the mix/wipe occurs and the direction of the wipe.

Menu item	Explanation
MIX TYPE	Specifies the transition pattern for mix.
WIPE TYPE	Specifies the transition pattern for wipe.
WIPE DIRECTION	Specifies the direction of wipe.
WIPE BORDER COLOR	Specifies the color of the border added to the edge of the wipe area.
WIPE BORDER WIDTH	Specifies the width of the border added to the edge of the wipe area.

You can also use the [CONTROL 1] [CONTROL 2] knobs to change the settings of the MIX/WIPE menu.

When mix is selected

[CONTROL 1] knob: Pattern of the mix transition

When wipe is selected

[CONTROL 1] knob

Turn: Pattern of the wipe transition

Turn while pressing: Color of the border added to the periphery of the wipe

[CONTROL 2] knob

Turn: Direction of wipe


Turn while pressing: Width of the border added to the periphery of the wipe

Using Picture-In-Picture to Composite Video (PinP)

Here's how to composite an inset screen (a small separate screen) onto the background video.




1. Press the [TYPE] button several times to select PinP.

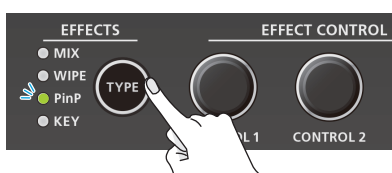

The PinP indicator is lit green, and the inset screen is shown in the preview output video (standby video).

You can check the position and size of the inset screen that will be composited before outputting the program.

2. Press the [1] button (lit yellow) to select the background video and the inset screen.

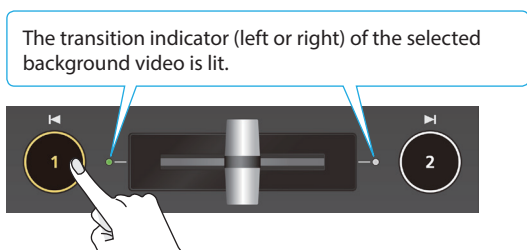

Each time you press the [1] button, the background video and the inset screen video that are output as the preview will alternate.

* When the background video alternates with the inset screen video, a black screen momentarily appears in the output video.

3. Use the [CONTROL 1] [CONTROL 2] knobs to adjust the inset screen.



[CONTROL 1] knob

Turn: Horizontal display position of the inset screen
Turn while pressing: Size of the inset screen (zoom)

[CONTROL 2] knob

Turn: Vertical display position of the inset screen
Turn while pressing: Zoom ratio of the inset screen

4. Press the [2] button.



The inset screen is composited with the background video, and output as the program. The [2] button is lit red.

When you press the [2] button once again, the [2] button goes dark and the inset screen disappears.

MEMO

- The fade time over which the inset screen appears or disappears when you press the [2] button is specified by the setting of the TRANSITION menu item "PinP TIME."
- You can also use the video fader to show or hide the inset screen.
- If a video composited by PinP is being output as the program, the PinP indicator is lit red.
- You can make the composited result be immediately sent from program output when selecting PinP in step 1. Set the PinP menu item "PinP PROGRAM OUT MODE" to "AUTO."

Making detailed settings for the inset screen

You can use the PinP menu to specify the shape and size of the inset screen, and the color of the border that is added to the inset screen.

Menu item	Explanation
WINDOW	Use the following items to adjust the inset screen.
POSITION H	Adjusts horizontal display position.
POSITION V	Adjusts vertical display position
SIZE	Adjusts the size (zoom).
CROPPING H	Adjusts the horizontal size.
CROPPING V	Adjusts the vertical size.
SHAPE	Specifies the shape (rectangle, circle, diamond).
BORDER COLOR	Specifies the color of the border.
BORDER WIDTH	Adjusts the width of the border.
VIEW	Use the following items to adjust the video that is shown in the inset screen.
POSITION H	Adjusts the horizontal position.
POSITION V	Adjusts the vertical position.
ZOOM	Adjusts the zoom.

Using a Key to Composite Video (KEY)

Here's how you can turn a portion of the video transparent and composite it with the background video. You can use luminance key with either a black or a white background, or a chroma key with either a blue or green background.

Compositing a Logo or Image (Luminance Key)


You can cut out a logo or image by turning its black or white portion transparent, and then superimpose it on the background video.



Specifying the source and key type for the logo or image

Specify the source of the logo or image that you want to superimpose, and specify the key type used for compositing.

1. [MENU] button → "KEY" → select "KEY SOURCE" or "KEY TYPE."

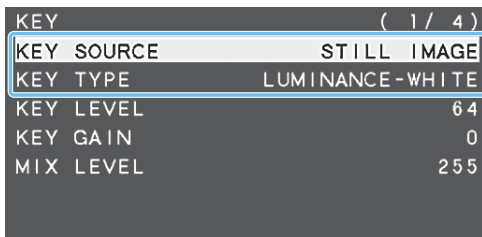

2. Use the [VALUE] knob to change the value, and press the [VALUE] knob to confirm.

●KEY SOURCE

Select the source of the logo or image that you want to superimpose.

Value	Explanation
INPUT 1, 2	The video of INPUT 1 or 2
STILL IMAGE	A captured still image (p. 20)

●KEY TYPE


Choose "LUMINANCE-WHITE" or "LUMINANCE-BLACK."

Value	Explanation
LUMINANCE-WHITE	Composite using luminance key. Makes white portions transparent according to brightness.
LUMINANCE-BLACK	Composite using luminance key. Makes black portions transparent according to brightness.
CHROMA	Composite using chroma key. Makes the specified key color transparent according to hue.

3. Press the [MENU] button several times to close the menu.


Compositing using luminance key

1. Press the [TYPE] button several times to select KEY.

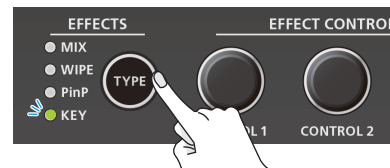

The KEY indicator is lit green, and the composition results is shown in the preview output video (standby video). You can check the key-composited logo or image before you output to program.

2. Press the [1] button to select the video of either INPUT 1 or 2 as the background.

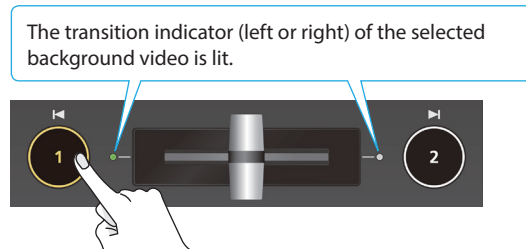

Each time you press the [1] button, the background video being output as the preview will switch.

3. Use the [CONTROL 1] [CONTROL 2] knobs to adjust the depth of the effect that is applied.



[CONTROL 1] knob

Adjusts the degree of extraction for the key.

[CONTROL 2] knob

Adjusts the degree of edge blur for the key.

4. Press the [2] button.



The composited result is output as the program. While it is output as the program, the [2] button and the KEY indicator are lit red. When you press the [2] button once again, the [2] button goes dark and the logo or image disappears.

MEMO

- The fade time over which the logo/image appears or disappears when you press the [2] button is specified by the setting of the TRANSITION menu item "KEY TIME."
- You can also use the video fader to show or hide the logo/image.
- You can make the composited result be immediately sent from program output when selecting KEY in step 1. Set the KEY menu item "KEY PROGRAM OUT MODE" to "AUTO."

Modifying the logo or image


When using key compositing, you can fill-in the superimposed logo or image, or add an edge to it. Make these settings in the following KEY menu.

* These settings are shared with chroma key.

Menu item	Explanation
FILL TYPE	If this is set to "MATTE," the superimposed logo or image is filled-in with the specified color.
MATTE COLOR	The fill-in color is specified by "MATTE COLOR."
EDGE TYPE	Specifies the type of edge.
EDGE COLOR	Specifies the color of the edge.
EDGE WIDTH	Specifies the width of the edge.

Compositing a Subject and Background (Chroma Key)

You can cut out a video by turning its blue or green portion transparent, and then superimpose it on the background video. This lets you composite a subject that's photographed against a blue background or green background.

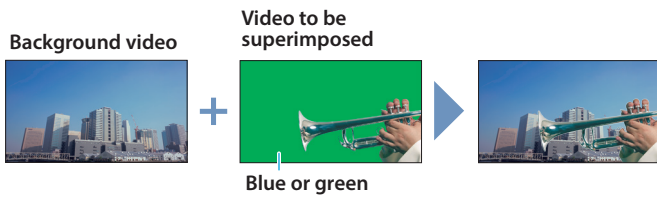

Specifying the source and key type for the video

Specify the source and key type for the video that you want to superimpose.

1. [MENU] button → "KEY" → select "KEY SOURCE," "KEY TYPE," or "COLOR."

KEY	(1 / 4)
KEY SOURCE	STILL IMAGE
KEY TYPE	LUMINANCE - WHITE
KEY LEVEL	64
KEY GAIN	0
MIX LEVEL	255

KEY	(2 / 4)
CHROMA	
COLOR	BLUE
HUE WIDTH	0
HUE FINE	240
SATURATION WIDTH	0
SATURATION FINE	0

2. Use the [VALUE] knob to change the value, and press the [VALUE] knob to confirm.

● KEY SOURCE

Select the source of the video that you want to superimpose.

Value	Explanation
INPUT 1, 2	The video of INPUT 1 or 2
STILL IMAGE	A captured still image (p. 20)

● KEY TYPE

Set to "CHROMA."

Value	Explanation
LUMINANCE-WHITE	Composite using luminance key. Makes white portions transparent according to brightness.
LUMINANCE-BLACK	Composite using luminance key. Makes black portions transparent according to brightness.
CHROMA	Composite using chroma key. Makes the specified key color transparent according to hue.


● COLOR

Specify either "GREEN" or "BLUE" as the key color for chroma key (the color to be removed).

3. Press the [MENU] button several times to close the menu.

Compositing using chroma key


1. Press the [TYPE] button several times to select KEY.

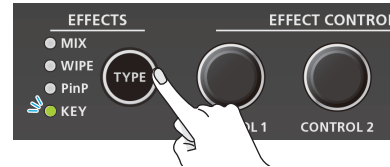

The KEY indicator is lit green, and the composition results is shown in the preview output video (standby video). You can check the key-composited video before you output to program.

2. Press the [1] button to select the video of either INPUT 1 or 2 as the background.

The transition indicator (left or right) of the selected background video is lit.

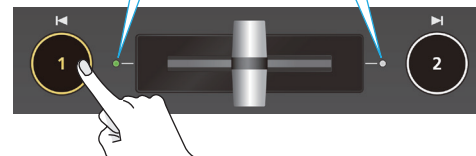

Each time you press the [1] button, the background video being output as the preview will switch.

3. Use the [CONTROL 1] [CONTROL 2] knobs to adjust the depth of the effect that is applied.



[CONTROL 1] knob

Adjusts the degree of extraction for the key.

[CONTROL 2] knob

Adjusts the degree of edge blur for the key.

4. Press the [2] button.



The composited result is output as the program. While it is output as the program, the [2] button and the KEY indicator are lit red. When you press the [2] button once again, the [2] button goes dark and the superimposed video disappears.

MEMO

- The fade time with which the video superimposed by the [2] button appears or disappears is specified by the TRANSITION menu item "KEY TIME."
- You can also reveal or hide the superimposed video by operating the video fader.
- You can make the composited result be immediately sent from program output when selecting KEY in step 1. Set the KEY menu item "KEY PROGRAM OUT MODE" to "AUTO."

Finely adjusting the key color (removed color)

You can use the following KEY menu to make fine adjustments to the key color (the color that is removed).

Menu item	Explanation
CHROMA	Use the following items to make fine adjustments to the key color.
HUE WIDTH	Adjusts the hue width.
HUE FINE	Adjusts the center position of the hue.
SATURATION WIDTH	Adjusts the saturation width.
SATURATION FINE	This adjusts the center position of saturation.

Modifying the superimposed video

When using key compositing, you can fill-in the superimposed video, or add an edge to it. Make these settings in the following KEY menu.

* These settings are shared with luminance key.


Menu item	Explanation
FILL TYPE	If this is set to "MATTE," the superimposed video is filled-in with the specified color.
MATTE COLOR	The fill-in color is specified by "MATTE COLOR."
EDGE TYPE	Specifies the type of edge.
EDGE COLOR	Specifies the color of the edge.
EDGE WIDTH	Specifies the width of the edge.

To specify a desired color as the key color (sampling marker)

You can specify the key color to be made transparent simply by sampling (detecting) a color from the video. (This is called the sampling marker function.) You can also specify a key color other than green or blue.

To use the sampling marker function, set the KEY menu item "KEY TYPE" to "CHROMA," and use the [TYPE] button to select "KEY."

1. [MENU] button → "KEY" → select "SAMPLING MARKER."

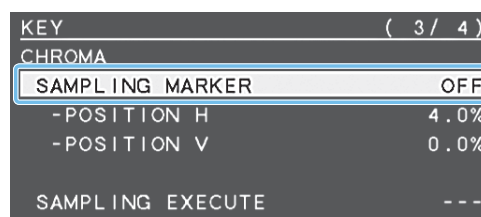

2. Use the [VALUE] knob to set it to "ON."

The sampling marker () for sampling (detecting) the key color appears in the preview output video.

3. Press the [VALUE] knob to confirm.

4. Use the [CONTROL 1] [CONTROL 2] knobs to adjust the position of the sampling marker.



[CONTROL 1] knob

Adjusts the horizontal position.

[CONTROL 2] knob

Adjusts the vertical position.

5. Use the [VALUE] knob to select "SAMPLING EXECUTE."

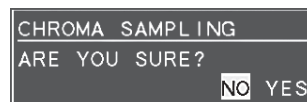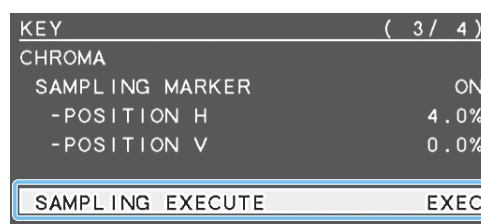

A recognition message appears.

If you want to cancel the operation, press the [MENU] button.

6. Use the [VALUE] knob to select "YES," and press the [VALUE] knob.

The key color is sampled.

The "HUE WIDTH," "HUE FINE," "SATURATION WIDTH," and "SATURATION FINE" settings are adjusted automatically.

7. Press the [MENU] button several times to close the menu.

Applying a Visual Effect to the Video (VFX)

Here's how you can apply an effect to the entire video, such as varying the video's color or shape. You can apply a visual effect even while using picture-in-picture (p. 13) or key (p. 14, 16) to composite the video.

Selecting a visual effect

1. [MENU] button → "VFX" → select "VFX TYPE."

VFX	(1 / 2)
VEX	ON
VFX TYPE	PART MOSAIC
CONTROL 1 POSITION H	0.0%
CONTROL 2 POSITION V	0.0%
MIX LEVEL	255

2. Use the [VALUE] knob to select the visual effect.

Value	Explanation
PART MOSAIC	Applies a mosaic to the selected region.
BACKGROUND MOSAIC	Applies a mosaic to the portion outside the selected region.
FULL MOSAIC	Applies a mosaic to the entire screen.
WAVE	Makes the video wavy.
RGB REPLACE	Exchanges the colors.
COLORPASS	Turns the video black and white while preserving a specific color.
NEGATIVE	Inverts the brightness and colors.
COLORIZE	Adds color to the video.
POSTERIZE	Changes the gradations in brightness.
SILHOUETTE	Separates the video into light and dark areas, and makes the dark areas black and adds a different color to the light areas.
EMBOSS	Adds a bas-relief effect to the video.
FIND EDGES	Extracts contours.
MONOCOLOR	Turns the video monochrome.
HUE OFFSET	Changes the visual character by controlling the hue.
SATURATION OFFSET	Changes the visual character by controlling the saturation.
VALUE OFFSET	Changes the visual character by controlling the brightness.

3. Press the [VALUE] knob to confirm.
4. Press the [MENU] button several times to close the menu.


Applying visual effects

1. Send the video on which you want to apply an effect to the program output.
2. Press the [VFX] button to turn on the visual effect (making the button light up).



The visual effect is applied to the program output video.

3. Use the [CONTROL 1] or [CONTROL 2] knob to adjust the degree of effect applied.

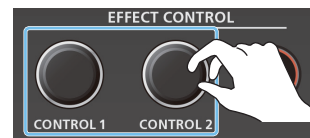

For "PART MOSAIC" and "BACKGROUND MOSAIC," you can adjust the following settings by turning the [CONTROL 1] or [CONTROL 2] knobs while pressing them.

[CONTROL 1] knob: Size of the selected region

[CONTROL 2] knob: Mosaic detail (block size)

MEMO

Settings for the effect that is controlled by the [CONTROL 1] [CONTROL 2] knobs can be checked in the VFX menu.

4. To turn off a visual effect, press the [VFX] button once again.

Applying a Fade to the Program Output Video (Output Fade)

Here's how to perform a fade-out from the program output video to a black screen, or a fade-in from a black screen to the program output video.

You can insert a black screen into the program output video at times where you don't want to output a picture, such as at intervals in presentations or band performances.

* The fade-in/out effect is applied only to the program output.

Applying a Fade-out

1. Turn the [OUTPUT FADE] knob fully counterclockwise.



The program output video fades to a black screen.

When fade is applied, the [OUTPUT FADE] knob indicator blinks red. When the fade-out is complete, the indicator is lit red.

Applying a Fade-in

1. Return the [OUTPUT FADE] knob to the center.

The [OUTPUT FADE] knob indicator goes dark, and program output begins.

MEMO

By changing the function that's assigned to the [OUTPUT FADE] knob, you can fade-in/out using a white screen. Make these settings in the SYSTEM menu items OUTPUT FADE ASSIGN "TURN LEFT" and "TURN RIGHT."

Using a Captured Still Image

A still image captured from the input video can be output in the same way as the video. You can also use it as a source for key compositing (p. 14, 16).

Specifying how the still image is saved

The captured still image can be saved in either of two ways: saved in the unit or temporarily saved in the unit (and deleted when the power turns off). The captured resolution differs depending on the method of saving.

The method of saving the still image is specified by the CAPTURE IMAGE menu settings "SAVE TO INTERNAL STORAGE." Choose the save method as appropriate for the still image that you want to use.

Value	Explanation
DISABLE	The still image is captured at the actual resolution and temporarily saved in the unit. When you turn off the power, the captured still image is deleted. This allows the image to be captured without impairing the image quality. It is suitable for still images that include a logo or small characters.
ENABLE	The still image is captured at a reduced resolution of 640 x 360 and saved in the unit. Since the still image is expanded when it is output, the image quality might be impaired.

MEMO

- The unit can only save one still image (including temporary saving). If a still image is already saved, it is overwritten when you execute a new capture.
- If the still image output function is assigned to the [OUTPUT FADE] knob, the [OUTPUT FADE] knob indicator shows whether a still image exists.



Lit green/red	Unit contains still image When lit red, the still image is being output
Dark	Unit contains no still image

The function of the [OUTPUT FADE] knob is specified by the SYSTEM menu settings OUTPUT FADE ASSIGN "TURN LEFT" and "TURN RIGHT."

- **Regarding copy-protected (HDCP) video**
If you capture a still image from copy-protected (HDCP) video, the resulting still image is treated in the same way as HDCP video. The still image is shown or not shown depending on whether HDCP is on or off (p. 11).

Capturing a still image


Here's how to capture a still image from the input video.

NOTE

- If the CAPTURE IMAGE menu item "SAVE TO INTERNAL STORAGE" is set to "ENABLE" (save still image to unit), it will take approximately 30 seconds for capture to be completed.
- Input stops for the video being captured.


< To capture by operating a button >

1. Press the [TYPE] button several times to select the transition effect (MIX, WIPE).

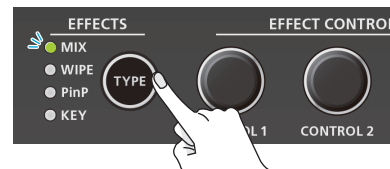

- * You can capture by operating a button only if mix or wipe is selected as the video effect.


2. According to the still image that you want to capture, long-press the [1] or [2] button (three seconds or longer).

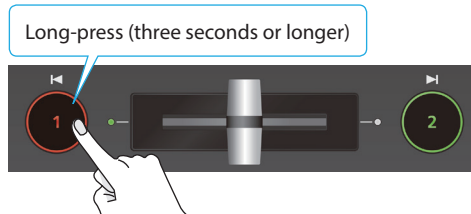

The capture is executed. Input stops for the video that is being captured. When the normal output returns, capture is complete.

< To capture by operating the menu >



1. [MENU] button → “CAPTURE IMAGE” → select “CAPTURE SOURCE.”

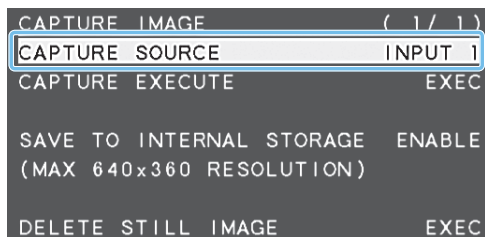

2. Use the [VALUE] knob to select either “INPUT 1” or “INPUT 2” according to the still image that you want to capture.

3. Press the [VALUE] knob to confirm.

4. Use the [VALUE] knob to select “CAPTURE EXECUTE.”

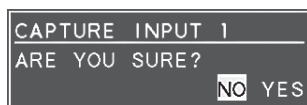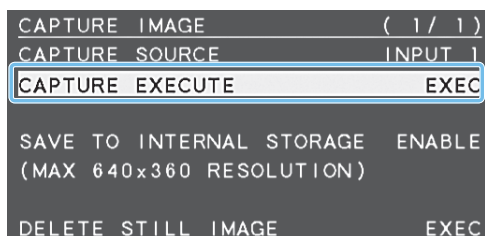

A recognition message appears.

If you want to cancel the operation, press the [MENU] button.

5. Use the [VALUE] knob to select “YES,” and press the [VALUE] knob.

The capture is executed. Input stops for the video that is being captured.


When capture is complete, the message “COMPLETE” appears, and normal output returns.

6. Press the [MENU] button to close the message.

7. Press the [MENU] button several times to close the menu.

Outputting a Still Image

1. Turn the [OUTPUT FADE] knob fully clockwise.

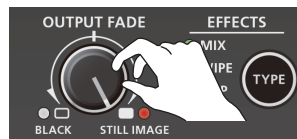

The [OUTPUT FADE] knob indicator is lit red, and the still image is output from preview/program.

- * When outputting the still image, the transition occurs by a cut regardless of the transition effect that is selected.

2. To return to normal video output, return the [OUTPUT FADE] knob to the center.


MEMO

You can also assign other functions to the [OUTPUT FADE] knob. Make settings for the SYSTEM menu items OUTPUT FADE ASSIGN “TURN LEFT” or “TURN RIGHT.”

Deleting a Still Image

Here's how to delete the still image that's saved in the unit.

1. [MENU] button → “CAPTURE IMAGE” → select “DELETE STILL IMAGE.”

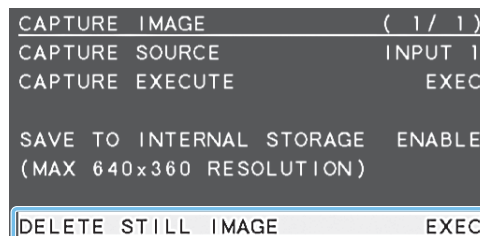

A recognition message appears.

If you want to cancel the operation, press the [MENU] button.

2. Use the [VALUE] knob to select “YES,” and press the [VALUE] knob.

The still image is deleted. When the operation is finished, the message “COMPLETE” appears.

3. Press the [MENU] button to close the message.


4. Press the [MENU] button several times to close the menu.

Audio Operations

Adjusting the Volume Level

Here's how to adjust the volume of the audio input and audio output.

1. [MENU] button → "AUDIO INPUT" → select "INPUT 1," "INPUT 2," or "AUDIO IN."

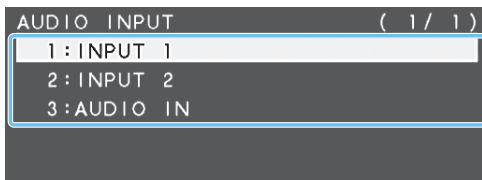

2. Use the [VALUE] knob to select "INPUT LEVEL."



3. Use the [VALUE] knob to adjust the input volume.


Raise the volume level of audio you want to make more prominent, for example, an emcee microphone, and lower the volume level for other audio.

When no audio is input, and for audio that is unused, lower the volume level to minimum (-INF).

4. Press the [VALUE] knob to confirm.

5. Press the [MENU] button twice to return to the MENU screen.

6. Use the [VALUE] knob to select "AUDIO OUTPUT" → "OUTPUT LEVEL."

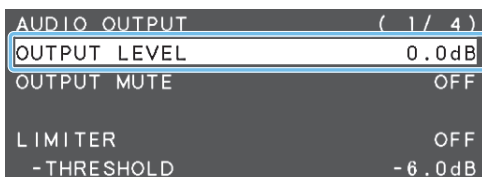


7. Use the [VALUE] knob to adjust the output volume.

8. Press the [MENU] button several times to close the menu.

Level meter indication

An audio level meter is shown at the lower right of the preview display. The level meter illumination lets you check whether the volume is adjusted appropriately.

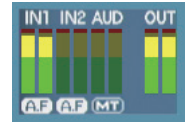

Indicator	Status
Red	Lights up at 0 dB or higher. It indicates an excessive volume level.
Yellow	Lights up at -20 to -1 dB. It indicates an appropriate volume level.
Green	Lights up at -50 to -21 dB. It indicates a too-low volume level.

- * If the volume level of speaker output is unsuitable even when the volume level on the V-02HD has been adjusted so that level meter light up in yellow, adjust the volume for the speakers and amplifiers. Using "OUTPUT LEVEL" to make adjustments can sometimes result in distortion or poorer sound quality.

MEMO

- If you use the [OUTPUT FADE] knob to fade-in/out the program output video (p. 19), the output audio also fades-in/out simultaneously.
- You can change the function that's assigned to the [OUTPUT FADE] knob so that it adjusts only the output volume. Set the SYSTEM menu item OUTPUT FADE ASSIGN "TURN LEFT" or "TURN RIGHT" to "AUDIO."
- You can output a test tone that's convenient when adjusting the volume. In the SYSTEM menu item "TEST TONE," specify the test tone that will be output.

Applying Effects to Input Audio

You can modify the tonal character by applying effects to the audio input.

Using an effect preset


The V-02HD provides effect presets that are appropriate for specific environments. Simply by selecting a preset you can easily apply the appropriate effect for your purpose.

Each preset consists of a combination of three effects (high-pass filter, compressor, equalizer).

MEMO

- When you switch presets, the settings of each effect are overwritten.
 - If you want to make fine adjustments to a preset, use the AUDIO INPUT menu to edit the high-pass filter, compressor, and equalizer settings.
- Since the noise gate (an effect that eliminates noise) is not included in the presets, you'll need to make separate settings for it.
- For details on the effects, refer to "8: AUDIO INPUT" (p. 36).

1. [MENU] button → "AUDIO INPUT" → select "INPUT 1," "INPUT 2," or "AUDIO IN."

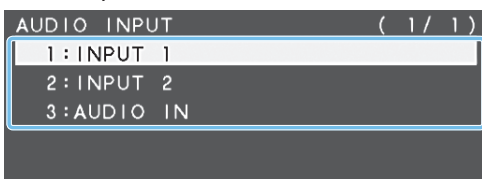

2. Use the [VALUE] knob to select "EFFECT PRESET."



3. Use the [VALUE] knob to select an effect preset.

Value	Explanation
DEFAULT	For line input (default setting)
MEETING	For meetings
INTERVIEW	For interviews
AMBIENT MIC	For capturing ambient sound
WINDY FIELD	For capturing ambient sound in a windy area

4. Press the [VALUE] knob to confirm.

A recognition message appears.



If you want to cancel the operation, press the [MENU] button.

5. Use the [VALUE] knob to select "OK," and press the [VALUE] knob.

The preset is loaded. When the operation is finished, the message "COMPLETE" appears.


6. Press the [MENU] button to close the message.

7. Press the [MENU] button several times to close the menu.


Correcting a time difference between video and audio (delay)

Here's how you can correct a time difference between the video and audio by delaying the output of the input audio.

1. [MENU] button → "AUDIO INPUT" → select "INPUT 1," "INPUT 2," or "AUDIO IN."

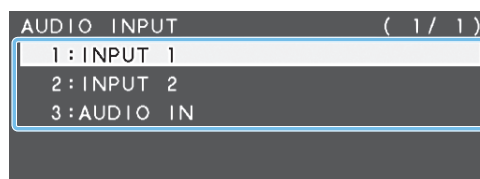

2. Use the [VALUE] knob to select "DELAY."

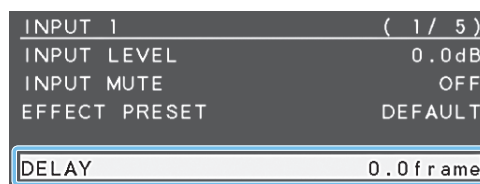

3. Use the [VALUE] knob to adjust the time by which the audio is delayed.


Delay the audio output so that the audio and video match.

4. Press the [MENU] button several times to close the menu.

Applying Effects to Output Audio

You can modify the tonal character by applying effects to the audio output.

1. [MENU] button → “AUDIO OUTPUT” → select an effect menu item.

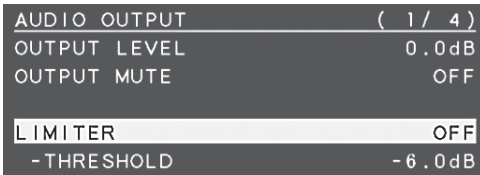

* For details on the effects, refer to the following items.

2. Use the [VALUE] knob to change the value, and press the [VALUE] knob to confirm.
3. Press the [MENU] button several times to close the menu.

LIMITER

Limits the output volume so that it does not exceed the set level.

Menu item	Explanation
LIMITER	Turns the limiter on/off.
THRESHOLD	Adjusts the level that becomes the threshold at which the limiter is applied. Compression is applied to audio that exceeds the threshold. The volume level of audio that is output is limited so as to stay below the threshold.

EQUALIZER

Adjusts the sound quality for each frequency band.

Menu item	Explanation
EQUALIZER	Turns the equalizer on/off.
Hi GAIN	Boosts or attenuates the high band.
Hi FREQUENCY	Adjusts the center frequency when changing the tone quality in the high band.
Mid GAIN	Boosts or attenuates the middle band.
Mid FREQUENCY	Adjusts the center frequency when changing the tone quality in the middle band.
Mid Q	Adjusts the width of the frequency band when boosting or attenuating the middle band.
Lo GAIN	Boosts or attenuates the low band.
Lo FREQUENCY	Adjusts the center frequency when changing the tone quality in the low band.

MULTI BAND COMPRESSOR

Applies separate compressors in individual frequency band.


Menu item	Explanation
MULTI BAND COMPRESSOR	Turns the multi-band compressor on/off.
Hi THRESHOLD	Specify the individual levels that become the thresholds for the high, midrange, and low bands at which the compressor is applied. Compression is applied to audio that exceeds the threshold.
Mid THRESHOLD	
Lo THRESHOLD	
Hi RATIO	Specify the amount of compression applied in the high, midrange, and low bands. The state in which no compression is applied is defined as “1.”
Mid RATIO	
Lo RATIO	

Silencing Only Specific Audio (Mute)

Here’s how to temporarily silence specific input audio or output audio (the mute function).

Muting input audio

1. [MENU] button → “AUDIO INPUT” → select “INPUT 1,” “INPUT 2,” or “AUDIO IN.”

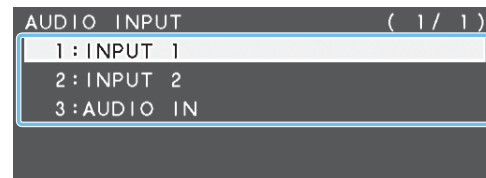


2. Use the [VALUE] knob to select “INPUT MUTE.”



3. Use the [VALUE] knob to set it to “ON.”
To cancel muting, specify “OFF.”
4. Press the [VALUE] knob to confirm.
5. Press the [MENU] button several times to close the menu.

Muting output audio

1. [MENU] button → “AUDIO OUTPUT” → select “OUTPUT MUTE.”

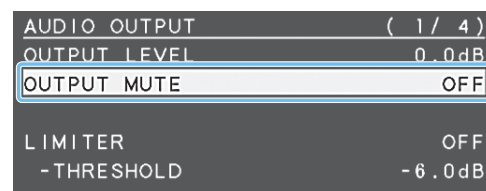


2. Use the [VALUE] knob to set it to “ON.”
To cancel muting, specify “OFF.”
3. Press the [VALUE] knob to confirm.
4. Press the [MENU] button several times to close the menu.

MEMO

The level meter shown at the lower right of the preview display indicates the mute setting.

The “MT” symbol is shown to indicate audio for which muting is on.

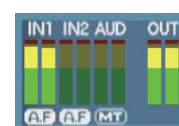

Interlinking Audio Output to Video Switching (Audio Follow)

Here's how the audio output can be automatically switched in tandem with video switching (the audio follow function). When you switch video, only the audio of the currently selected input video is output, and the audio of the other input video is automatically muted.

1. As described in "Adjusting the Volume Level" (p. 22), adjust the output volume as desired.
2. [MENU] button → "AUDIO FOLLOW" → select "INPUT 1" or "INPUT 2."



3. Use the [VALUE] knob to set it to "ON."


Value	Explanation
ON	Enables the Audio Follow feature. The audio of only the selected input video is output, and the audio of the other input video is automatically muted.
OFF	Disables the Audio Follow feature.

4. Press the [VALUE] knob to confirm.
5. Press the [MENU] button several times to close the menu.

MEMO

The level meter shown at the lower right of the preview display indicates the audio follow setting.

The "A.F" symbol is shown to indicate audio for which audio follow is on.

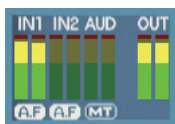

Applying audio follow to the audio from AUDIO IN

1. [MENU] button → "AUDIO FOLLOW" → select "AUDIO IN."



2. Use the [VALUE] knob to specify "INPUT 1" or "INPUT 2."

Value	Explanation
INPUT 1, 2	Specifies the input video (either INPUT 1 or 2) that uses audio follow for the audio of AUDIO IN. The audio of AUDIO IN is output only when the specified input video is selected.
OFF	The audio of AUDIO IN is always output regardless of the input video that's selected.

3. Press the [VALUE] knob to confirm.
4. Press the [MENU] button several times to close the menu.

Other Features

Saving/Recalling Settings (Preset Memory)


You can save the current settings, including the video/audio settings and the state of the operating panel, in preset memory and recall those settings for use when necessary. The V-02HD is provided with eight preset memories.

About the last memory function

The V-02HD has a built-in Last Memory feature. Last Memory is a feature that saves the state of the unit that is in effect immediately before power-down, and automatically restores the state at the next startup. The Last Memory feature is enabled by default. If you want the unit to recall a specific preset memory when it starts up, use the PRESET MEMORY menu item "START UP" to specify the preset memory number.


Saving to a preset memory

1. [MENU] button → "PRESET MEMORY" → select "SAVE."

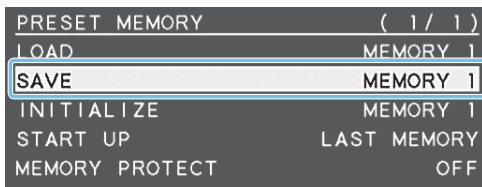

2. Use the [VALUE] knob to specify the save-destination preset memory number (1–8), and press the [VALUE] knob.

A recognition message appears.



If you want to cancel the operation, press the [MENU] button.


3. Use the [VALUE] knob to select "YES," and press the [VALUE] knob.
The current settings are saved. When the operation is finished, the message "COMPLETE" appears.
4. Press the [MENU] button to close the message.
5. Press the [MENU] button several times to close the menu.

MEMO

- By setting the PRESET MEMORY menu item "MEMORY PROTECT" to "ON," you can protect the preset memory from being overwritten.
- The state of the [PHONES] knob (headphone volume) is not saved in preset memory.
- The following settings are common to the unit (one set for the entire unit), and therefore are not saved in preset memory.
 - PRESET MEMORY menu
 - CTL/EXP menu
 - CAPTURE IMAGE menu
 - SYSTEM menu

Recalling a preset memory

1. [MENU] button → "PRESET MEMORY" → select "LOAD."

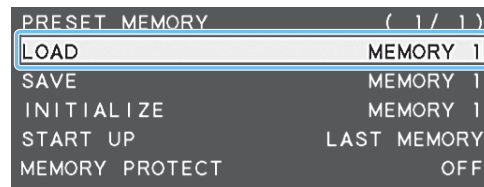

2. Use the [VALUE] knob to select the preset memory number (1–8) that you want to recall, and press the [VALUE] knob.

A recognition message appears.


If you want to cancel the operation, press the [MENU] button.

3. Use the [VALUE] knob to select "YES," and press the [VALUE] knob.
The settings are recalled. When the operation is finished, the message "COMPLETE" appears.
4. Press the [MENU] button to close the message.
5. Press the [MENU] button several times to close the menu.

Initializing a preset memory

Here's how you can initialize the settings of a specific preset memory to the factory-set condition.

1. [MENU] button → "PRESET MEMORY" → select "INITIALIZE."

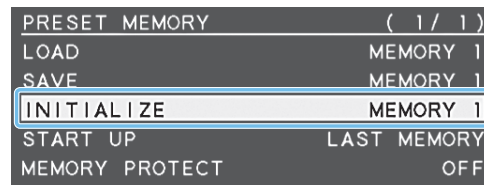

2. Use the [VALUE] knob to select the preset memory number (1–8) that you want to initialize, and press the [VALUE] knob.

A recognition message appears.


If you want to cancel the operation, press the [MENU] button.

3. Use the [VALUE] knob to select "YES," and press the [VALUE] knob.
The preset memory is initialized. When the operation is finished, the message "COMPLETE" appears.
4. Press the [MENU] button to close the message.
5. Press the [MENU] button several times to close the menu.

Using a Footswitch

You can use a footswitch connected to the V-02HD to control the V-02HD with your foot. You can assign various functions to the footswitch.


1. [MENU] button → “CTL/EXP” → select “CTL/EXP TYPE.”

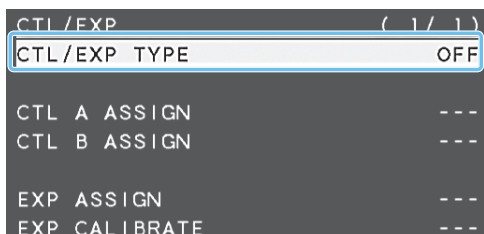

2. Use the [VALUE] knob to specify “CTL A & CTL B” (footswitch) as the device that’s connected to the CTL/EXP jack.

3. Press the [VALUE] knob to confirm.

4. Use the [VALUE] knob to select “CTL A ASSIGN” or “CTL B ASSIGN.”

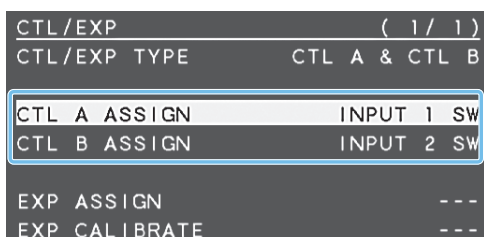

5. Use the [VALUE] knob to select the function that you want to assign to CTL A or CTL B of the footswitch.

Value	Explanation
N/A	No function is assigned.
EFFECT TYPE SW	Presses the [TYPE] button.
EFFECT MIX	Switches the video effect to mix (MIX).
EFFECT WIPE	Switches the video effect to wipe (WIPE).
EFFECT PinP	Switches the video effect to Picture in Picture (PinP).
EFFECT KEY	Switches the video effect to key (KEY).
VFX SW	Turns the [VFX] button on/off.
INPUT 1 SW	Presses the [1] button.
INPUT 2 SW	Presses the [2] button.
← AUTO TAKE →	Switches the video between INPUT 1 and 2.
← CUT →	Switches the video between INPUT 1 and 2 as a cut.
STILL IMAGE	Switches between still image output and normal output.
INPUT 1 AUDIO MUTE	Turns the mute function on/off for INPUT 1 audio.
INPUT 2 AUDIO MUTE	Turns the mute function on/off for INPUT 2 audio.
AUDIO IN AUDIO MUTE	Turns the mute function on/off for AUDIO IN audio.
AUDIO OUTPUT MUTE	Turns on/off the mute function for output audio.
OUTPUT FADE LEFT	Switches the [OUTPUT FADE] knob position (center / turned fully counter-clockwise).
OUTPUT FADE RIGHT	Switches the [OUTPUT FADE] knob position (center / turned fully clockwise).
LOAD MEMORY 1-8	Recalls MEMORY 1-8.

6. Press the [VALUE] knob to confirm.

7. Press the [MENU] button several times to close the menu.

MEMO

If a single-pedal type footswitch such as the BOSS FS-5U is connected using a phone cable (mono), the function assigned by “CTL B ASSIGN” is enabled.

NOTE

The BOSS FS-6’s jacks A, B, and A&B also act as the power switch. The power turns on when you insert a plug into the jack, and turns off when you remove the plug.

To prevent the batteries from running down, remove the plugs from the jacks when you’re not using the BOSS FS-6.

Using an Expression Pedal


You can use an expression pedal connected to the V-02HD to control the V-02HD with your foot.

Adjusting the pedal (pedal calibration)

The first time you use an expression pedal, you must calibrate (adjust) the pedal so that it will operate optimally.


In some cases, an expression pedal might no longer operate optimally due to the passage of time or changes in the operating conditions. If you notice problems such as slight movements of the pedal causing a major change in volume, or if the video fails to switch when you press the pedal, you should execute calibration.

1. [MENU] button → “CTL/EXP” → select “CTL/EXP TYPE.”

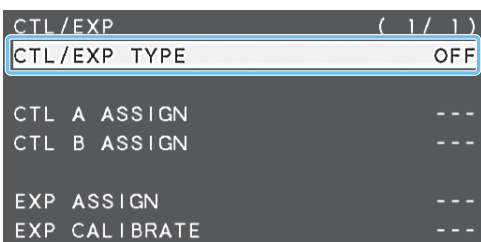


2. Use the [VALUE] knob to specify “EXP” (expression pedal) as the device that’s connected to the CTL/EXP jack.
3. Press the [VALUE] knob to confirm.
4. Use the [VALUE] knob to select “EXP CALIBRATE.”

The EXP CALIBRATE screen appears.

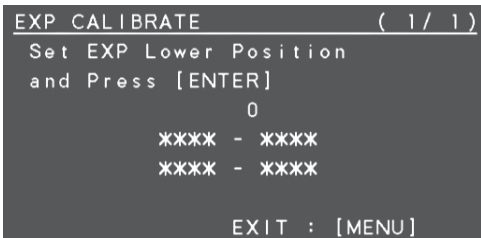

5. As directed by the screen, step on the pedal in the fully heel-down position, and press the [VALUE] knob.
6. As directed by the screen, step on the pedal in the fully toe-down position, and press the [VALUE] knob.

When the “Complete” indication appears, calibration is completed.

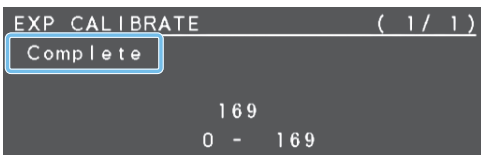

7. Press the [MENU] button several times to close the menu.

MEMO


You should normally use the EV-5 with its minimum volume knob left in the zero position.

* If you change the position of the minimum volume knob, you must execute pedal calibration.


Assigning a function to the pedal

You can assign various functions to the expression pedal.

1. [MENU] button → “CTL/EXP” → select “CTL/EXP TYPE.”

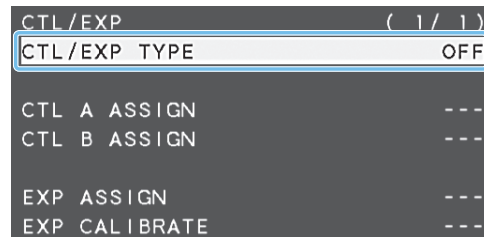

2. Use the [VALUE] knob to specify “EXP” (expression pedal) as the device that’s connected to the CTL/EXP jack.
3. Press the [VALUE] knob to confirm.
4. Use the [VALUE] knob to select “EXP ASSIGN.”

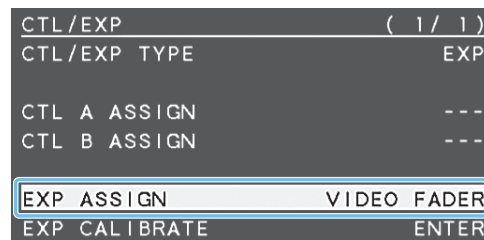

5. Use the [VALUE] knob to select the function that you want to assign to the expression pedal.



Value	Explanation
N/A	No function is assigned.
VIDEO FADER	Slides the video fader to the left edge or right edge.
← CUT →	Switches (cuts) between the video being input to INPUT 1 and 2.
VFX MIX LEVEL	Adjusts the density (output level) of the video that is processed by the visual effect.
OUTPUT FADE LEFT	Switches the [OUTPUT FADE] knob position (center / turned fully counter-clockwise).
OUTPUT FADE RIGHT	Switches the [OUTPUT FADE] knob position (center / turned fully clockwise).
STILL IMAGE	Switches between still image output and normal output.
INPUT 1 AUDIO LEVEL	Adjusts the volume of INPUT 1.
INPUT 2 AUDIO LEVEL	Adjusts the volume of INPUT 2.
AUDIO IN AUDIO LEVEL	Adjusts the volume of AUDIO IN.
AUDIO OUTPUT LEVEL	Adjusts the output volume.

6. Press the [VALUE] knob to confirm.
7. Press the [MENU] button several times to close the menu.

Preventing Unintended Operation (Panel Lock)

Here's how you can lock the V-02HD's buttons and knobs to prevent unintended operation.

1. [MENU] button → "SYSTEM" → select "PANEL LOCK."

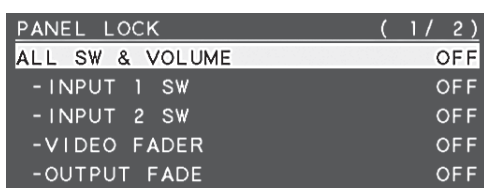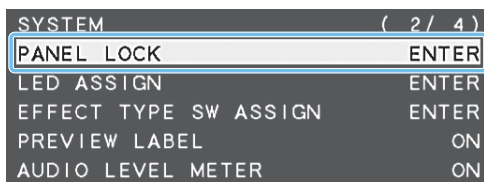

The PANEL LOCK menu appears.

2. Use the [VALUE] knob to select a target for panel lock.

Menu item	Explanation
ALL SW & VOLUME	The settings of the following buttons and knobs are turned on/off together.
INPUT 1 SW	[1] button
INPUT 2 SW	[2] button
VIDEO FADER	Video fader
OUTPUT FADE	[OUTPUT FADE] knob
VFX SW	[VFX] button
EFFECT TYPE SW	[TYPE] button
CONTROL 1 ENCODER	[CONTROL 1] knob
CONTROL 2 ENCODER	[CONTROL 2] knob

3. Use the [VALUE] knob to specify whether panel lock is applied (ON) or not applied (OFF).
4. Press the [VALUE] knob to confirm.
5. Repeat steps 2–4 as necessary.
6. Press the [MENU] button several times to close the menu.



Returning to the Factory Settings (Factory Reset)

Here's how you can return the settings of the V-02HD to their factory-set state. If following the procedures described in this manual does not cause the result you expect, try executing a factory reset.

NOTE

- When you execute factory reset, any previously specified content, any settings saved in preset memory (p. 26), and the still image (p. 20) saved in the unit will all be lost.
- It takes approximately 40 seconds for factory reset to be completed. Do not turn off the power while the "PLEASE WAIT" message is shown.

1. [MENU] button → "SYSTEM" → select "FACTORY RESET."

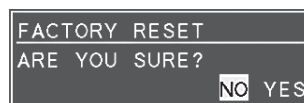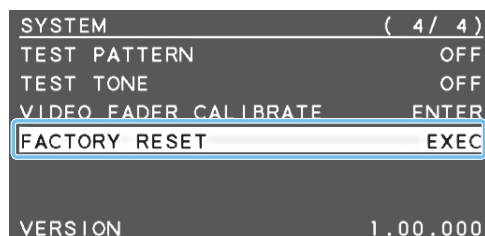

A recognition message appears.

If you want to cancel the operation, press the [MENU] button.


2. Use the [VALUE] knob to select "YES," and press the [VALUE] knob.
 Factory reset is executed. When the operation is finished, the message "COMPLETE" appears.
3. Press the [MENU] button to close the message.
4. Press the [MENU] button several times to close the menu.

MEMO

If the sample material was overwritten by still image capture (p. 20), the sample material returns to its original state when you execute factory reset.

Menu List

Pressing the [MENU] button makes the menu appear on the display connected to the PREVIEW OUT connector.

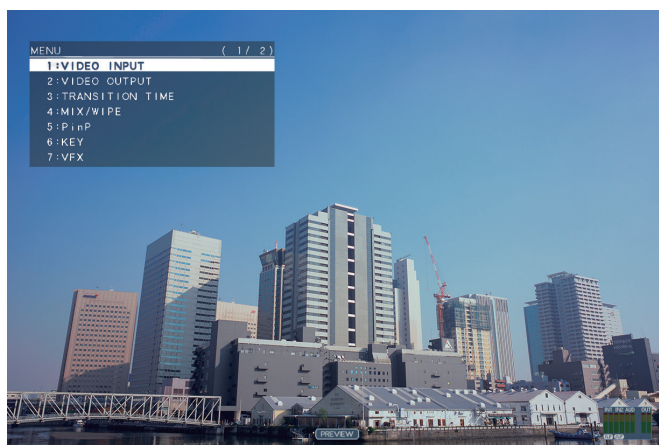

MEMO

- By turning the [VALUE] knob while pressing it, you can change the value more greatly.
- Long-pressing the [VALUE] knob returns the current menu item you're setting to its default value.

1: VIDEO INPUT

Menu item	Value (bold text: default value)	Explanation
INPUT 1, 2	Adjusts the image that is input from the INPUT 1 and 2 connectors.	
INPUT STATUS	(ENTER)	Displays information about the incoming video (format, size, etc.).
FLICKER FILTER	OFF , ON	If this is "ON," flickering is reduced.
FLIP H	OFF , ON	If this is "ON," the video is input with left and right flipped.
FLIP V	OFF , ON	If this is "ON," the video is input with top and bottom flipped.
EDID	INTERNAL SVGA (800 x 600) XGA (1024 x 768) WXGA (1280 x 800) FWXG (1366 x 768) SXGA (1280 x 1024) SXGA+ (1400 x 1050) UXGA (1600 x 1200) WUXGA (1920 x 1200) 720p 1080i 1080p	Specifies the input format (EDID). If this is "INTERNAL," EDID information for all formats that can be input to the V-02HD will be transmitted. What is EDID? EDID is data that is transmitted from the V-02HD to the source device when the V-02HD is connected to a source device. EDID contains data such as the formats that can be input to the V-02HD (resolution, color space, color depth) and audio information. Based on the EDID information that the source device receives, it will output the most appropriate video format to the V-02HD.
ZOOM	10.0– 100.0 –1000.0% (*1)	Adjusts the zoom ratio.
SCALING TYPE	Specifies the scaling type.	
	FULL	Always displays the picture expanded to full screen, irrespective of the aspect ratio of the input video.
	LETTERBOX	Enlarges or reduces the incoming video to a full-screen view while keeping the aspect ratio unchanged.
	CROP	Enlarges or reduces the incoming video so that the output picture has no blank margins while keeping the aspect ratio unchanged. Video extending beyond the borders is cut off.
	DOT BY DOT	Performs no scaling.
	MANUAL	Scale according to the "MANUAL SIZE H" and "MANUAL SIZE V" settings below.
MANUAL SIZE H (*2)	-2000– 0 –2000 (*1)	Adjusts the horizontal size.
MANUAL SIZE V (*2)	-2000– 0 –2000 (*1)	Adjusts the vertical size.
POSITION H	-1920– 0 –1920	Adjusts the display position in the horizontal direction.
POSITION V	-1200– 0 –1200	Adjusts the display position in the vertical direction.
BRIGHTNESS	-64– 0 –63	Adjusts the brightness.
CONTRAST	-64– 0 –63	Adjusts the contrast.
SATURATION	-64– 0 –63	Adjusts the saturation.
RED	-64– 0 –63	Adjusts the red level.
GREEN	-64– 0 –63	Adjusts the green level.
BLUE	-64– 0 –63	Adjusts the blue level.

(*1) The valid range of setting values depends on conditions such as the input/output format.

(*2) This is valid when "SCALING TYPE" is set to "MANUAL."

2: VIDEO OUTPUT










Menu item	Value (bold text: default value)	Explanation
PROGRAM OUT	Adjusts the program output video (the video that is output from the PROGRAM OUT connector).	
OUTPUT STATUS	—	Displays information about the output video (format and presence or absence of an HDCP signal). When no connection is in effect, "NOT CONNECTED" is displayed.
COLOR SPACE	YCC , RGB (0–255), RGB (16–235)	Specifies the color space (system for representing colors in video).
DVI-D/HDMI SIGNAL	DVI-D, HDMI	Specifies the output mode for HDMI output.
BRIGHTNESS	-64– 0 –63	Adjusts the brightness.
CONTRAST	-64– 0 –63	Adjusts the contrast.
SATURATION	-64– 0 –63	Adjusts the saturation.
RED	-64– 0 –63	Adjusts the red level.
GREEN	-64– 0 –63	Adjusts the green level.
BLUE	-64– 0 –63	Adjusts the blue level.
PREVIEW OUT	Adjusts the preview output video (the video that is output from the PREVIEW OUT connector).	
OUTPUT STATUS	—	Displays information about the output video (format and presence or absence of an HDCP signal).
OUTPUT ASSIGN	Specifies the video that is output from the PREVIEW OUT connector.	
	PROGRAM	Output the program video.
	PREVIEW	Output the preview video (standby video).
COLOR SPACE	YCC , RGB (0–255), RGB (16–235)	Specifies the color space (system for representing colors in video).
DVI-D/HDMI SIGNAL	DVI-D, HDMI	Specifies the output mode for HDMI output.
BRIGHTNESS	-64– 0 –63	Adjusts the brightness.
CONTRAST	-64– 0 –63	Adjusts the contrast.
SATURATION	-64– 0 –63	Adjusts the saturation.
RED	-64– 0 –63	Adjusts the red level.
GREEN	-64– 0 –63	Adjusts the green level.
BLUE	-64– 0 –63	Adjusts the blue level.
SCALING	Adjusts the output format settings, and the position and size of the output video.	
FORMAT	480/576p 720p 1080i 1080p SVGA (800 x 600) XGA (1024 x 768) WXGA (1280 x 800) FWXG (1366 x 768) SXGA (1280 x 1024) SXGA+ (1400 x 1050) UXGA (1600 x 1200) WUXGA (1920 x 1200)	Specifies the output format. * A change in the setting is not applied until you press the [VALUE] knob to confirm.
ZOOM	10.0– 100.0 –1000%	Adjusts the zoom ratio.
SIZE H	-2000– 0 –2000 (*3)	Adjusts the horizontal size.
SIZE V	-2000– 0 –2000 (*3)	Adjusts the vertical size.
POSITION H	-1920– 0 –1920	Adjusts the display position in the horizontal direction.
POSITION V	-1200– 0 –1200	Adjusts the display position in the vertical direction.

(*3) The valid range of setting values depends on conditions such as the input/output format.

3: TRANSITION TIME

Menu item	Value (bold text: default value)	Explanation
MIX/WIPE TIME	0.0– 1.0 –4.0sec	Specifies the video transition time.
PinP TIME	0.0– 1.0 –4.0sec	Specifies the fade time with which the inset screen appears or disappears when using Picture in Picture (PinP) compositing.
KEY TIME	0.0– 1.0 –4.0sec	Specifies the fade time with which the superimposed logo or video appears or disappears when using luminance key or chroma key compositing.




4: MIX/WIPE

Menu item	Value (bold text: default value)	Explanation
MIX TYPE	Specifies the transition pattern for mix.	
	MIX	The two videos are mixed as the transition occurs.
	FAM	Video transitions are made with the luminance levels of the two video streams maintained unchanged. This is an abbreviation of "full additive mix."
	NAM	The two video streams are compared, and transitions are made with display during transition starting with levels of high luminance. This is an abbreviation of "non-additive mix."
WIPE TYPE	Specifies the transition pattern for wipe.	
	HORIZONTAL	
	VERTICAL	
	UPPER LEFT	
	UPPER RIGHT	
	LOWER LEFT	
	LOWER RIGHT	
H-CENTER		
V-CENTER		
BOX		
WIPE DIRECTION	NORMAL , REVERSE, ROUND TRIP	Specifies the direction of wipe.
WIPE BORDER COLOR	WHITE , YELLOW, CYAN, GREEN, MAGENTA, RED, BLUE, BLACK, SOFTEDGE	Specifies the color of the border added to the edge of the wipe area. If this is set to "SOFTEDGE," the wipe border is blurred.
WIPE BORDER WIDTH	0– 2 –15	Specifies the width of the border added to the edge of the wipe area.

5: PinP

Menu item	Value (bold text: default value)	Explanation
WINDOW	Adjusts the inset screen.	
POSITION H	-50.0– -40.0 –50.0%	Adjusts the horizontal display position of the inset screen.
POSITION V	-50.0– -40.0 –50.0%	Adjusts the vertical display position of the inset screen.
SIZE	10.0– 35.0 –100.0%	Adjusts the size (zoom) of the inset screen.
CROPPING H	0.0– 100.0%	Adjusts the horizontal size of the inset screen.
CROPPING V	0.0– 100.0%	Adjusts the vertical size of the inset screen.
SHAPE	RECTANGLE , CIRCLE, DIAMOND	Specifies the shape of the inset screen.
BORDER COLOR	WHITE , YELLOW, CYAN, GREEN, MAGENTA, RED, BLUE, BLACK, SOFTEDGE	Specifies the color of the border for the inset screen. If this is set to "SOFTEDGE," the edge of the inset screen is blurred.
BORDER WIDTH	0– 1 –15	Adjusts the width of the border for the inset screen.
VIEW	Adjusts the video that is shown in the inset screen.	
POSITION H	-50.0– 0.0 –50.0%	Adjusts the horizontal position at which the inset screen is shown.
POSITION V	-50.0– 0.0 –50.0%	Adjusts the vertical position at which the inset screen is shown.
ZOOM	100.0 –1000.0%	Adjusts the zoom of the inset screen.
PinP PROGRAM OUT MODE	Specifies how the unit operates immediately after the [TYPE] button selects "PinP" (Picture in Picture).	
	MANUAL	The composited result is sent to preview output. This lets you check the position and size of the inset screen before sending it to program output.
	AUTO	The composited result is sent to program output.

6: KEY

Menu item	Value (bold text: default value)	Explanation
KEY SOURCE	Specifies the source of the logo or video that is overlaid when using key compositing.	
	INPUT 1, 2	The video of INPUT 1 or 2
	STILL IMAGE	A captured still image
KEY TYPE	Specifies the key type used during key composition.	
	LUMINANCE-WHITE	Makes white portions transparent according to brightness.
	LUMINANCE-BLACK	Makes black portions transparent according to brightness.
	CHROMA	Makes the specified key color transparent according to hue.
KEY LEVEL	0- 64 -255	Adjusts the degree of extraction (transparency) for the key.
KEY GAIN	0 -255	Adjusts the degree of edge blur (semi-transmissive region) for the key.
MIX LEVEL	0- 255	Adjusts the key's overall density (output level).
CHROMA	Make detailed settings for chroma key.	
COLOR (*4)	GREEN , BLUE	Specifies green or blue as the key color (the color to be removed). If you want a color other than green or blue to turn transparent, use "SAMPLING MARKER" to specify the key color.
HUE WIDTH (*4)	-30- 0 -30	Adjusts the hue width for the key color.
HUE FINE (*4)	0- 120 -360	Adjusts the center position of the hue for the key color.
SATURATION WIDTH (*4)	-30- 0 -30	Adjusts the saturation width for the key color.
SATURATION FINE (*4)	0 -255	This adjusts the center position of saturation for the key color.
SAMPLING MARKER (*5)	OFF , ON	If this is "ON," a sampling marker () is shown on the preview output video for you to sample (detect) the key color. When you execute sampling, the setting automatically turns "OFF."
POSITION H (*5)	-100.0- -25.0 -100.0%	Adjusts the horizontal position of the sampling marker (). You can use the [CONTROL 1] knob to adjust this.
POSITION V (*5)	-100.0- -25.0 -100.0%	Adjusts the vertical position of the sampling marker (). You can use the [CONTROL 2] knob to adjust this.
SAMPLING EXECUTE (*6)	(EXEC)	Executes key color sampling. The "HUE WIDTH," "HUE FINE," "SATURATION WIDTH," and "SATURATION FINE" settings are adjusted automatically.
FILL TYPE	BUS , MATTE	If this is "MATTE," the superimposed logo or video is filled-in with the specified color when using key compositing. The fill-in color is specified by "MATTE COLOR" below.
MATTE COLOR (*7)	WHITE, YELLOW, CYAN, GREEN, MAGENTA, RED , BLUE, BLACK	Specifies the color used when filling-in the superimposed logo or video.
EDGE TYPE	OFF , BORDER, DROP, SHADOW, OUTLINE	Specifies the type of edge applied to the superimposed logo or video.
EDGE COLOR	WHITE, YELLOW, CYAN, GREEN, MAGENTA, RED, BLUE, BLACK	Specifies the color of the edge applied to the superimposed logo or video.
EDGE WIDTH	0- 4 -15	Specifies the width of the edge applied to the superimposed logo or video.
KEY PROGRAM OUT MODE	Specifies how the unit operates immediately after the [TYPE] button selects "KEY."	
	MANUAL	The composited result is sent to preview output. This lets you check the superimposed logo or video before sending it to the program output.
	AUTO	The composited result is sent to program output.

(*4) This is valid when "KEY TYPE" is set to "CHROMA."

(*5) This is valid when "KEY TYPE" is set to "CHROMA" and the [TYPE] button has selected "KEY."

(*6) This is valid when "SAMPLING MARKER" is set to "ON."

(*7) This is valid when "FILL TYPE" is set to "MATTE."

7: VFX

The menu items named “CONTROL 1–” and “CONTROL 2–” for each visual effect can be controlled by the [CONTROL 1] and [CONTROL 2] knobs when the visual effect is on.

Menu item	Value (bold text: default value)	Explanation
VFX	OFF , ON	Turns the visual effect on/off. You can also use the [VFX] button to turn this on/off.
VFX TYPE	PART MOSAIC , BACKGROUND MOSAIC, FULL MOSAIC, WAVE, RGB REPLACE, COLORPASS, NEGATIVE, COLORIZE, POSTERIZE, SILHOUETTE, EMBOSS, FIND EDGES, MONOCOLOR, HUE OFFSET, SATURATION OFFSET, VALUE OFFSET	Specifies the visual effect. * The menu items are different for each visual effect.

VFX TYPE = PART MOSAIC (Applies a mosaic to the selected region.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 POSITION H	-100.0– 0.0 –100.0%	Adjusts the horizontal position of the selected area.
CONTROL 2 POSITION V	-100.0– 0.0 –100.0%	Adjusts the vertical position of the selected area.
MIX LEVEL	0– 255	Adjusts the intensity (output level) of the video with the visual effect applied.
AREA SIZE	10.0– 40.0 –100.0%	Adjusts the size (zoom) of the selected area. When the visual effect is on, you can adjust this by turning the [CONTROL 1] knob while pressing it.
CORRECTION H	-2000– 0 –2000	Adjusts the horizontal size of the selected area.
CORRECTION V	-2000– 0 –2000	Adjusts the vertical size of the selected area.
BLOCK SIZE	OFF (1x1), 4 x 4, 8 x 8, 16 x 16, 32 x 32, 64 x 64 , 128 x 128, 256 x 256	Specifies the fineness (block size) of the mosaic. When the visual effect is on, you can adjust this by turning the [CONTROL 2] knob while pressing it.

VFX TYPE = BACKGROUND MOSAIC (Applies a mosaic to the portion outside the selected region.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 POSITION H	-100.0– 0.0 –100.0%	Adjusts the horizontal position of the selected area.
CONTROL 2 POSITION V	-100.0– 0.0 –100.0%	Adjusts the vertical position of the selected area.
MIX LEVEL	0– 255	Adjusts the intensity (output level) of the video with the visual effect applied.
AREA SIZE	10.0– 40.0 –100.0%	Adjusts the size (zoom) of the selected area. When the visual effect is on, you can adjust this by turning the [CONTROL 1] knob while pressing it.
CORRECTION H	-2000– 0 –2000	Adjusts the horizontal size of the selected area.
CORRECTION V	-2000– 0 –2000	Adjusts the vertical size of the selected area.
BLOCK SIZE	OFF (1x1), 4 x 4, 8 x 8, 16 x 16, 32 x 32, 64 x 64 , 128 x 128, 256 x 256	Specifies the fineness (block size) of the mosaic. When the visual effect is on, you can adjust this by turning the [CONTROL 2] knob while pressing it.

VFX TYPE = FULL MOSAIC (Applies a mosaic to the entire screen.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 BLOCK SIZE	OFF (1x1), 4 x 4, 8 x 8, 16 x 16, 32 x 32, 64 x 64 , 128 x 128, 256 x 256	Specifies the fineness (block size) of the mosaic.
CONTROL 2 N/A	- - - (no settings)	—
MIX LEVEL	0– 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = WAVE (Makes the video wavy.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 GAIN	0– 127 –255	Adjust the height of the waves.
CONTROL 2 TYPE	1– 4 –7	Specifies the number of waves.
MIX LEVEL	0– 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = RGB REPLACE (Exchanges the colors.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 TYPE	OFF (R.G.B), B.R.G , G.B.R, R.B.G, G.R.B, B.G.R	Specifies the type of RGB replace.
CONTROL 2 N/A	--- (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = COLOR PASS (Turns the video black and white while preserving a specific color.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 TYPE	1- 42 -63	Specifies the type of color pass.
CONTROL 2 N/A	--- (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = NEGATIVE (Inverts the brightness and colors.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 TYPE	Cr, Cb, CbCr, Y , YCr, YCb, YCbCr	Specifies the type of negative.
CONTROL 2 N/A	--- (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = COLORIZE (Adds color to the video.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 TYPE	1-8	Specifies the type of colorize.
CONTROL 2 N/A	--- (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = POSTERIZE (Changes the gradations in brightness.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 LEVEL	1- 3 -4	Specifies the gradation level for brightness.
CONTROL 2 N/A	--- (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = SILHOUETTE (Separates the video into light and dark areas, and makes the dark areas black and adds a different color to the light areas.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 LEVEL	1-128	Specifies the hue to be colorized.
CONTROL 2 N/A	--- (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = EMBOSS (Adds a bas-relief effect to the video.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 TYPE	1-128	Specifies the type of emboss.
CONTROL 2 CONTRAST	0-15	Adjusts the contrast.
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = FIND EDGES (Extracts contours.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 FG COLOR	0-15	Specifies the color of the edge.
CONTROL 2 BG COLOR	0- 3 -15	Specifies the color of the background.
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = MONOCOLOR (Turns the video monochrome.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 Pb COLOR	0-63	Adjusts the blue component.
CONTROL 2 Pr COLOR	0-63	Adjusts the red component.
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = HUE OFFSET (Changes the visual character by controlling the hue.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 VALUE	0- 180 -359	Specifies the reference value for hue.
CONTROL 2 N/A	- - - (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = SATURATION OFFSET (Changes the visual character by controlling the saturation.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 FG COLOR	-255- 0 -255	Specifies the reference value for saturation.
CONTROL 2 N/A	- - - (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

VFX TYPE = VALUE OFFSET (Changes the visual character by controlling the brightness.)

Menu item	Value (bold text: default value)	Explanation
CONTROL 1 FG COLOR	-255- 0 -255	Specifies the reference value for brightness.
CONTROL 2 N/A	- - - (no settings)	—
MIX LEVEL	0- 255	Adjusts the intensity (output level) of the video with the visual effect applied.

8: AUDIO INPUT

Menu item	Value (bold text: default value)	Explanation	
INPUT 1, 2	Adjusts the audio that is input from the INPUT 1 and 2 connectors.		
INPUT LEVEL	-INF- 0.0 -10.0dB	Adjusts the input volume.	
INPUT MUTE	OFF , ON	Turns the mute function on/off. If this is "ON," the input audio is temporarily silenced.	
EFFECT PRESET	Specifies an effect preset (high-pass filter, compressor, equalizer). * When you change a preset, the settings of each effect are overwritten.		
	DEFAULT	For line input (default setting)	
	MEETING	For meetings	
	INTERVIEW	For interviews	
	WINDY FIELD	For capturing ambient sound in a windy area	
DELAY	0.0 -3.0frame	Adjusts the delay time of the audio. Effect Outputs audio with a delay.	
HIGHT PASS FILTER 75Hz	OFF , ON	Turns the high-pass filter on/off. Effect Cuts off unneeded low-band audio. The cutoff frequency is 75 Hz.	
NOISE GATE	OFF , ON		
	Turns the noise gate on/off. Effect Mutes audio that is below a specified level.		
	THRESHOLD	-80.0- -50.0 -0.0dB	Specifies the level used as the threshold for removing audio. Audio below the level set here is removed.
RELEASE	30- 860 -5000ms	Adjusts the length of time until the audio is fully attenuated after audio falls below the threshold.	
COMPRESSOR	OFF , ON		
	Turns the compressor on/off. Effect This compresses audio that exceeds a specified level.		
	THRESHOLD	-80.0- -50.0 -0.0dB	Species the level used as the threshold at which the compressor is applied. Compression is applied to audio that exceeds the threshold.
	RATIO	1.00 : 1, 1.12 : 1, 1.25 : 1, 1.40 : 1, 1.60 : 1, 1.80 : 1, 2.00 : 1, 2.50 : 1, 3.20 : 1, 4.00 : 1, 5.60 : 1 , 8.00 : 1, 16.0 : 1, INF : 1	Species the degree of compression applied to the audio. The state in which no compression is applied is defined as "1."
	ATTACK	0.2- 1 -100ms	Species the time until compression starts when audio exceeding the threshold is input.
	RELEASE	30- 380 -5000ms	Adjusts the length of time until compression ends after audio falls below the threshold.
AUTO GAIN	Turns the auto makeup gain feature on/off. If this is "ON," the final output volume level after applying the compressor is automatically adjusted according to the "THRESHOLD" and "RATIO" settings. The total of the "MAKEUP GAIN" setting value described below and the value calculated by auto makeup gain becomes the final output volume level (up to +34 dB).		
	MAKEUP GAIN	OFF, ON	
MAKEUP GAIN	-40- 0 -40dB	Adjusts the final output volume level after applying the compressor.	

Menu item	Value (bold text: default value)	Explanation
EQUALIZER	OFF , ON	Turns the equalizer on/off. Effect Adjusts the sound quality for each frequency band.
Hi GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the high band.
Hi FREQUENCY	1.0- 10.0 -20.0kHz	Adjusts the center frequency when changing the tone quality in the high band.
Mid GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the middle band.
Mid FREQUENCY	20.0Hz- 500Hz -20.0kHz	Adjusts the center frequency when changing the tone quality in the middle band.
Mid Q	0.5- 1.0 -16.0	Adjusts the width of the frequency band when boosting or attenuating the middle band.
Lo GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the low band.
Lo FREQUENCY	20.0Hz- 500Hz -20.0kHz	Adjusts the center frequency when changing the tone quality in the low band.
AUDIO IN	Adjusts the audio that is input from the AUDIO IN jack.	
INPUT LEVEL	-INF- 0.0 -10.0dB	Adjusts the input volume.
INPUT MUTE	OFF , ON	Turns the mute function on/off. If this is "ON," the input audio is temporarily silenced.
EFFECT PRESET	Specifies an effect preset (high-pass filter, compressor, equalizer). * When you change a preset, the settings of each effect are overwritten.	
	DEFAULT	For line input (default setting)
	MEETING	For meetings
	INTERVIEW	For interviews
	WINDY FIELD	For capturing ambient sound in a windy area
DELAY	0.0 -3.0frame	Adjusts the delay time of the audio. Effect Outputs audio with a delay.
HIGHT PASS FILTER 75Hz	OFF , ON	Turns the high-pass filter on/off. Effect Cuts off unneeded low-band audio. The cutoff frequency is 75 Hz.
NOISE GATE	OFF , ON	Turns the noise gate on/off. Effect Mutes audio that is below a specified level.
THRESHOLD	-80.0- -50.0 -0.0dB	Specifies the level used as the threshold for removing audio. Audio below the level set here is removed.
RELEASE	30- 860 -5000ms	Adjusts the length of time until the audio is fully attenuated after audio falls below the threshold.
COMPRESSOR	OFF , ON	Turns the compressor on/off. Effect This compresses audio that exceeds a specified level.
THRESHOLD	-80.0- -50.0 -0.0dB	Species the level used as the threshold at which the compressor is applied. Compression is applied to audio that exceeds the threshold.
RATIO	1.00 : 1, 1.12 : 1, 1.25 : 1, 1.40 : 1, 1.60 : 1, 1.80 : 1, 2.00 : 1, 2.50 : 1, 3.20 : 1, 4.00 : 1, 5.60 : 1 , 8.00 : 1, 16.0 : 1, INF : 1	Species the degree of compression applied to the audio. The state in which no compression is applied is defined as "1."
ATTACK	0.2- 1 -100ms	Species the time until compression starts when audio exceeding the threshold is input.
RELEASE	30- 380 -5000ms	Adjusts the length of time until compression ends after audio falls below the threshold.
AUTO GAIN	OFF, ON	Turns the auto makeup gain feature on/off. If this is "ON," the final output volume level after applying the compressor is automatically adjusted according to the "THRESHOLD" and "RATIO" settings. The total of the "MAKEUP GAIN" setting value described below and the value calculated by auto makeup gain becomes the final output volume level (up to +34 dB).
MAKEUP GAIN	-40- 0 -40dB	Adjusts the final output volume level after applying the compressor.
EQUALIZER	OFF , ON	Turns the equalizer on/off. Effect Adjusts the sound quality for each frequency band.
Hi GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the high band.
Hi FREQUENCY	1.0- 10.0 -20.0kHz	Adjusts the center frequency when changing the tone quality in the high band.
Mid GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the middle band.
Mid FREQUENCY	20.0Hz- 500Hz -20.0kHz	Adjusts the center frequency when changing the tone quality in the middle band.
Mid Q	0.5- 1.0 -16.0	Adjusts the width of the frequency band when boosting or attenuating the middle band.
Lo GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the low band.
Lo FREQUENCY	20.0Hz- 500Hz -20.0kHz	Adjusts the center frequency when changing the tone quality in the low band.

9: AUDIO OUTPUT

Menu item	Value (bold text: default value)	Explanation
OUTPUT LEVEL	-INF- 0.0 -10.0dB	Adjusts the output volume.
OUTPUT MUTE	OFF , ON	Turns the mute function on/off. If this is "ON," the output audio is temporarily silenced.
LIMITER	OFF , ON	Turns the limiter on/off. Effect Limits the output volume so that it does not exceed the set level.
THRESHOLD	-40.0- -6.0 -0.0dB	Adjusts the level that becomes the threshold at which the limiter is applied. Compression is applied to audio that exceeds the threshold. The volume level of audio that is output is limited so as to stay below the threshold.
EQUALIZER	OFF , ON	Turns the equalizer on/off. Effect Adjusts the sound quality for each frequency band.
Hi GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the high band.
Hi FREQUENCY	1.0- 10.0 -20.0kHz	Adjusts the center frequency when changing the tone quality in the high band.
Mid GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the middle band.
Mid FREQUENCY	20.0Hz- 500Hz - 20.0kHz	Adjusts the center frequency when changing the tone quality in the middle band.
Mid Q	0.5- 1.0 -16.0	Adjusts the width of the frequency band when boosting or attenuating the middle band.
Lo GAIN	-15.0- 0.0 -15.0dB	Boosts or attenuates the low band.
Lo FREQUENCY	20.0Hz- 500Hz -20.0kHz	Adjusts the center frequency when changing the tone quality in the low band.
MULTI BAND COMPRESSOR	OFF , ON	Turns the multi-band compressor on/off. Effect Applies separate compressors in individual frequency band
Hi THRESHOLD	-40.0- -20.0 -0.0dB	Specifies the threshold level at which the compressor is applied to the high band. Compression is applied to audio that exceeds the threshold.
Hi RATIO	1.00 : 1, 1.12 : 1, 1.25 : 1, 1.40 : 1, 1.60 : 1, 1.80 : 1, 2.00 : 1, 2.50 : 1, 3.20 : 1 , 4.00 : 1, 5.60 : 1, 8.00 : 1, 16.0 : 1, INF : 1	Specifies the amount of compression applied in the high band. The state in which no compression is applied is defined as "1."
Mid THRESHOLD	-40.0- -16.0 -0.0dB	Specifies the threshold level at which the compressor is applied to the middle band. Compression is applied to audio that exceeds the threshold.
Mid RATIO	1.00 : 1, 1.12 : 1, 1.25 : 1, 1.40 : 1, 1.60 : 1, 1.80 : 1, 2.00 : 1, 2.50 : 1 , 3.20 : 1, 4.00 : 1, 5.60 : 1, 8.00 : 1, 16.0 : 1, INF : 1	Specifies the amount of compression applied in the middle band. The state in which no compression is applied is defined as "1."
Lo THRESHOLD	-40.0- -20.0 -0.0dB	Specifies the threshold level at which the compressor is applied to the low band. Compression is applied to audio that exceeds the threshold.
Lo RATIO	1.00 : 1, 1.12 : 1, 1.25 : 1, 1.40 : 1, 1.60 : 1, 1.80 : 1, 2.00 : 1, 2.50 : 1, 3.20 : 1 , 4.00 : 1, 5.60 : 1, 8.00 : 1, 16.0 : 1, INF : 1	Specifies the amount of compression applied in the low band. The state in which no compression is applied is defined as "1."

10: AUDIO FOLLOW

Menu item	Value (bold text: default value)	Explanation
INPUT 1	OFF, ON	Turns the audio follow function on/off. Audio follow is a function that automatically switches the audio output in tandem with video switching.
INPUT 2	OFF, ON	If this is "ON," only the audio of the selected input video is output, and audio of the other input video is automatically muted.
AUDIO IN	OFF , INPUT 1, INPUT 2	Specifies the input video (either INPUT 1 or 2) that uses audio follow for the audio of AUDIO IN. The audio of AUDIO IN is output only when the specified input video is selected. If this is "OFF," the audio of AUDIO IN is always output regardless of the input video selection.

11: PRESET MEMORY

Menu item	Value (bold text: default value)	Explanation
LOAD	MEMORY 1–8	Selects the preset memory to load. Pressing the [VALUE] knob lets you load the preset memory.
SAVE	MEMORY 1–8	Selects a preset memory for saving settings. Pressing the [VALUE] knob lets you save the settings to the preset memory. * The state of the [PHONES] knob (headphone volume) is not saved in preset memory. * The following settings are common to the unit (one set for the entire unit), and therefore are not saved in preset memory. <ul style="list-style-type: none"> • PRESET MEMORY menu • CTL/EXP menu • CAPTURE IMAGE menu • SYSTEM menu
INITIALIZE	MEMORY 1–8	Selects the preset memory to be initialized. Press the [VALUE] knob to initialize the preset memory.
START UP	Specifies the settings loaded at startup.	
	LAST MEMORY	Restores the state that was in effect immediately before the power was turned off (Last Memory feature). The current settings (Last Memory values) are saved every 4 seconds, and when you exit a menu.
	MEMORY 1–8	Recall the settings at the selected memory number.
MEMORY PROTECT	OFF , ON	If this is "ON," the preset memories are protected, and settings cannot be saved to them.

12: CTL/EXP

Menu item	Value (bold text: default value)	Explanation
CTL/EXP TYPE		Specifies the device (footswitch, expression pedal) that is connected to the CTL/EXP jack.
	OFF	Disables the CTL/EXP jack.
	CTL A & CTL B	Choose this if a footswitch is connected.
	EXP	Choose this if an expression pedal is connected.
CTL A ASSIGN (*8) CTL B ASSIGN (*8)		Specifies the functions that are assigned to CTL A and CTL B of the footswitch.
	N/A	No function is assigned.
	EFFECT TYPE SW	Presses the [TYPE] button.
	EFFECT MIX	Switches the video effect to mix (MIX).
	EFFECT WIPE	Switches the video effect to wipe (WIPE).
	EFFECT PinP	Switches the video effect to Picture in Picture (PinP).
	EFFECT KEY	Switches the video effect to key (KEY).
	VFX SW	Turns the [VFX] button on/off.
	INPUT 1 SW	Presses the [1] button.
	INPUT 2 SW	Presses the [2] button.
	← AUTO TAKE →	Switches the video between INPUT 1 and 2.
	← CUT →	Switches the video between INPUT 1 and 2 as a cut.
	STILL IMAGE	Switches between still image output and normal output.
	INPUT 1 AUDIO MUTE	Turns the mute function on/off for INPUT 1 audio.
	INPUT 2 AUDIO MUTE	Turns the mute function on/off for INPUT 2 audio.
	AUDIO IN AUDIO MUTE	Turns the mute function on/off for AUDIO IN audio.
	AUDIO OUTPUT MUTE	Turns on/off the mute function for output audio.
	OUTPUT FADE LEFT	Switches the [OUTPUT FADE] knob position (center / turned fully counter-clockwise).
	OUTPUT FADE RIGHT	Switches the [OUTPUT FADE] knob position (center / turned fully clockwise).
LOAD MEMORY 1–8	Recalls MEMORY 1–8.	
EXP ASSIGN (*9)		Specifies the function that is assigned to the expression pedal.
	N/A	No function is assigned.
	VIDEO FADER	Slides the video fader to the left edge or right edge.
	← CUT →	Switches (cuts) between the video being input to INPUT 1 and 2.
	VFX MIX LEVEL	Adjusts the density (output level) of the video that is processed by the visual effect.
	OUTPUT FADE LEFT	Switches the [OUTPUT FADE] knob position (center / turned fully counter-clockwise).
	OUTPUT FADE RIGHT	Switches the [OUTPUT FADE] knob position (center / turned fully clockwise).
	STILL IMAGE	Switches between still image output and normal output.
	INPUT 1 AUDIO LEVEL	Adjusts the volume of INPUT 1.
	INPUT 2 AUDIO LEVEL	Adjusts the volume of INPUT 2.
	AUDIO IN AUDIO LEVEL	Adjusts the volume of AUDIO IN.
AUDIO OUTPUT LEVEL	Adjusts the output volume.	
EXP CALIBRATE (*9)	(ENTER)	<p>Displays the EXP CALIBRATE screen.</p> <p>Following the direction on the screen, calibrate (adjust) the expression pedal.</p> <p>The first time you use the expression pedal, be sure to execute calibration so that the pedal will operate optimally.</p> <p>In some cases, the expression pedal might no longer be operating optimally because of the passage of time or the conditions of use. In such cases you should also execute expression pedal calibration.</p>

(*8) This is valid when "CTL/EXP TYPE" is set to "CTL A & CTL B."

(*9) This is valid when "CTL/EXP TYPE" is set to "EXP."

13: CAPTURE IMAGE

Menu item	Value (bold text: default value)	Explanation
CAPTURE SOURCE	INPUT 1 , INPUT 2	Specifies the input video from which to capture the still image.
CAPTURE EXECUTE	(EXEC)	Capture a still image from the input video.
SAVE TO INTERNAL STORAGE	Specifies how the captured still image is saved. * The unit can only save one still image (including temporary saving). If a still image is already saved, it is overwritten when you execute a new capture.	
	DISABLE	The still image is captured at the actual resolution and temporarily saved in the unit. When you turn off the power, the captured still image is deleted. This allows the image to be captured without impairing the image quality. It is suitable for still images that include a logo or small characters.
	ENABLE	The still image is captured at a reduced resolution of 640 x 360 and saved in the unit. Since the still image is expanded when it is output, the image quality might be impaired.
DELETE STILL IMAGE	(EXEC)	Deletes the still image that is saved in the unit.
	---	Indicates that no still image is saved in the unit.

14: SYSTEM

Menu item	Value (bold text: default value)	Explanation	
HDCP	OFF , ON	Specifies whether HDCP is enabled (ON) or disabled (OFF). When set to "ON," copyright-protected (HDCP) video can be input. HDCP is also added to the video that is output. * A change in the setting is not applied until you press the [VALUE] knob to confirm.	
FRAME RATE	59.94 , 50Hz	Specifies the frame rate. * A change in the setting is not applied until you press the [VALUE] knob to confirm.	
INPUT 1 SW ASSIGN (*10) INPUT 2 SW ASSIGN (*10)	Specify the functions that are assigned to the [1] [2] buttons.		
	← AUTO TAKE (INPUT 1 only) AUTO TAKE → (INPUT 2 only)	The video switches when you press the button to select the input image. The transition time is specified by the TRANSITION menu item "TRANSITION TIME."	
	← AUTO TAKE →	The INPUT 1 and 2 video is switched each time you press the button. The transition time is specified by the TRANSITION menu item "TRANSITION TIME."	
	← CUT (INPUT 1 only) CUT → (INPUT 2 only)	The video is switched as a cut when you press the button to select the input video.	
	← CUT →	The video of INPUT 1 and 2 is switched as a cut each time you press the button.	
OUTPUT FADE ASSIGN	Specify the functions when turning the [OUTPUT FADE] knob counter-clockwise (TURN LEFT) or clockwise (TURN RIGHT).		
TURN LEFT TURN RIGHT	BLACK	The program output video is faded-in/out to a black screen.	
	WHITE	The program output video is faded-in/out to a white screen.	
	STILL IMAGE	When the [OUTPUT FADE] knob is turned all the way, the captured still image is output as a cut to program/preview output. This is the default setting for "TURN RIGHT."	
	CONTRAST	Adjusts the contrast of the program output video.	
	AUDIO	Adjusts the output volume.	
	BLACK&AUDIO	Fades-in/out the program output video and audio simultaneously. The video fades to a black screen. This is the default setting for "TURN LEFT."	
	WHITE&AUDIO	Fades-in/out the program output video and audio simultaneously. The video fades to a white screen.	
	STILL IMAGE&AUDIO	Adjusts the output volume. When the [OUTPUT FADE] knob is turned all the way, the captured still image is output as a cut to preview/program output.	
PANEL LOCK	(ENTER)	Displays the following PANEL LOCK menu.	
	Enable (ON) or disable (OFF) the panel lock.		
	Menu item	Value (bold text: default value)	Explanation
	ALL SW & VOLUME	OFF , ON	The settings of the following buttons and knobs are turned on/off together.
	INPUT 1 SW	OFF , ON	[1] button
	INPUT 2 SW	OFF , ON	[2] button
	VIDEO FADER	OFF , ON	Video fader
	OUTPUT FADE	OFF , ON	[OUTPUT FADE] knob
	VFX SW	OFF , ON	[VFX] button
	EFFECT TYPE SW	OFF , ON	[TYPE] button
CONTROL 1 ENCODER	OFF , ON	[CONTROL 1] knob	
CONTROL 2 ENCODER	OFF , ON	[CONTROL 2] knob	

(*10) This is valid when mix/wipe is selected as the video effect.

Menu item	Value (bold text: default value)	Explanation	
LED ASSIGN	(ENTER)	Displays the following LED ASSIGN menu.	
	Specify the button illumination color, and the lit/unlit state of the buttons and indicators.		
	Menu item	Value (bold text: default value)	Explanation
	Specify the illumination color of the [1] [2] buttons.		
	PROGRAM LED COLOR	RED, GREEN, YELLOW, BLUE, PURPLE, L.BLUE, WHITE	During program output (default: RED)
	PREVIEW LED COLOR		During preview output (default: GREEN)
	BG SELECT COLOR		When selected as the background video for video compositing (default: YELLOW)
	Specify the lit (ON) or unlit (OFF) status of the buttons and indicators.		
	ALL LED	OFF, ON	The settings of the following buttons and knobs are turned on/off together.
	INPUT 1 LED	OFF, ON	[1] button
	INPUT 2 LED	OFF, ON	[2] button
	VIDEO FADER LED	OFF, ON	Transition indicators
	MENU LED	OFF, ON	[MENU] button
	VFX LED	OFF, ON	[VFX] button
EFFECTS LED	OFF, ON	MIX/WIPE/PinP/KEY indicators	
OUTPUT FADE LEFT LED	OFF, ON	Indicator at the left side of the [OUTPUT FADE] knob	
OUTPUT FADE RIGHT LED	OFF, ON	Indicator at the right side of the [OUTPUT FADE] knob	
EFFECT TYPE SW ASSIGN	(ENTER)	Displays the following EFFECT TYPE SW ASSIGN menu.	
	Enables (ENABLE) or disables (DISABLE) the video effect. If this is set to "DISABLE," the effect cannot be selected by the [TYPE] button.		
	Menu item	Value (bold text: default value)	Explanation
	MIX	DISABLE, ENABLE	Switching effect: mix
	WIPE	DISABLE, ENABLE	Switching effect: wipe
	PinP	DISABLE, ENABLE	Compositing effect: picture in picture
KEY	DISABLE, ENABLE	Compositing effect: key	
PREVIEW LABEL	OFF, ON	If this is "ON," a PREVIEW label is shown on the preview display.	
AUDIO LEVEL METER	OFF, ON	If this is "ON," an audio level meter is shown on the preview display.	
AUTO SCAN	OFF, ON	Turns the Auto Scan function on/off. If this is "ON," the INPUT 1 and 2 video is switched automatically.	
AUTO SCAN TIME	1-5-120sec	Specifies the video display interval when the Auto Scan function is on.	
AUTO INPUT DETECT	OFF, ON	Turns the auto input detect function on/off. If this is "ON," and the video that is being output as the program disappears, the program automatically switches to the other input video.	
AUTO OFF	OFF, ON	Turns the Auto Off function on/off. If this is "ON," the power to the V-02HD turns off automatically when all of the following states persist for 240 minutes. <ul style="list-style-type: none"> No operation performed on the V-02HD No audio or video input No equipment is connected to the PROGRAM OUT/PREVIEW OUT connectors 	
TEST PATTERN	OFF , 75% COLOR BAR, 100% COLOR BAR, RAMP, STEP, HATCH	Specifies the test pattern.	
TEST TONE	OFF , -20dB@1kHz, -10dB@1kHz, 0dB@1kHz	Specifies the test tone.	
VIDEO FADER CALIBRATE	(ENTER)	Displays the VIDEO FADER SET screen. Following the instructions on the screen, calibrate (adjust) the video fader. In some cases, because of continued use or transport, the video output might not reach 100% even if you slide the video fader all the way to the left or right. Execute video fader calibration in this case as well.	
FACTORY RESET	(EXEC)	Returns the unit to its factory defaults.	
VERSION	—	Displays the version of the system program.	

Appendices


Troubleshooting

If you suspect a malfunction, please check the following points. If this does not resolve the problem, contact a nearby Roland Service Center.


Problem	Items to check	Action	Page
Video-related problems			
No picture is input.	Could you be inputting copy-protected (HDCP) video?	If you want to input copy-protected (HDCP) video, set the System menu "HDCP" setting to "ON."	p. 11
Video input from a computer is distorted.	If video is being input from a computer, the image can sometimes be skewed, flickering, or otherwise distorted.	This is a phenomenon called "tearing," and is not a malfunction.	—
No video appears	Has the [OUTPUT FADE] knob been turned clockwise or counterclockwise?	With the factory settings, the program output video is faded if the [OUTPUT FADE] knob is turned counter-clockwise. If the knob is turned all the way clockwise, a still image is output. To output video, set the [OUTPUT FADE] knob to the center.	p. 19 p. 21
	Does the output destination display support copy protection (HDCP)?	If you are outputting copy-protected (HDCP) video, and a display that does not support HDCP is connected, the video might not be shown or might be incorrect. Connect a display that supports HDCP.	p. 11
	Does the output destination display support the output format that is specified on the V-02HD?	If the display does not support the V-02HD's output format, the video might not be shown correctly. Change the output format in VIDEO OUTPUT menu → "SCALING" → "FORMAT." If the menu is no longer shown... If the menu is no longer shown in the display, use the following procedure to restart the V-02HD. This returns the output format to "1080p" (default value). 1. Turn off the power. 2. While holding down the [1] button and the [2] button, turn on the power.	p. 8
"Snowy"-noise video is shown.	It might be that the HDMI signal is not being correctly transmitted or received.	Reconnect the HDMI cable.	—
Color is wrong.	Do the color space settings of the output-destination device and the V-02HD match?	Change the color space in VIDEO OUTPUT menu → "PROGRAM OUT," "PREVIEW OUT" → "COLOR SPACE."	p. 9
		Depending on the device, the color space might be linked with the DVI/HDMI selection or the selection of format. If so, changing the color space of the output-destination device might solve the problem.	—
An edge of the video shown on a display is cut off.	Are the display's settings correct?	Depending on the display, it might overscan automatically. Change the settings of the device.	—
Compositing a logo or video is not possible.	When using key compositing, is the key type (luminance key, chroma key) selected correctly?	Use the KEY menu setting "KEY TYPE" to select either luminance key (black, white) or chroma key.	p. 14 p. 16
		If chroma key is selected, use the KEY menu setting "COLOR" or "SAMPLING MARKER" to specify the color that is removed. Use the [CONTROL 1] [CONTROL 2] knobs to adjust the right amount of cutout for the logo or video.	
The video does not switch completely when you operate the video fader.	Depending on how long the V-02HD has been used, or on how it has been transported, the video might no longer switch completely.	Select the SYSTEM menu item "VIDEO FADER CALIBRATE," and follow the on-screen directions to calibrate (adjust) the video fader.	—
Audio-related Problems			
No audio is output. Audio volume is low.	Is the volume turned down on the V-02HD?	Adjust each input to the appropriate volume. Also raise the output volume. • Use AUDIO INPUT menu → "INPUT 1," "INPUT 2," "AUDIO IN" → "INPUT LEVEL" to adjust each input volume. • Use AUDIO OUTPUT menu → "OUTPUT LEVEL" to adjust the output volume.	p. 22
	Could the audio be muted?	Defeat mute (silence) for the input/output audio. • In AUDIO INPUT menu → "INPUT 1," "INPUT 2," "AUDIO IN" → "set INPUT MUTE" to "OFF." • In AUDIO OUTPUT menu → set "OUTPUT MUTE" to "OFF."	p. 24
Other Problems			
Buttons and knobs cannot be operated.	Could panel lock be enabled?	If the panel lock function which temporarily locks panel operations is enabled, the buttons and knobs will be inoperable. In SYSTEM menu → "PANEL LOCK" → PANEL LOCK menu, turn the button or knob lock "OFF" (disabled).	p. 29



Block Diagram

Video block

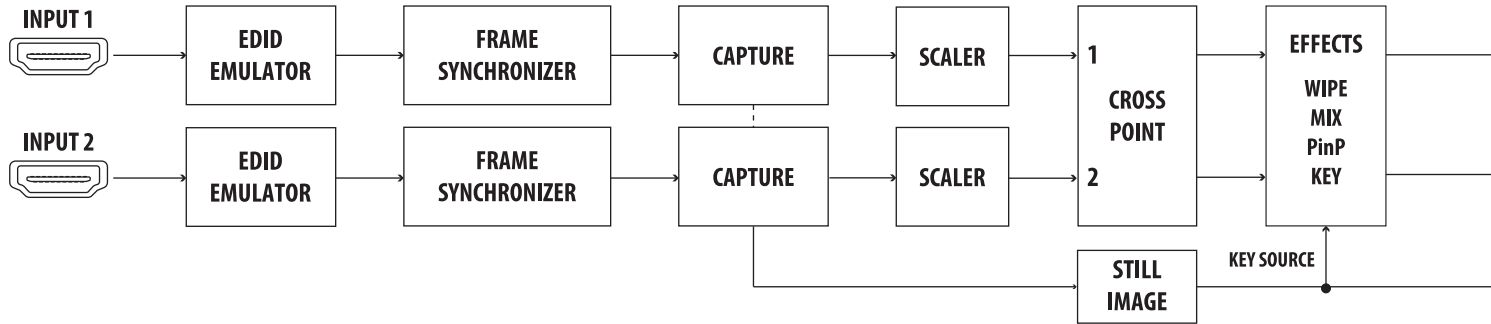

Audio block

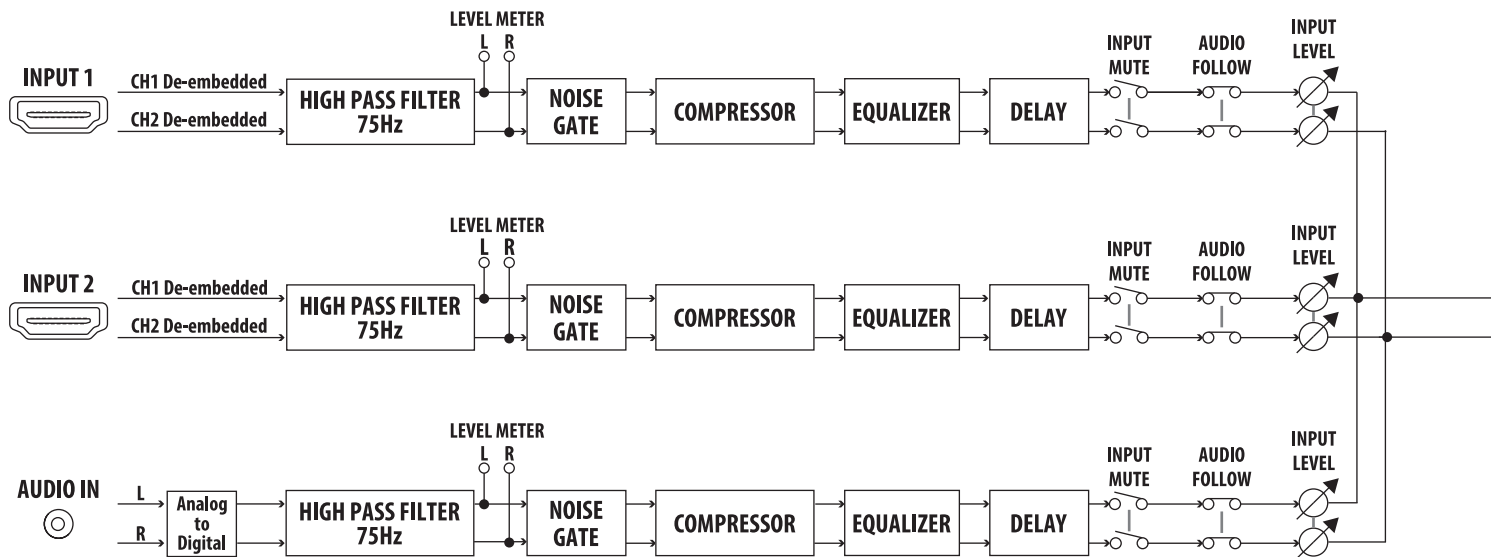

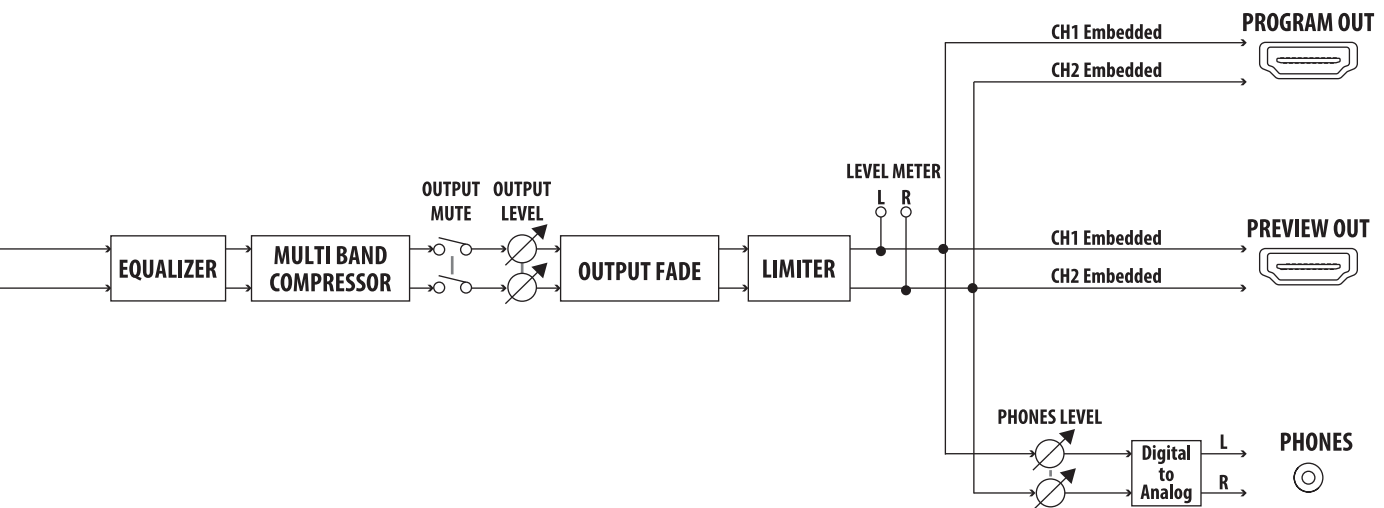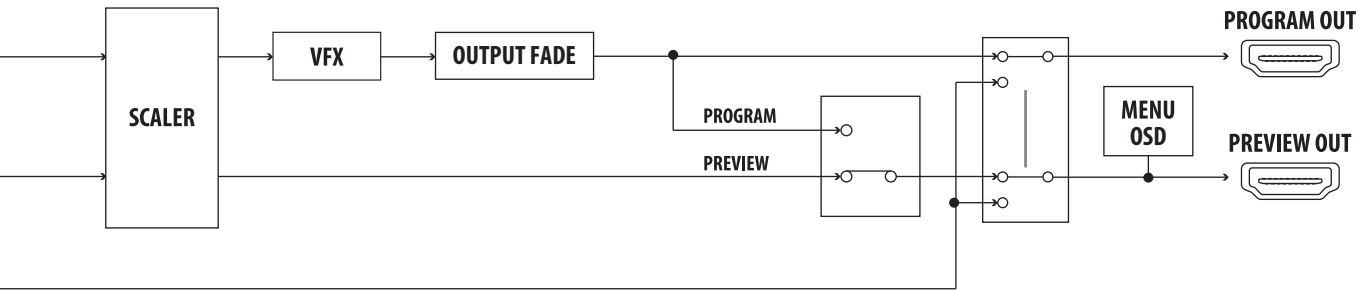

Main Specifications


Roland V-02HD: Multi-format Video Mixer

■ Video		
Video Processing	4:4:4 (Y/Pb/Pr), 10-bit	
Input Connectors	INPUT 1–2	HDMI type A x 2 * HDCP Supported * Multi-format Supported
Output Connectors	PROGRAM OUT	HDMI type A * HDCP Supported
	PREVIEW OUT	* Multi-format Supported
Input Formats	480/59.94i, 576/50i, 480/59.94p, 576/50p, 720/59.94p, 720/50p, 1080/59.94i, 1080/50i, 1080/59.94p, 1080/50p VGA (640 x 480/60 Hz), SVGA (800 x 600/60 Hz), XGA (1024 x 768/60 Hz), WXGA (1280 x 800/60 Hz), FWXGA (1366 x 768/60 Hz) SXGA (1280 x 1024/60 Hz), SXGA+ (1400 x 1050/60 Hz), UXGA (1600 x 1200/60 Hz), WUXGA (1920 x 1200/60 Hz) * The refresh rate is the maximum value of each resolution. * Conforms to CEA-861-E, VESA DMT Version 1.0 Revision 11. * 1920 x 1200/60 Hz: Reduced blanking * The video signal frame rate can be selected at the SYSTEM menu (59.94 Hz or 50 Hz).	
Output Formats	480/59.94p, 576/50p, 720/59.94p, 720/50p, 1080/59.94i, 1080/50i, 1080/59.94p, 1080/50p SVGA (800 x 600/60 Hz), XGA (1024 x 768/60 Hz), WXGA (1280 x 800/60 Hz), FWXGA (1366 x 768/60 Hz), SXGA (1280 x 1024/60 Hz) SXGA+ (1400 x 1050/60 Hz), UXGA (1600 x 1200/60 Hz), WUXGA (1920 x 1200/60 Hz) * Conforms to VESA DMT Version 1.0 Revision 11. * The output refresh rates of 800 x 600–1400 x 1050 are 75 Hz when the unit's frame rate setting is 50 Hz. * 1920 x 1200/60 Hz: Reduced blanking	
Video Effects	Transition	CUT, MIX (DISSOLVE), WIPE (9 types)
	Composition	PinP (SQUARE, CIRCLE, DIAMOND), KEY (Luminance Key, Chroma Key)
	Visual Effects (14 types)	MOSAIC, WAVE, RGB REPLACE, COLORPASS, NEGATIVE, COLORIZE, POSTERIZE, SILHOUETTE, EMBOSS FIND EDGES, MONOCOLOR, HUE OFFSET, SATURATION OFFSET, VALUE OFFSET
	Others	Flip horizontal, Flip vertical, Still Image Capture, Still Image Playback Output fade (Audio, Video: WHITE or BLACK), Test pattern output
■ Audio		
Audio Processing	Sampling rate	24 bits/48 kHz
Audio Formats	Linear PCM, 24 bits/48 kHz, 2ch	
Input Connectors	INPUT 1–2	HDMI Type A x 2
	AUDIO IN	Stereo miniature type
Output Connectors	PROGRAM OUT	HDMI type A
	PREVIEW OUT	HDMI type A
	PHONES	Stereo miniature type
Input Level	AUDIO IN	-10 dBu (Maximum: +8 dBu)
Input Impedance	AUDIO IN	45 k ohms
Output Level	PHONES	92 mW + 92 mW (32 ohms)
Output Impedance	PHONES	10 ohms
Audio Effects	Delay, High pass filter, Compressor, Noise gate, Equalizer, Multi-band compressor, Limiter, Test tone output	
■ Others		
External Connectors	USB	USB B Type (for backup from PC)
	CTL/EXP	1/4-inch TRS phone type
Functions	Preset Memory (8 types), Panel lock function, EDID Emulator, Auto Scan, Auto Input Detect	
Power Supply	AC Adaptor	
Current Draw	1.1 A	
Power Consumption	10.0 W	
Operation Temperature	+0 to +40 degrees Celsius +32 to +104 degrees Fahrenheit	
Dimensions	160 (W) x 108 (D) x 51 (H) mm 6-5/16 (W) x 4-1/4 (D) x 2-1/16 (H) inches	
Weight (excluding AC adaptor)	0.6 kg 1 lbs 6 oz	
Accessories	Startup Guide, AC adaptor, Power cord, Cord hook	
Options (sold separately)	Footswitch	BOSS FS-5U, FS-6, FS-7
	Expression Pedal	EV-5, BOSS FV-500L, FV-500H



* 0 dBu=0.775 Vrms

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

Dimensions

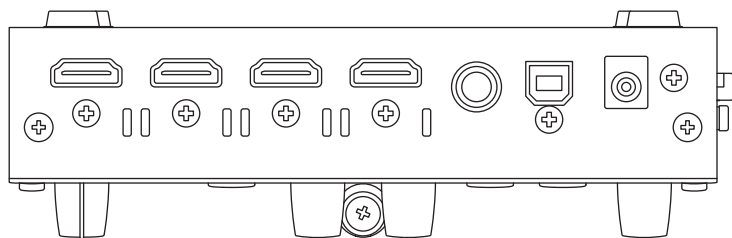

Unit: mm

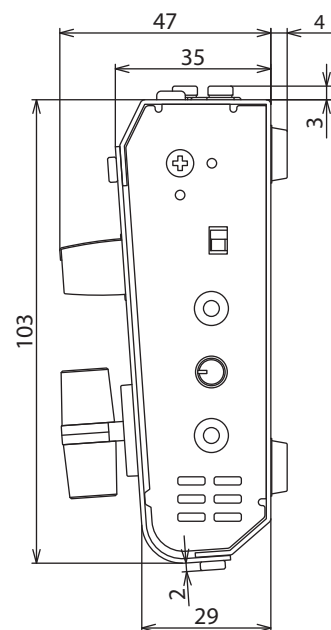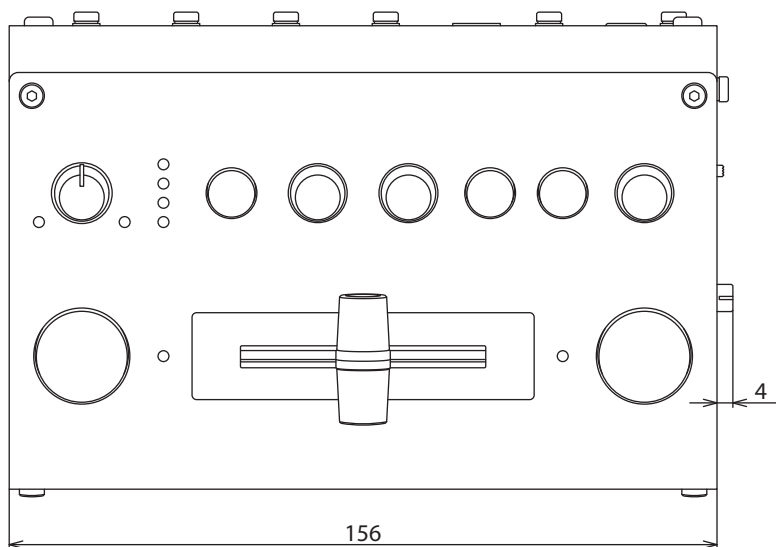



- Roland is an either registered trademark or trademark of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.