

the **box**

Oval 4, Oval 6, Oval 10

passive speaker



user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

04.11.2019, ID: 410109, 410113, 410117, ..., V2

Table of contents

1	General information	4
	1.1 Further information	5
	1.2 Symbols and signal words	6
2	Safety instructions	8
3		
4	Installation	12
	4.1 Wall mounting	13
	4.2 Tips on handling speakers	
5	Technical specifications	15
	5.1 Oval 4 (item no. 410109, 410111, 410112)	15
	5.2 Oval 6 (item no. 410113, 410115, 410116)	
	5.3 Oval 10 (item no. 410117, 410118)	20
6	Protecting the environment	22



1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under <u>www.thomann.de</u>.



1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

Oval 4, Oval 6, Oval 10



1.2 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.



Warning signs	Type of danger
	Warning – danger zone.

Oval 4, Oval 6, Oval 10



2 Safety instructions

Intended use

This device is designed for sound reinforcement. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

thomann MUSIC IS OUR PASSION



CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.

Oval 4, Oval 6, Oval 10



3 Features

Special features of this passive 2 way speaker:

Oval 4 (item no. 410109, 410111, 410112)

- Speakers: 2 × 1" tweeter, 1 × 4" woofer
- Mounting points: 2 × threaded socket M5
- Terminal connections
- Wall bracket included
- Housing colour: white
- Front grid colour: black (item no. 410109), white (item # 410111), red (item no. 410112)

Oval 6 (item no. 410113, 410115, 410116)

- Speakers: 2 × 3" tweeter, 1 × 6" woofer
- Mounting points: 3 × threaded socket M8
- Terminal connections
- Wall bracket included
- Housing colour: white
- Front grid colour: black (item no. 410115), white (item no. 410116), red (item no. 410113)

th • mann

Oval 10 (item no. 410117, 410118)

- Speakers: 2 × 4" tweeter, 1 × 10" woofer
- Mounting points: 3 × threaded socket M8
- Terminal connections
- Wall bracket included
- Housing colour: white
- Front grid colour: black (item no. 410118), white (item # 410117)

4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.




Possible property damage by magnetic fields


Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

th•mann MUSIC IS OUR PASSION

4.1 Wall mounting

The following figure shows how the supplied wall bracket can be used.

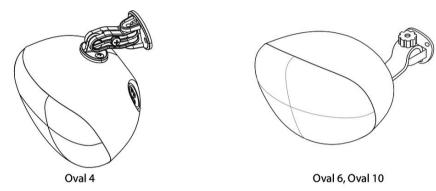

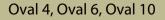



4.2 Tips on handling speakers

We recommend you to set up the speakers in a way, that the sound signals can reach the audience unobstructedly. It will often be helpful to mount the speakers on tripods. Thus, the sound will be evenly spread with maximum range throughout the audience area.

Always use high grade cable to connect your equipment. Otherwise you won't reach maximum sound quality.

For optimum results both impedance and power handling of the speakers must match the requirements of the amplifier. Always follow the technical specifications of the speakers! The overall impedance of the connected loudspeakers must not deceed the minimum output impedance of the amp. The amps max. RMS output power should be 50 % above the power handling capacity of the connected speakers.

If you notice distortion during operation, either the amp or the speaker is overloaded. This may permanently damage the amp or the speaker. Always reduce the volume when you hear distortion.

thomann MUSIC IS OUR PASSION

5 Technical specifications

5.1 Oval 4 (item no. 410109, 410111, 410112)







Speaker	2×1 " tweeter
	1 × 4" woofer
Power handling	25 W (RMS), 50 W (Music), 100 W (Peak)
Impedance	8 Ω
Sensitivity	88 dB (1 W @ 1 m)
Maximum sound pressure level	102 dB (1 m)
	108 dB (peak)
Frequency range (–3 dB)	120 Hz 20 kHz (–3 dB)
Crossover frequency	6,3 kHz
Dispersion angle $(H \times V)$	90° × 90°

Oval 4, Oval 6, Oval 10




Dimensions ($W \times H \times D$)	238Mm mm \times 135 mm \times 142 mm
Weight	2.02 kg




Frequency response

The following figure shows the sound pressure level (1) and impedance (2) as a function of the signal frequency.

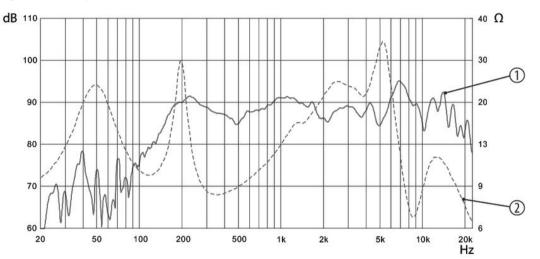

5.2 Oval 6 (item no. 410113, 410115, 410116)

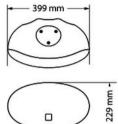




Speaker	2×3 " tweeter
	1 × 6" woofer
Power handling	80 W (RMS), 160 W (Music), 320 W (Peak)
Impedance	8 Ω
Sensitivity	88 dB (1 W @ 1 m)
Maximum sound pressure level	107 dB (1 m)
	113 dB (peak)
Frequency range (–3 dB)	80 Hz 16 kHz (–3 dB)
Crossover frequency	2,5 kHz
Dispersion angle $(H \times V)$	140° × 160°
Dimensions ($W \times H \times D$)	399 mm × 229 mm × 241 mm
Weight	4.65 kg


passive speaker


Frequency response

The following figure shows the sound pressure level (1) and impedance (2) as a function of the signal frequency.

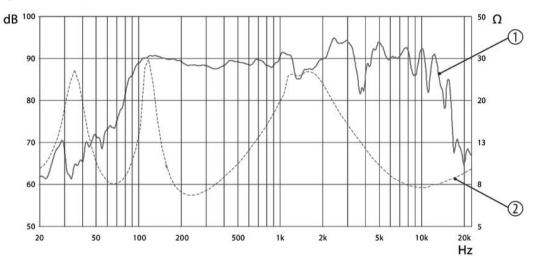

5.3 Oval 10 (item no. 410117, 410118)

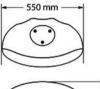

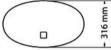




Speaker	2×4 " tweeter
	1 × 10" woofer
Power handling	150 W (RMS), 300 W (Music), 600 W (Peak)
Impedance	8 Ω
Sensitivity	90 dB (1 W @ 1 m)
Maximum sound pressure level	111 dB (1 m)
	118 dB (peak)
Frequency range (–3 dB)	45 Hz 22 kHz (–3 dB)
Crossover frequency	1,2 kHz
Dispersion angle ($H \times V$)	120° × 120°
Dimensions (W \times H \times D)	550 mm × 336 mm × 316 mm
Weight	9.05 kg

passive speaker

Frequency response

The following figure shows the sound pressure level (1) and impedance (2) as a function of the signal frequency.

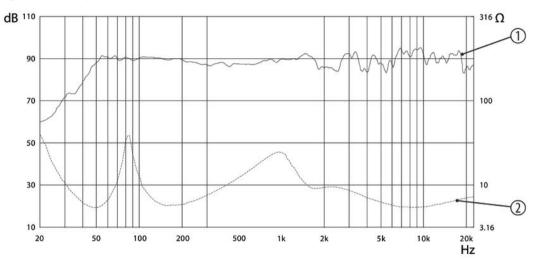



6 Protecting the environment

Disposal of the packaging material



Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

passive speaker

UISIC IS OUR PASSION

Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de